



ALTO

ASSEMBLY INSTRUCTIONS

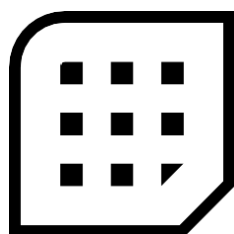

**modular
closets.**

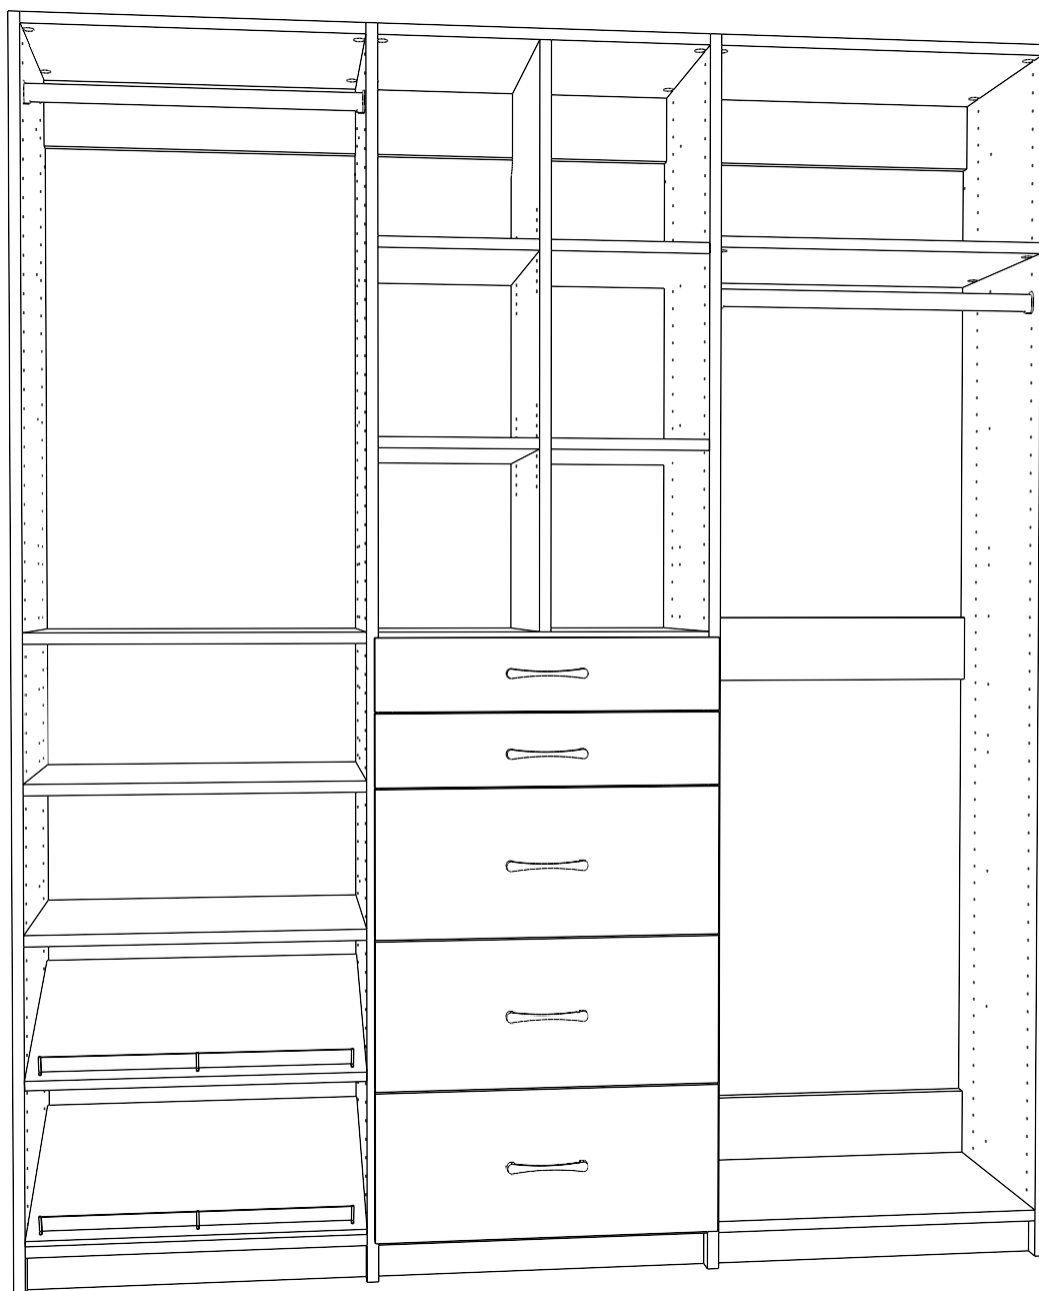

Congratulations on your purchase!

Thank you for choosing Modular Closets and our Alto closet system!

We are committed to providing you with a seamless and efficient storage solution that enhances the organization and functionality of your space. Before you embark on assembling your new Alto closet system, we want to emphasize a crucial step to ensure a smooth and successful installation.

Important: Understanding Your Components

Before you begin the assembly process, it is essential to familiarize yourself with the components provided in your package. Our Alto closet system includes various boxes containing different parts designated for specific towers. Properly identifying and organizing these components will prevent confusion and streamline the installation.

What You Need to Do


1. **Inventory Check:** Begin by unpacking all the boxes and verifying the contents against the parts list provided. Ensure that you have all the necessary components and hardware.
2. **Label and Sort:** Carefully read the labels on each box and sort the components according to the designated towers. This step is critical as it will help you avoid mixing parts that belong to different sections of the closet system.
3. **Check Sizes:** Verify the sizes of the components against the measurements specified in your design PDF. Ensuring that each part matches the intended dimensions is crucial for a proper fit and installation.
4. **Read the Instructions:** Thoroughly read through the entire instruction manual before starting the assembly. Understanding the overall process and the sequence of steps will save you time and effort.

By taking the time to carefully organize, understand your components, and reference your design PDF, you set the stage for a successful and stress-free installation. We are confident that with a little preparation, you will find the assembly process straightforward and rewarding.

Thank you for your attention to these important details.

Now, let's get started on transforming your space with your new Alto closet system from Modular Closets!

The base units will be built and installed first in the following steps, and on page 55 starts the interior components assembly

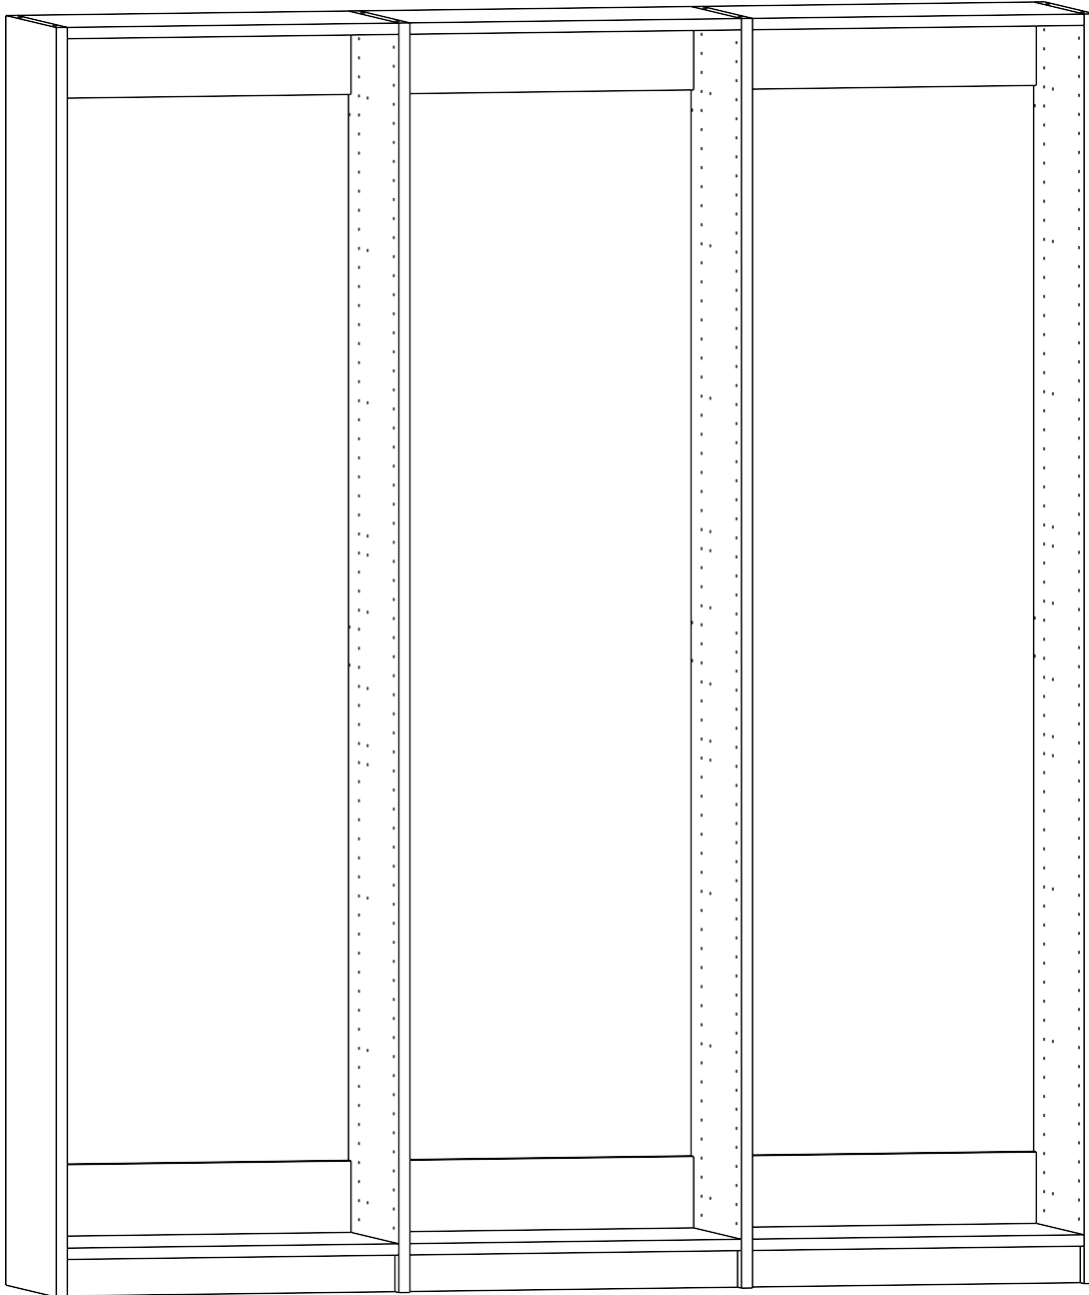





Boxes Needed

ALT-SP Alto Side Panel Pack

There are no Right and Left as each panel is built to be able to go on either side.

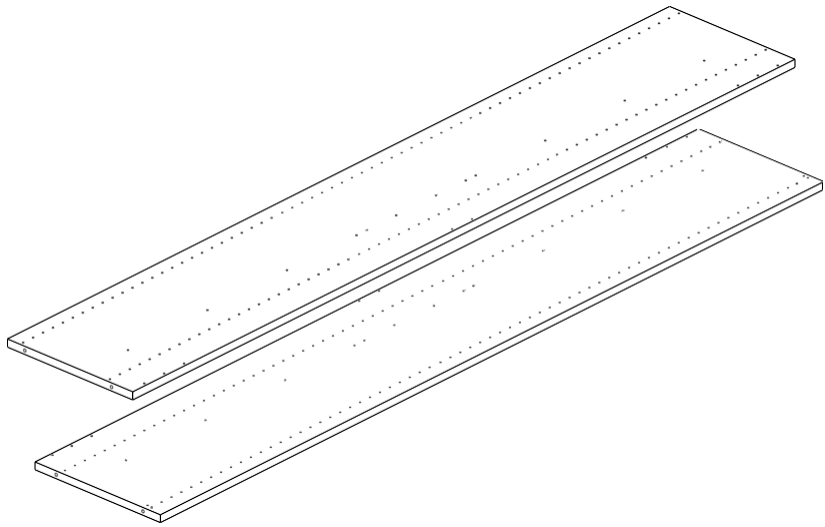


ALT-FS Alto Fixed Shelf Pack

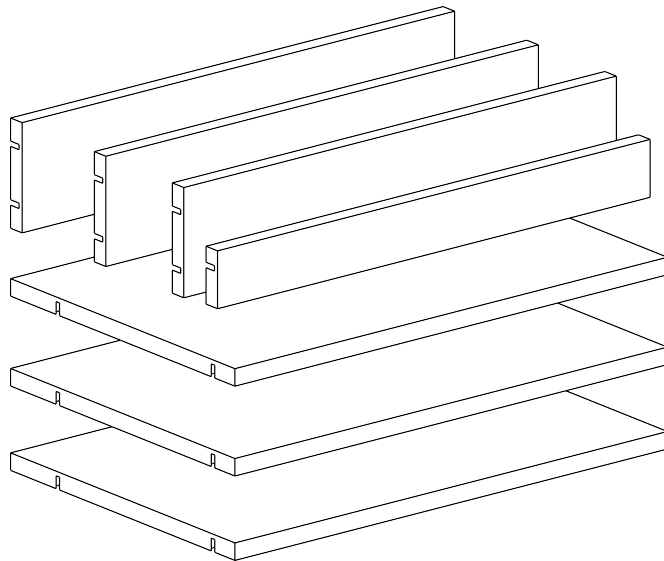

For combined units




ALT-CP Alto Center Panel (1 or 2 Pack)

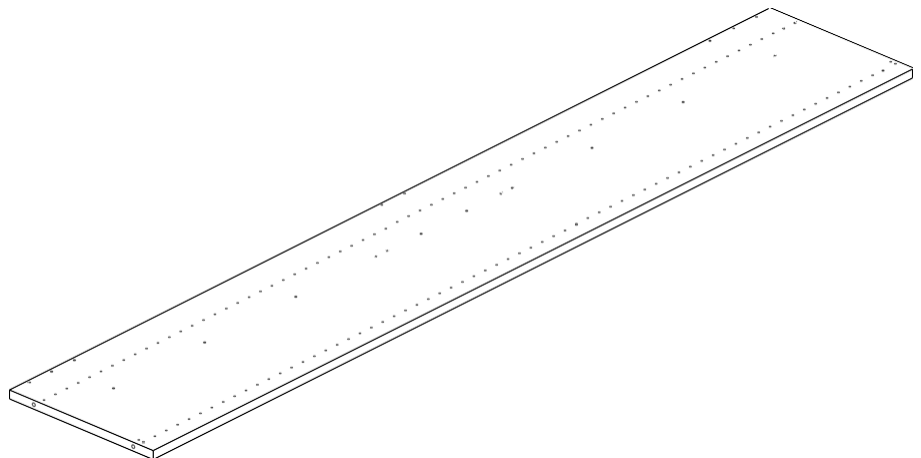


Hardware Packs Needed
ALT-HRDP-FS

rafix
x12

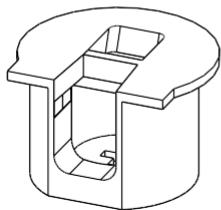


with locking mechanism


wedgefix
x14

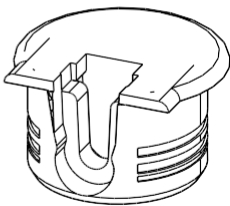


screw dowel
x26




shelf pin
x2

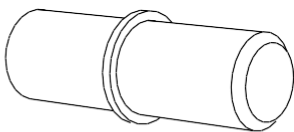

anchor screws
x4

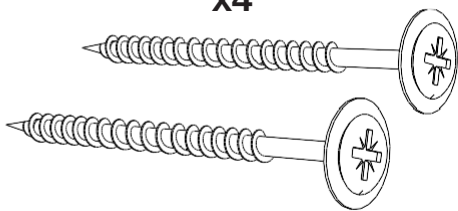

leveling wedge

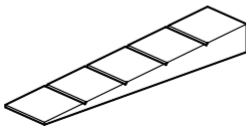


Tools needed

Rubber mallet



Drill

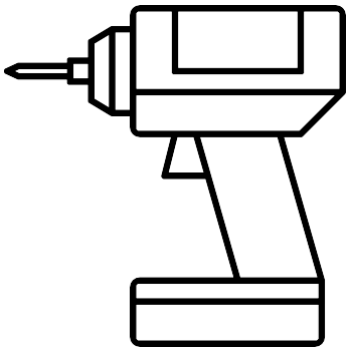

Level



Philips
screw
driver



Stud finder







2 person assembly suggested



Step 1

From Box ALT-FS take 2 shelves and the toe kick and insert the rafixes as shown below.


rafix
x10

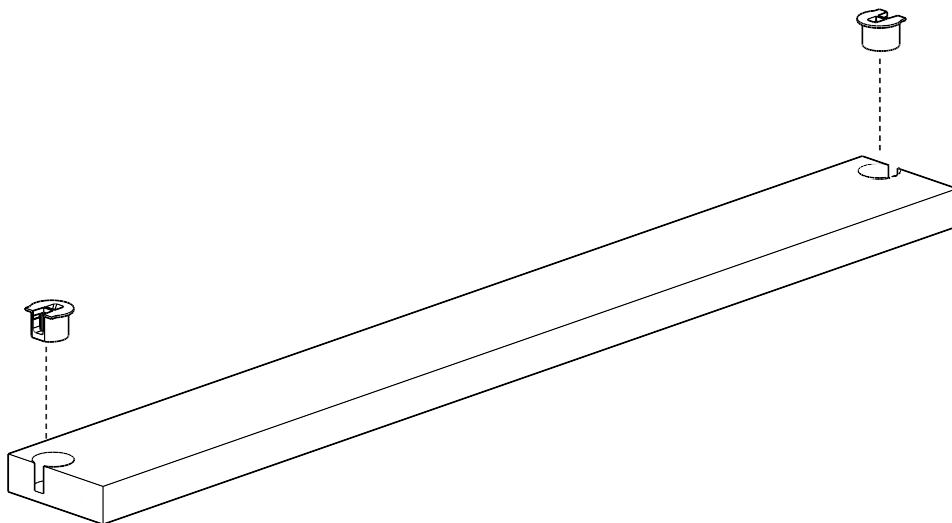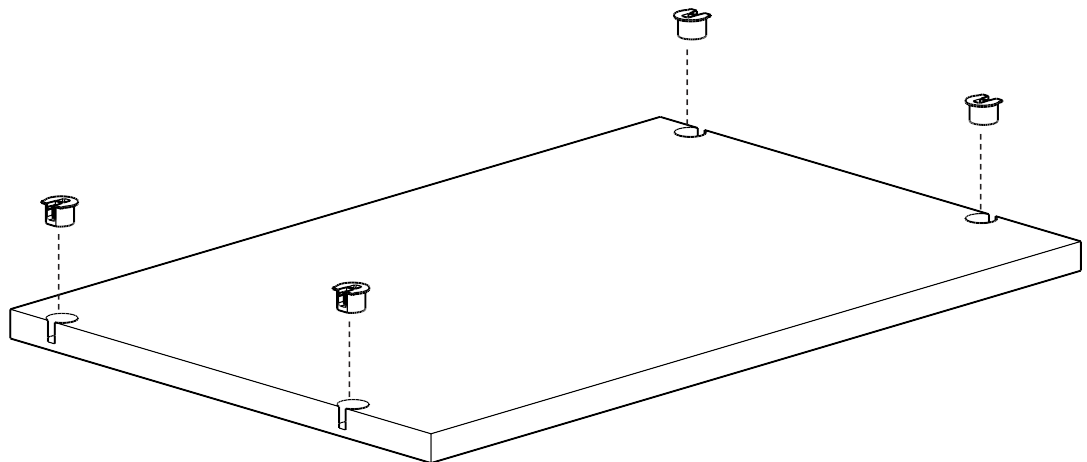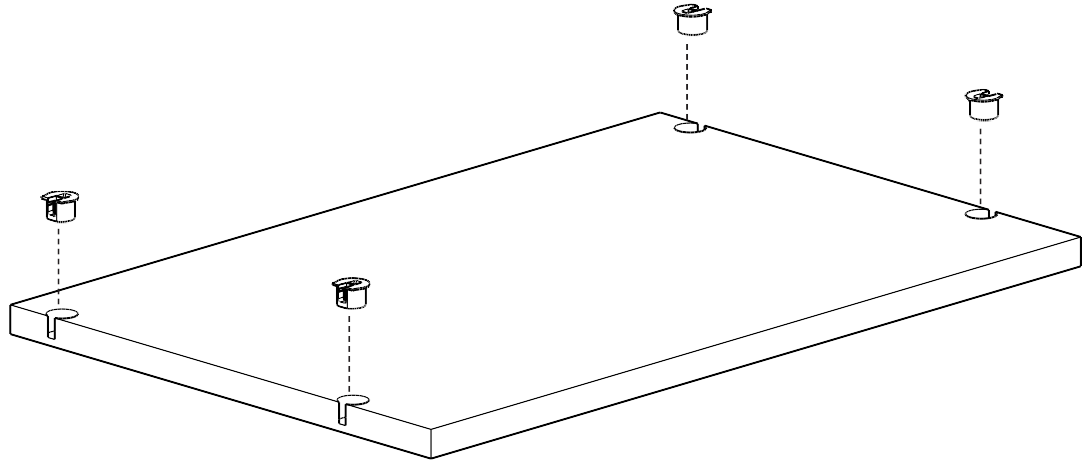



Step 2

For the 3rd fixed shelf, insert 2 rafixes in the holes closer to the unfinished edge, and 2 wedgefixes in the holes closer to the finished edge.

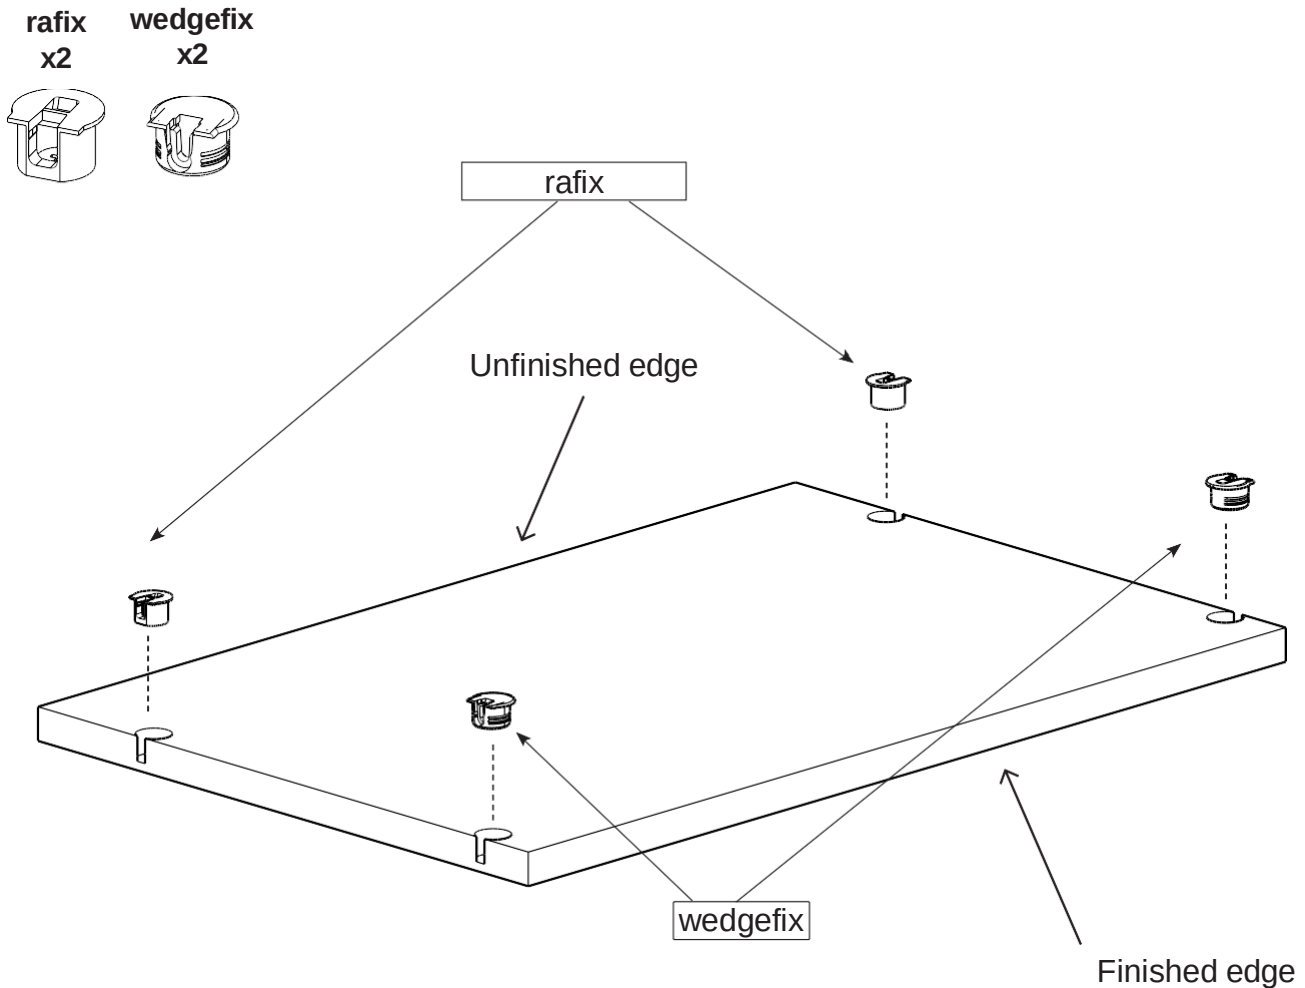


This will be used as the bottom fixed shelf





Step 3

Insert wedgefixes into 2 (or for tall hanging, 3) cleats.

wedgefix
x12

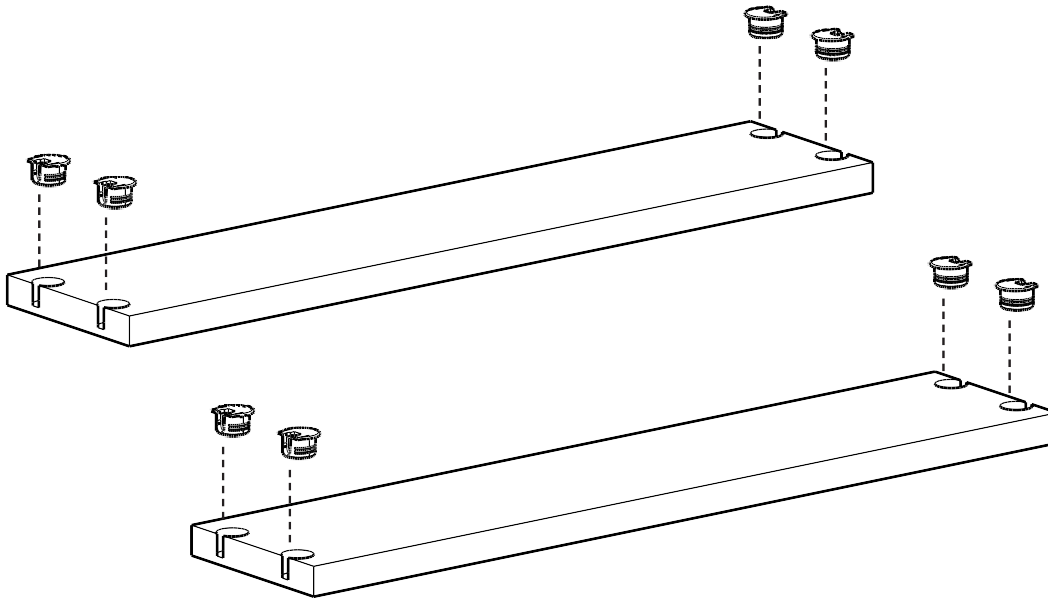


The third cleat will only be used in a tall hanging configuration

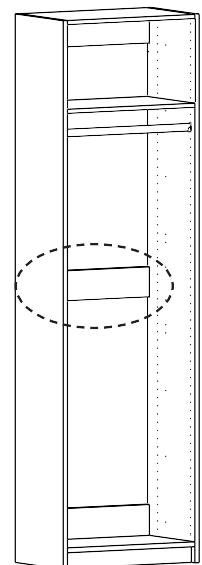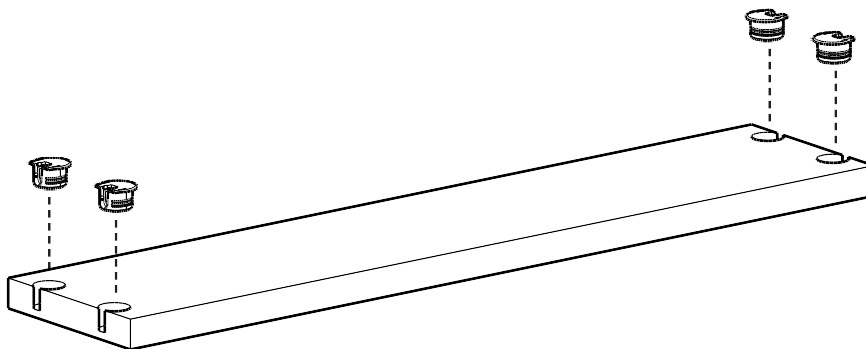

Repeat the above 3 steps for all the fixed shelf packs

Step 4


Next, open the side panel pack ALT-SP and insert the screws on the first panel as shown below.

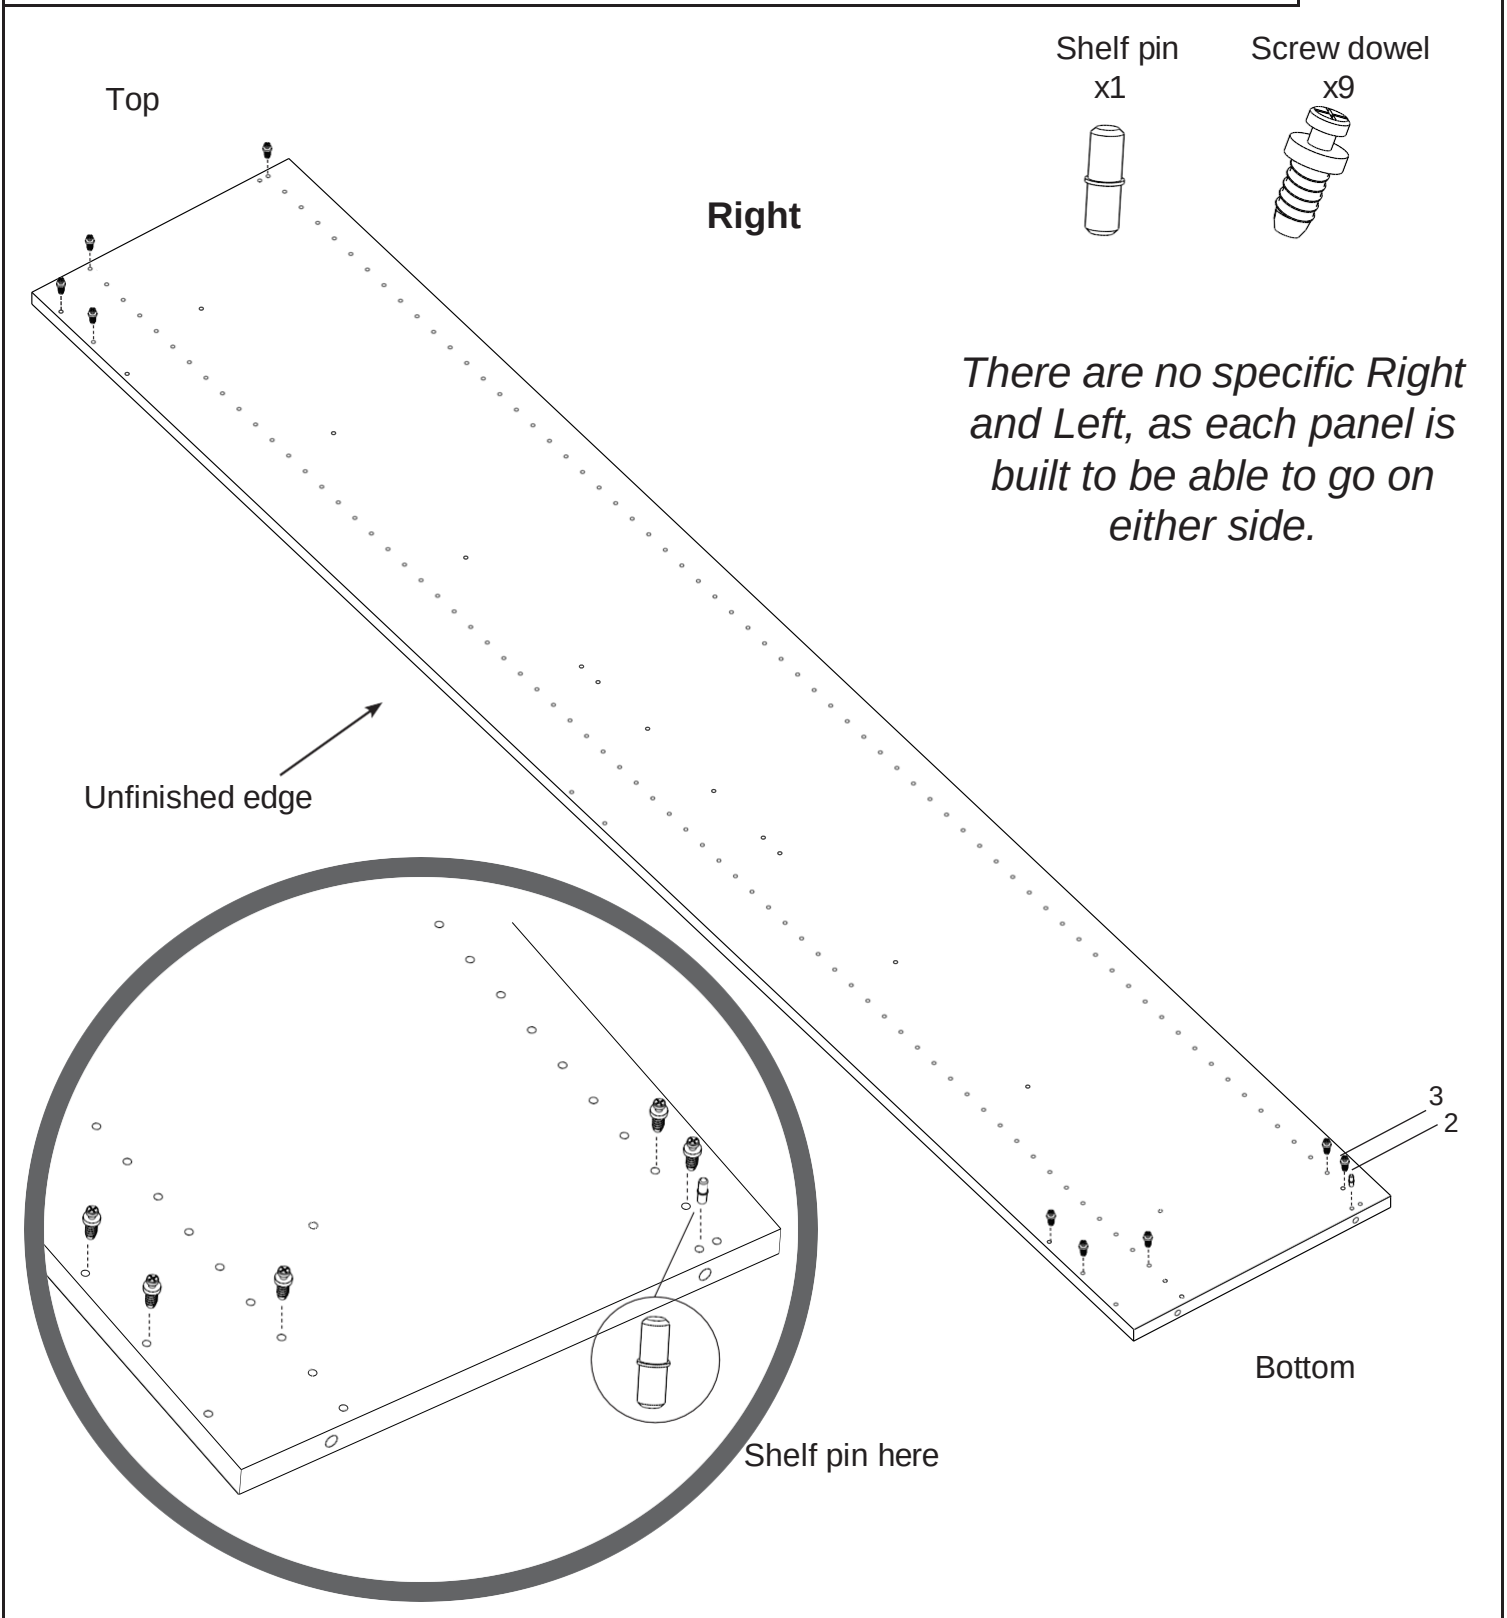



Step 5

Insert the screws into the second panel as shown below.

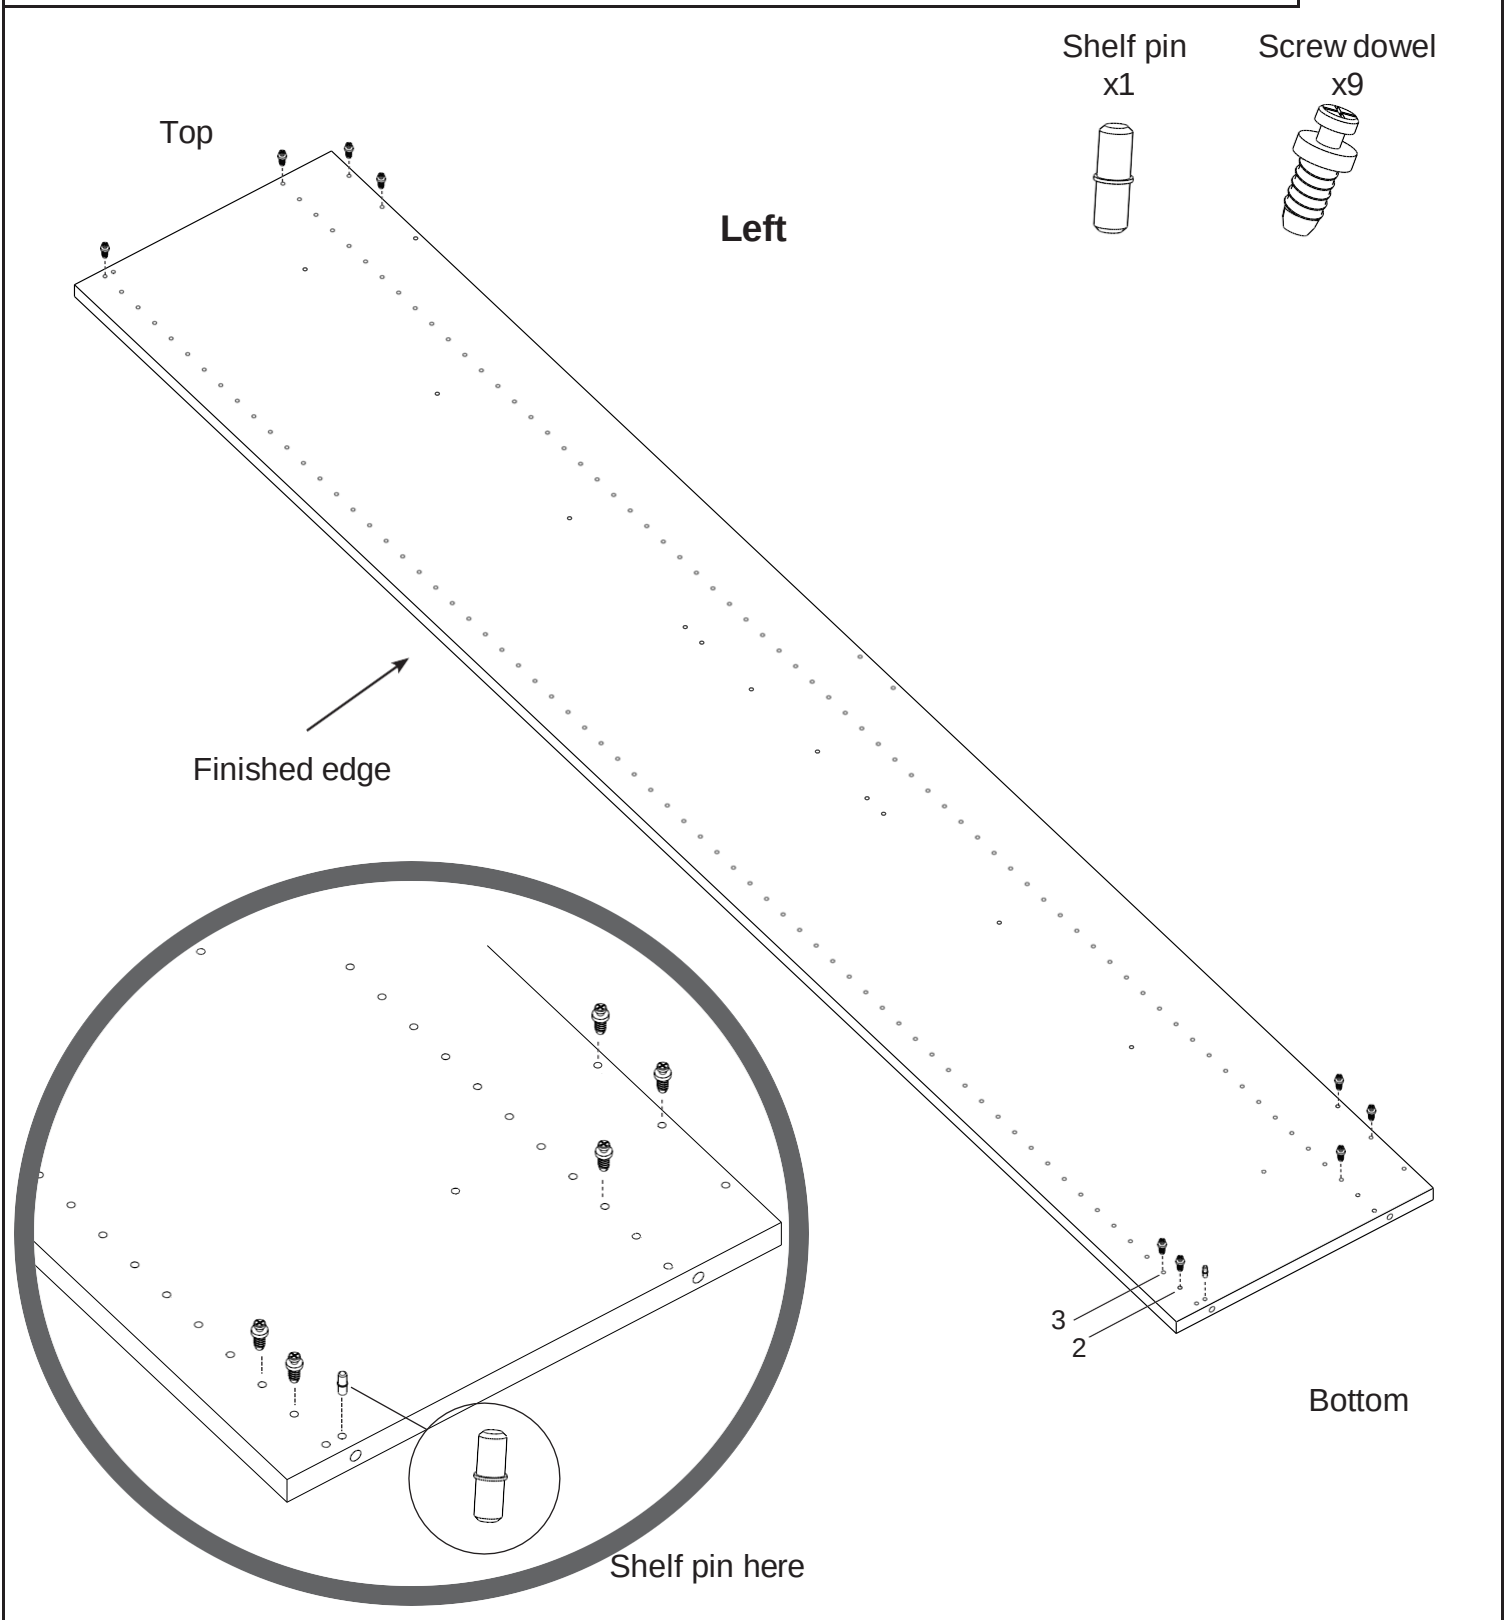



Step 6


If using Center Panels:

From box ALT-CP take the side panel and insert screw dowel as shown in step 4. Then flip it over, and insert dowels as shown in step 5.

Shelf pin
x2




Screw dowel
x18

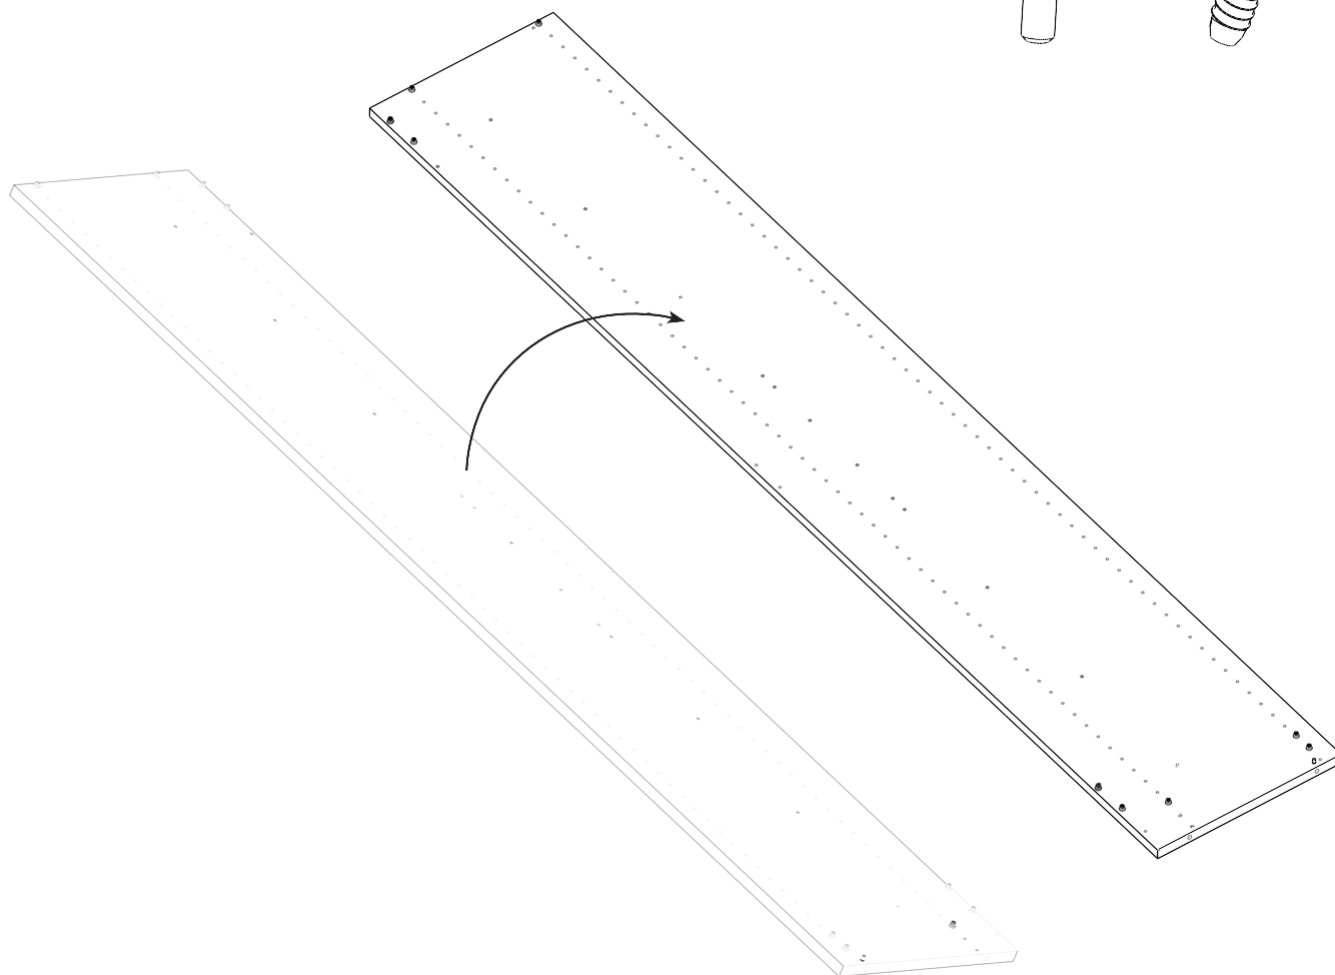




Step 7

Line up the panels along the wall in the order that the panels will be installed. Side panels will be on each end with center panels in the middle. Set up piles with the fixed shelves and cleats in between the panels, in order to have them on hand during the installation. Ensure that you have the correct sizes in the correct spots.

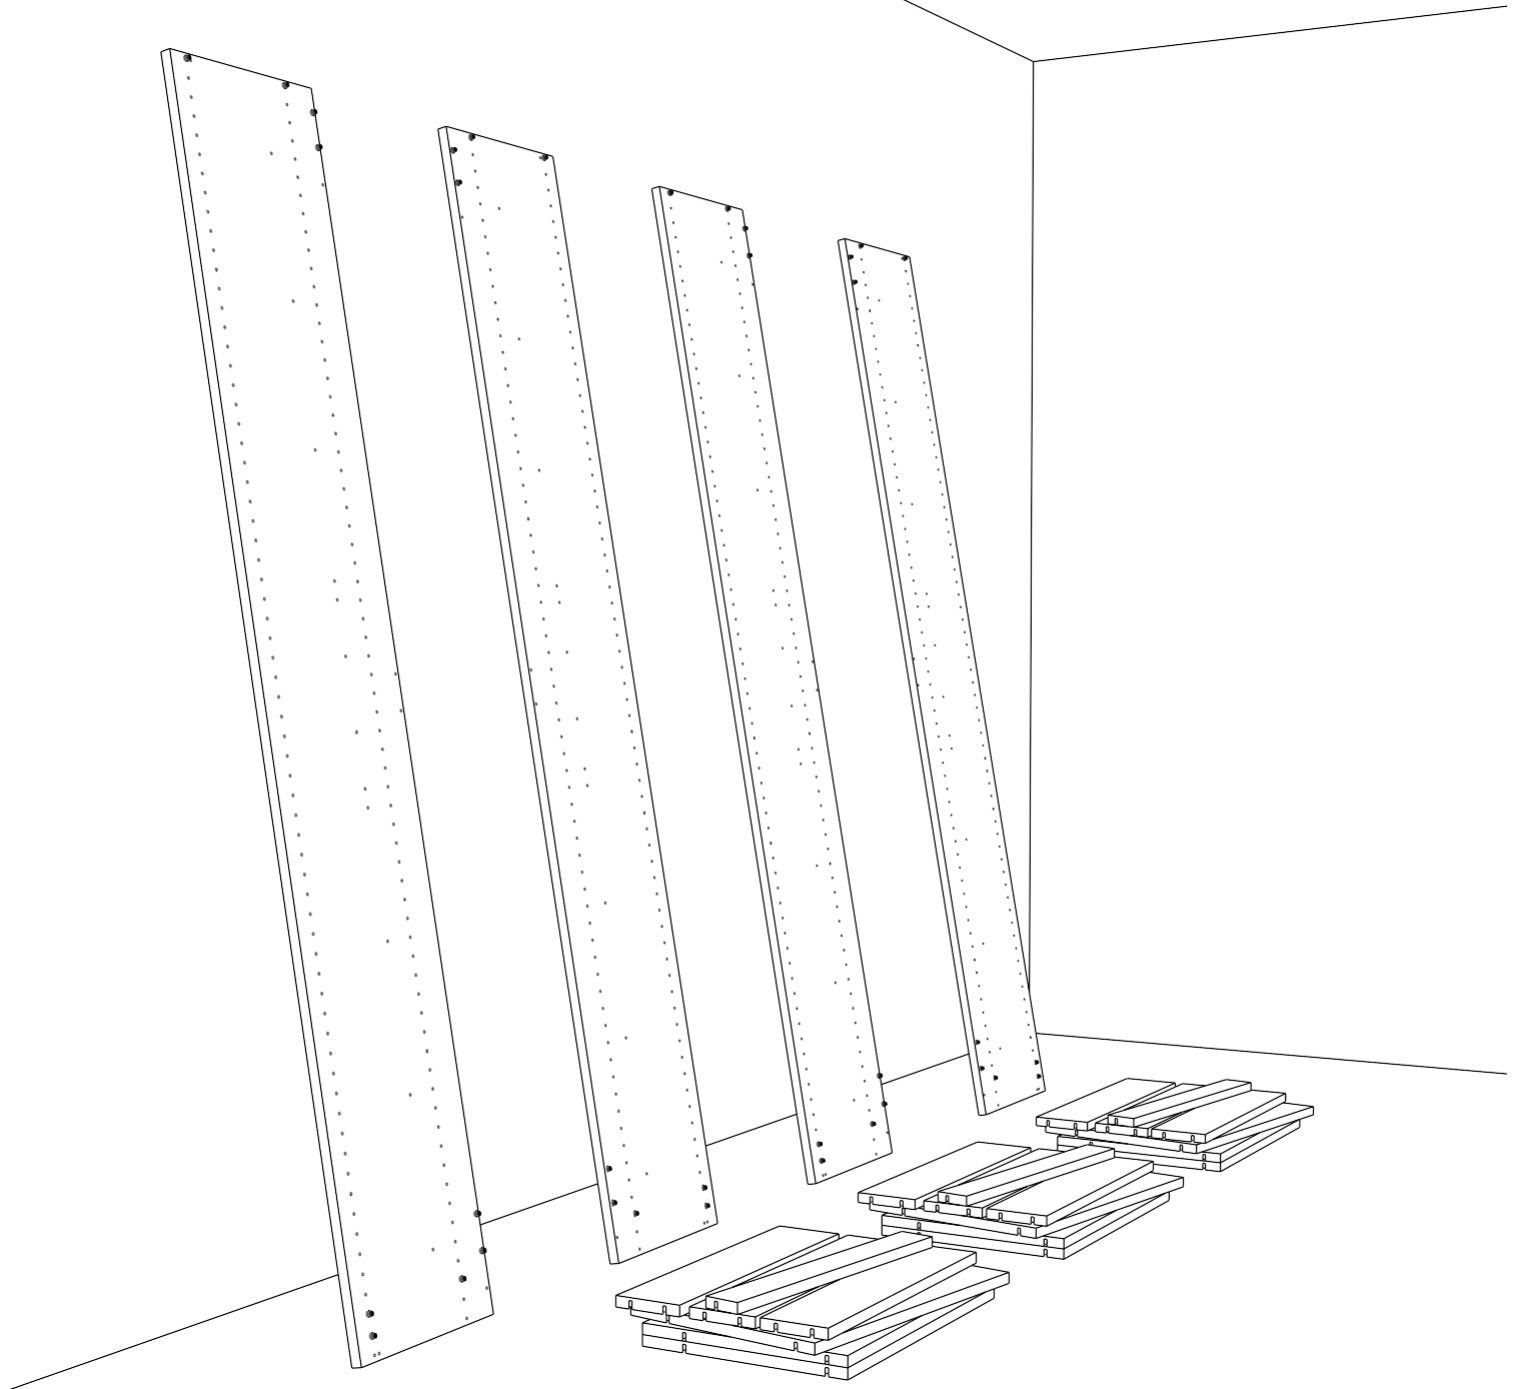

**Step 7b**



Remove the moldings from your space so the closet should be flush against the wall, this can be done with a hammer and flat head screw driver as shown.

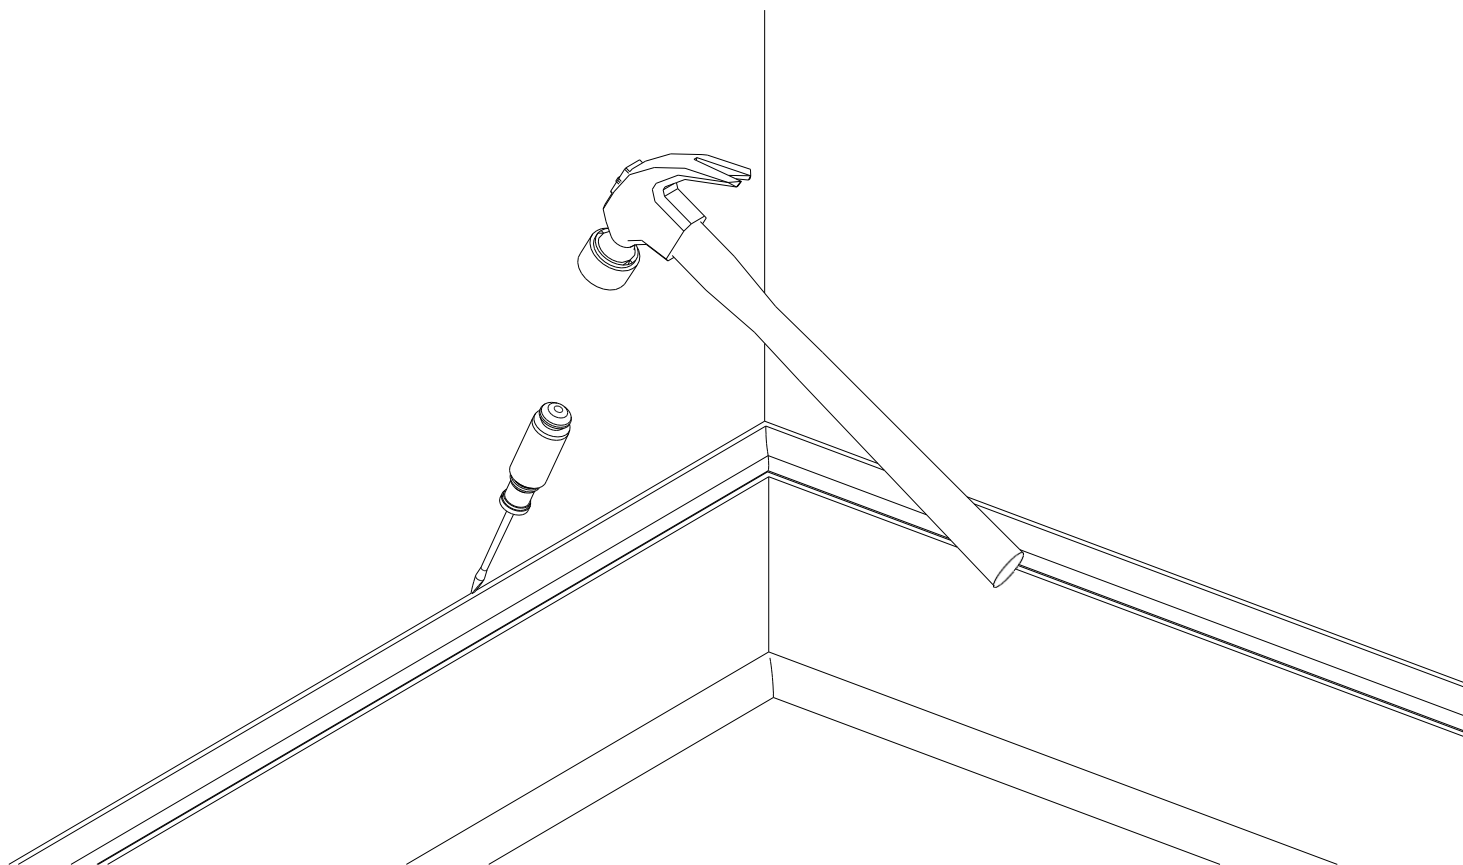





Step 8

Connect the left-most side panel to the adjacent center panel by attaching 1 of the fixed shelves (rafixes only) onto the top of the panels, as shown below. (refer to your closet plan to ensure the correct shelf size)

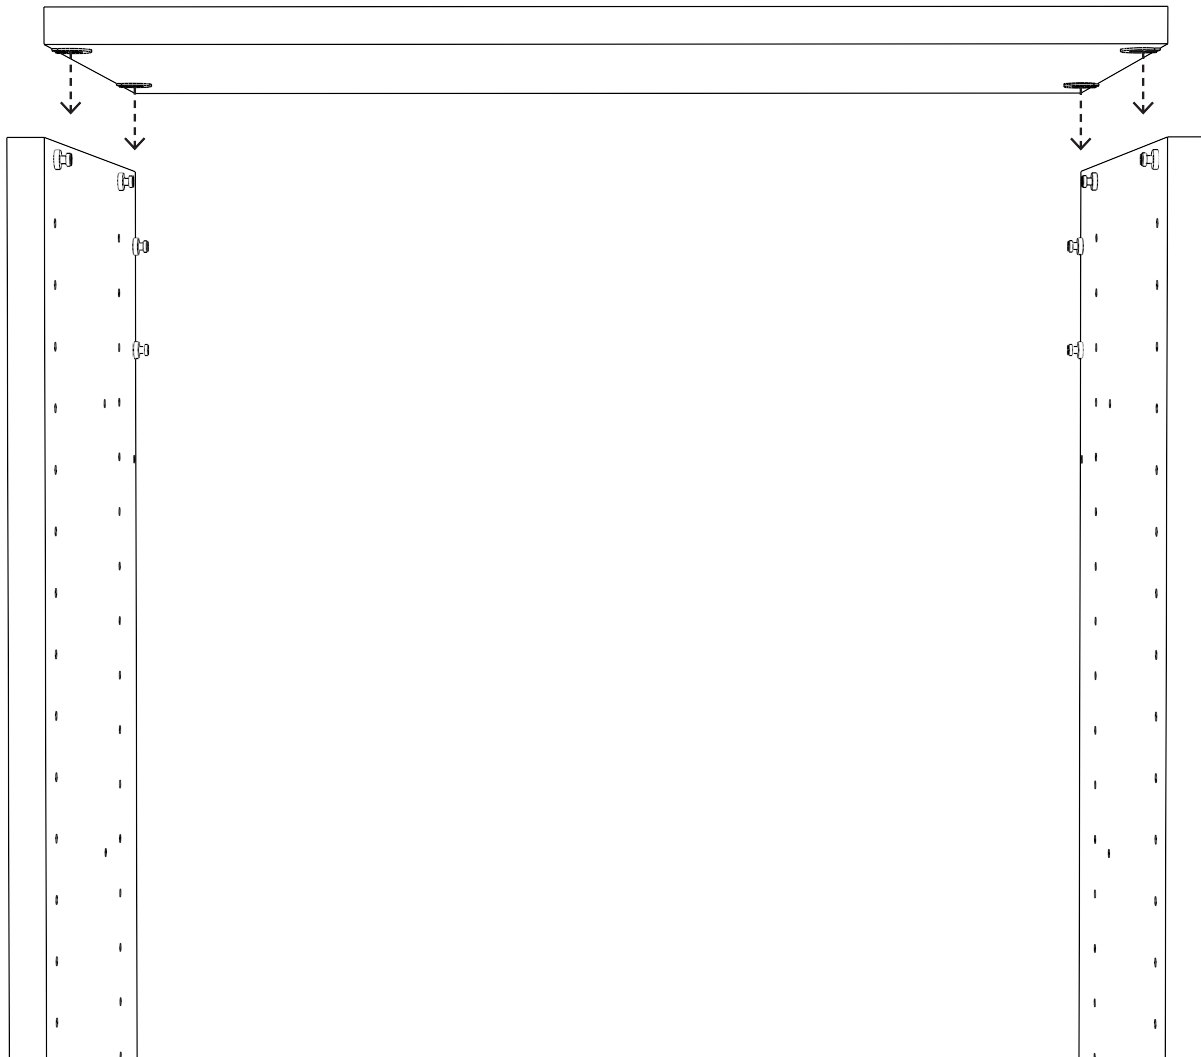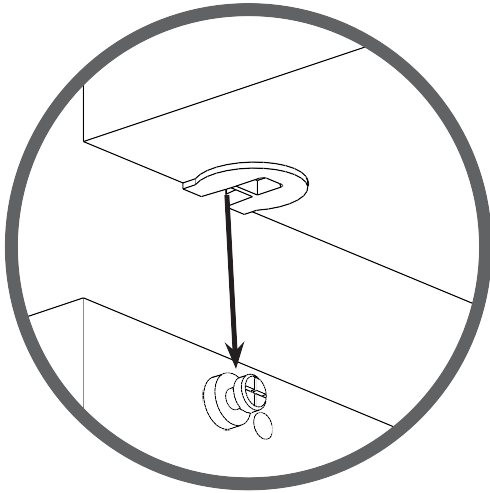

Step 9


Hold steady and connect the cleat to the panels by simply clicking the wedgfixes into the screw dowels on each side.

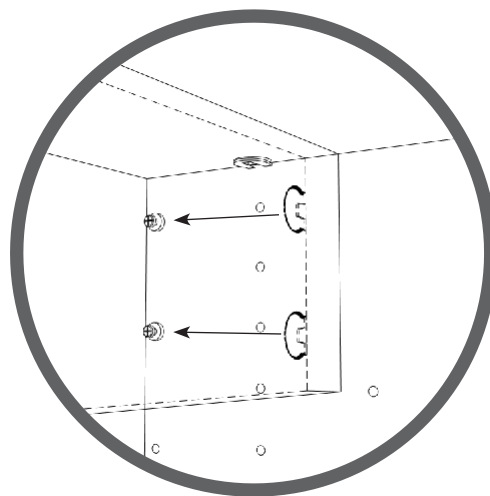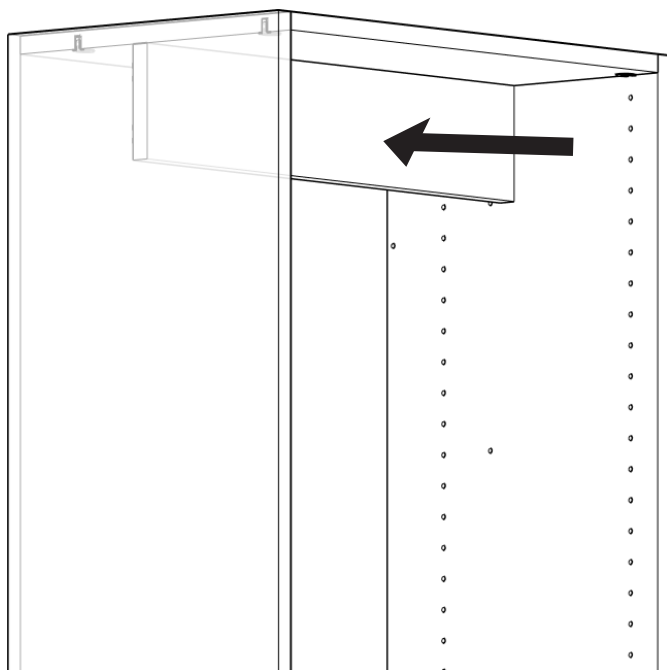




Step 10

Using a Philips screw driver, tighten and secure all 4 rafixes

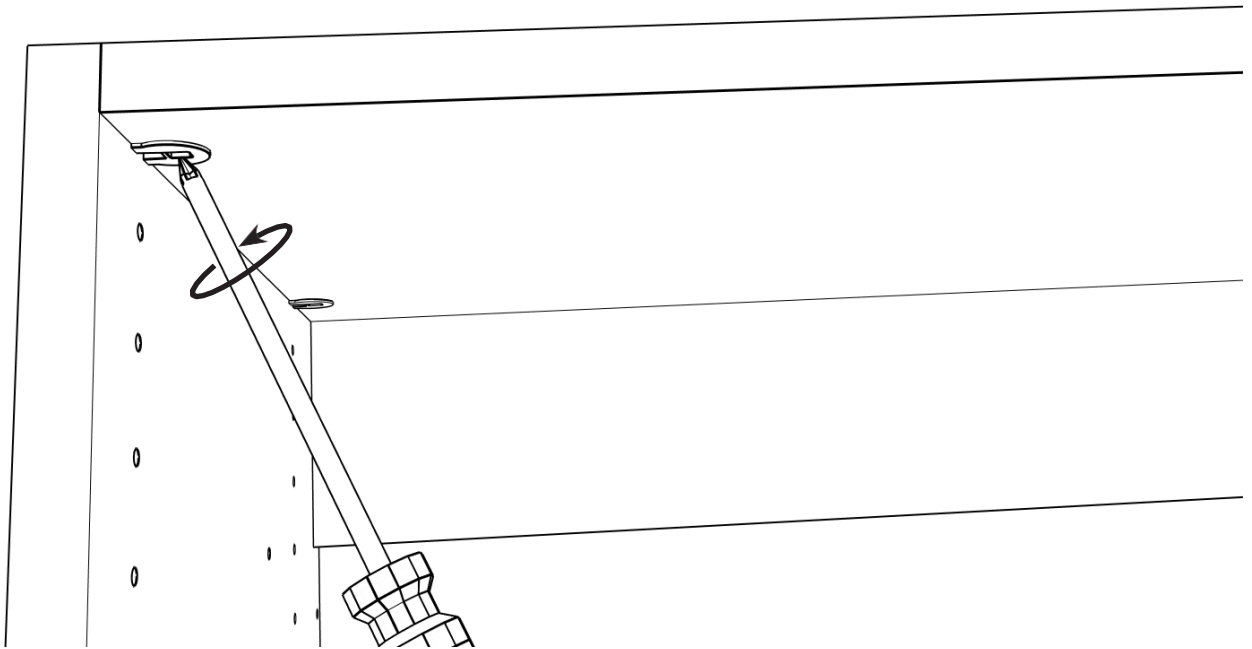

Step 11


Insert the bottom fixed shelf (with 2 rafixes and 2 wedgefixes from step 2) and insert the back 2 rafixes into the screw dowels as shown below.

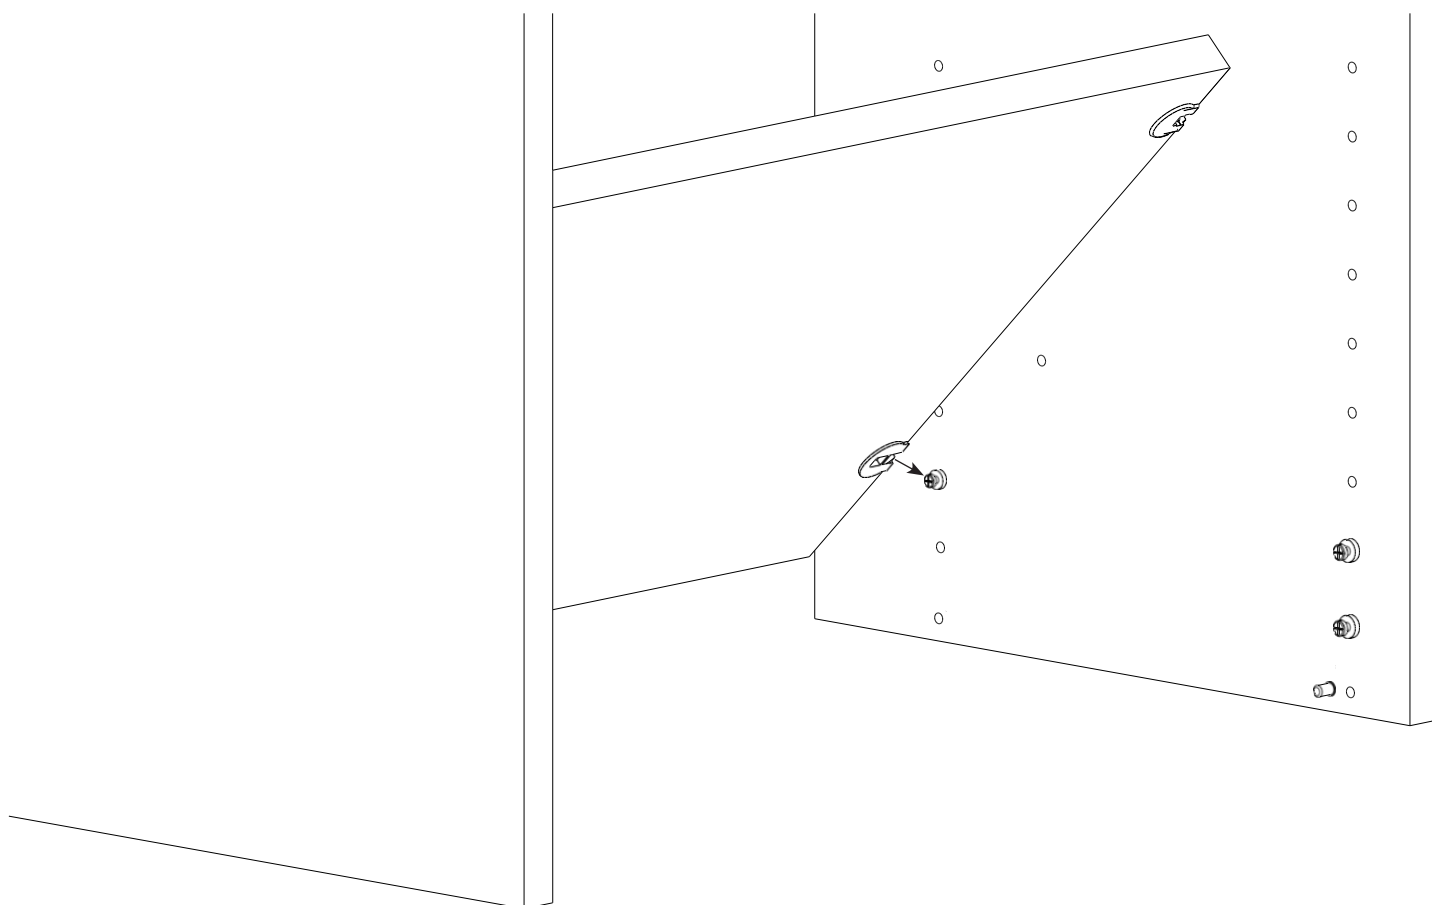





Step 12

Hold the shelf at an angle and tighten and secure the rafixes on either side

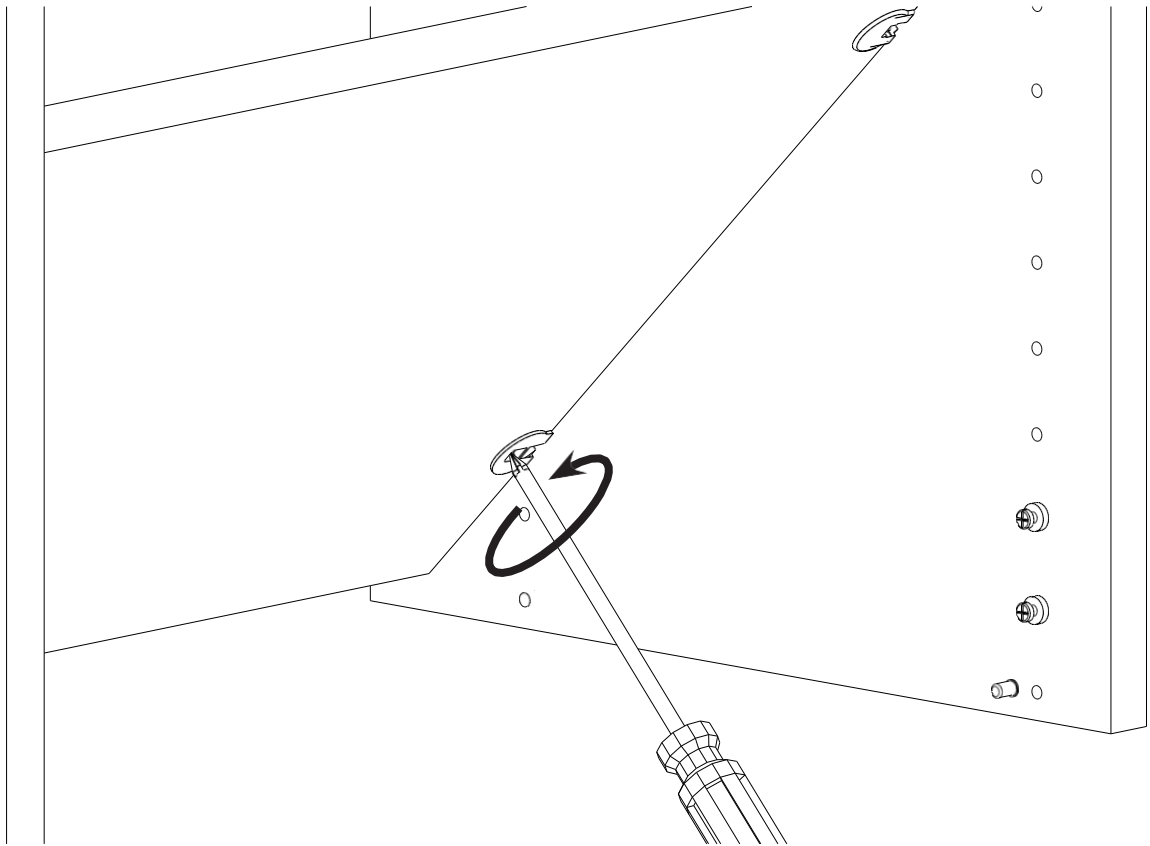

Step 13


Insert the toe kick by securing then tightening the rafixes.

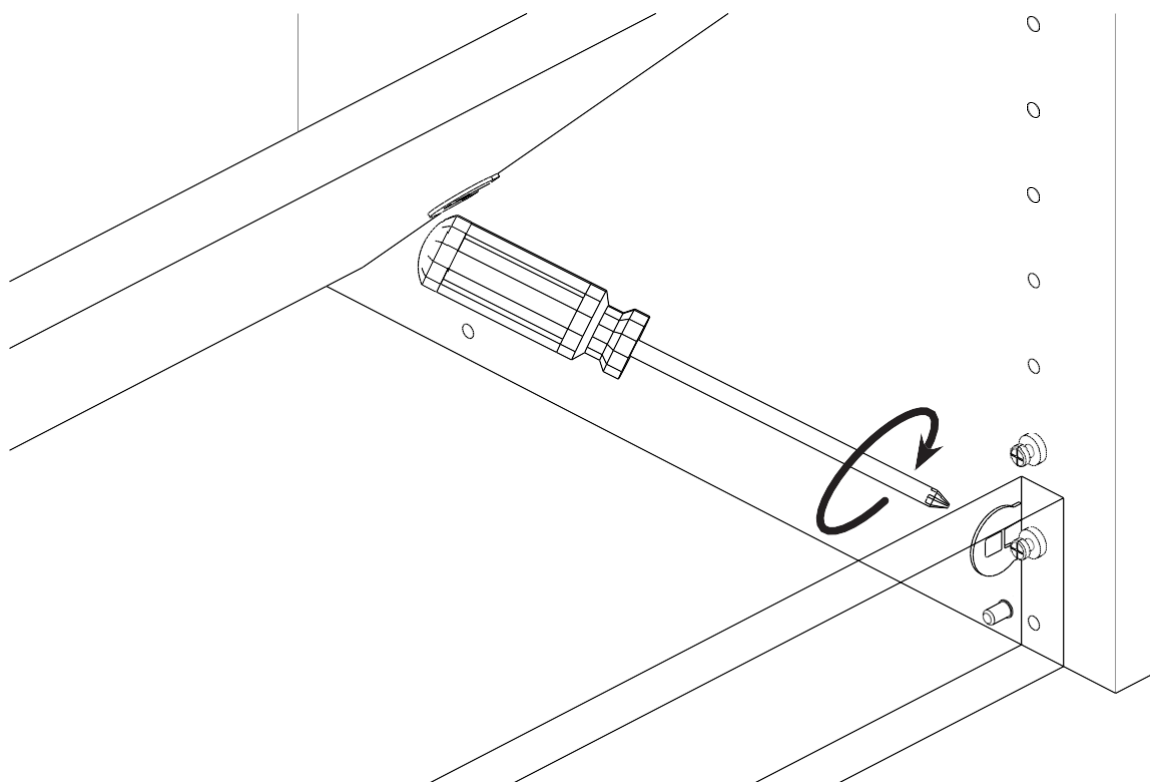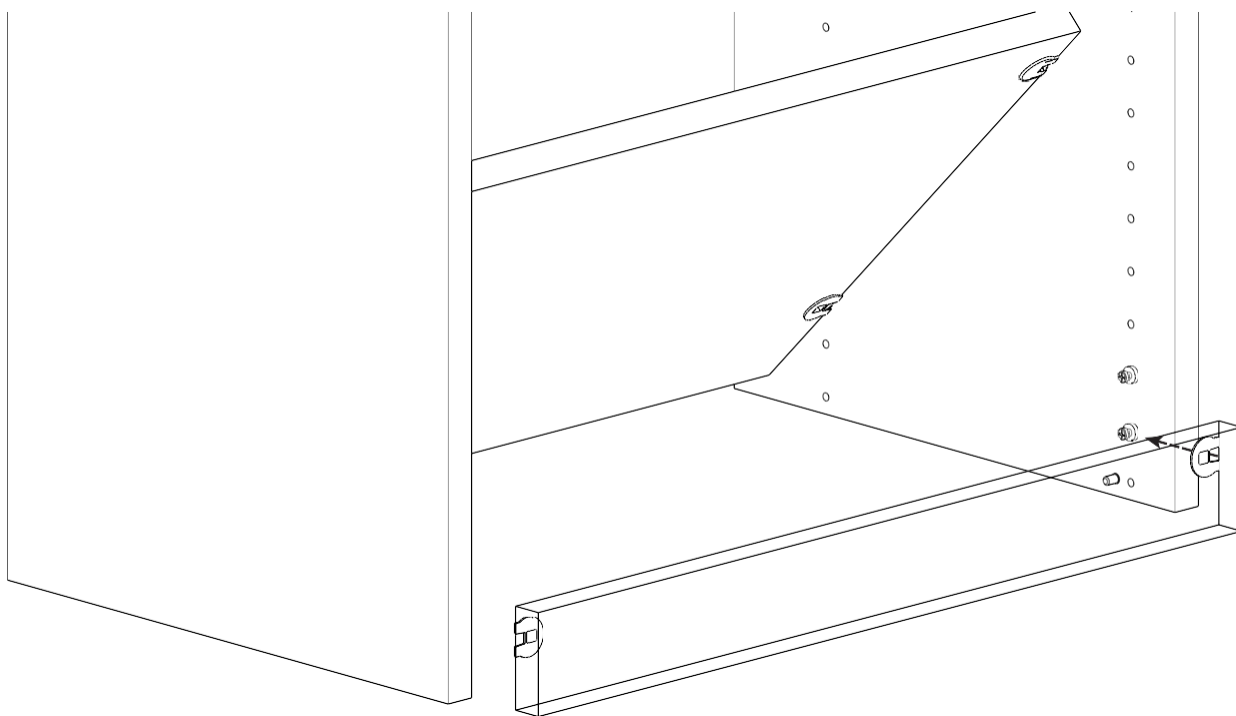




Step 14

Swing down the shelf to rest on the front 2 screw dowels.

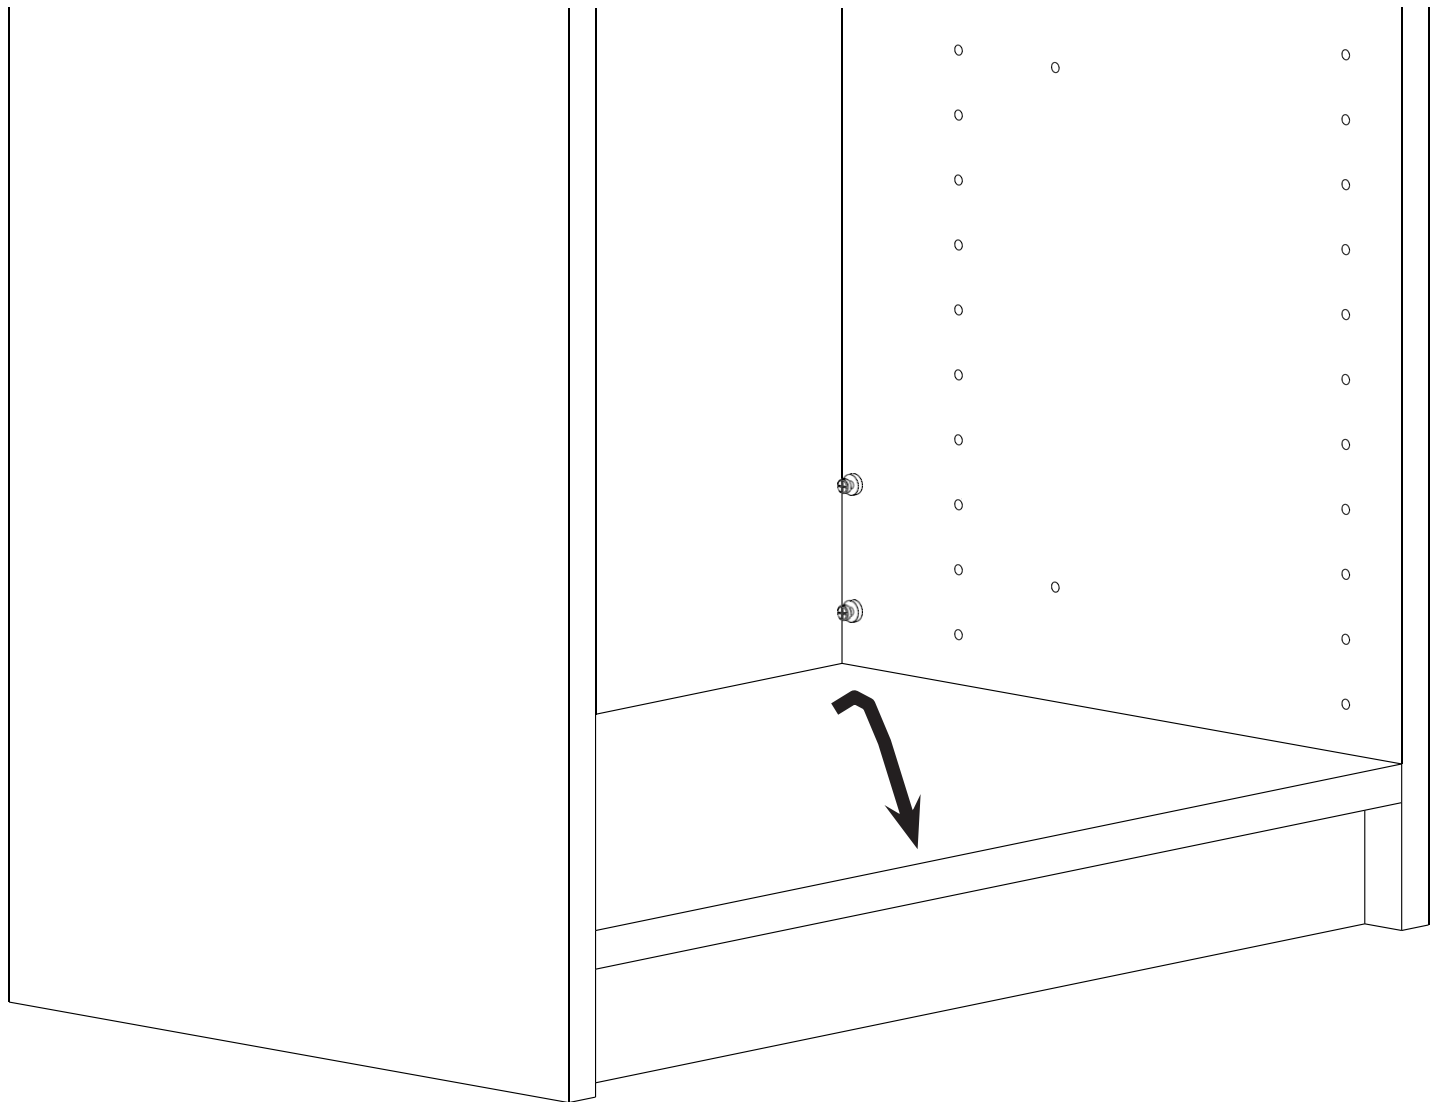

Step 15


Connect Bottom cleat by simply clicking the wedgfixes into the screw dowels on each side.

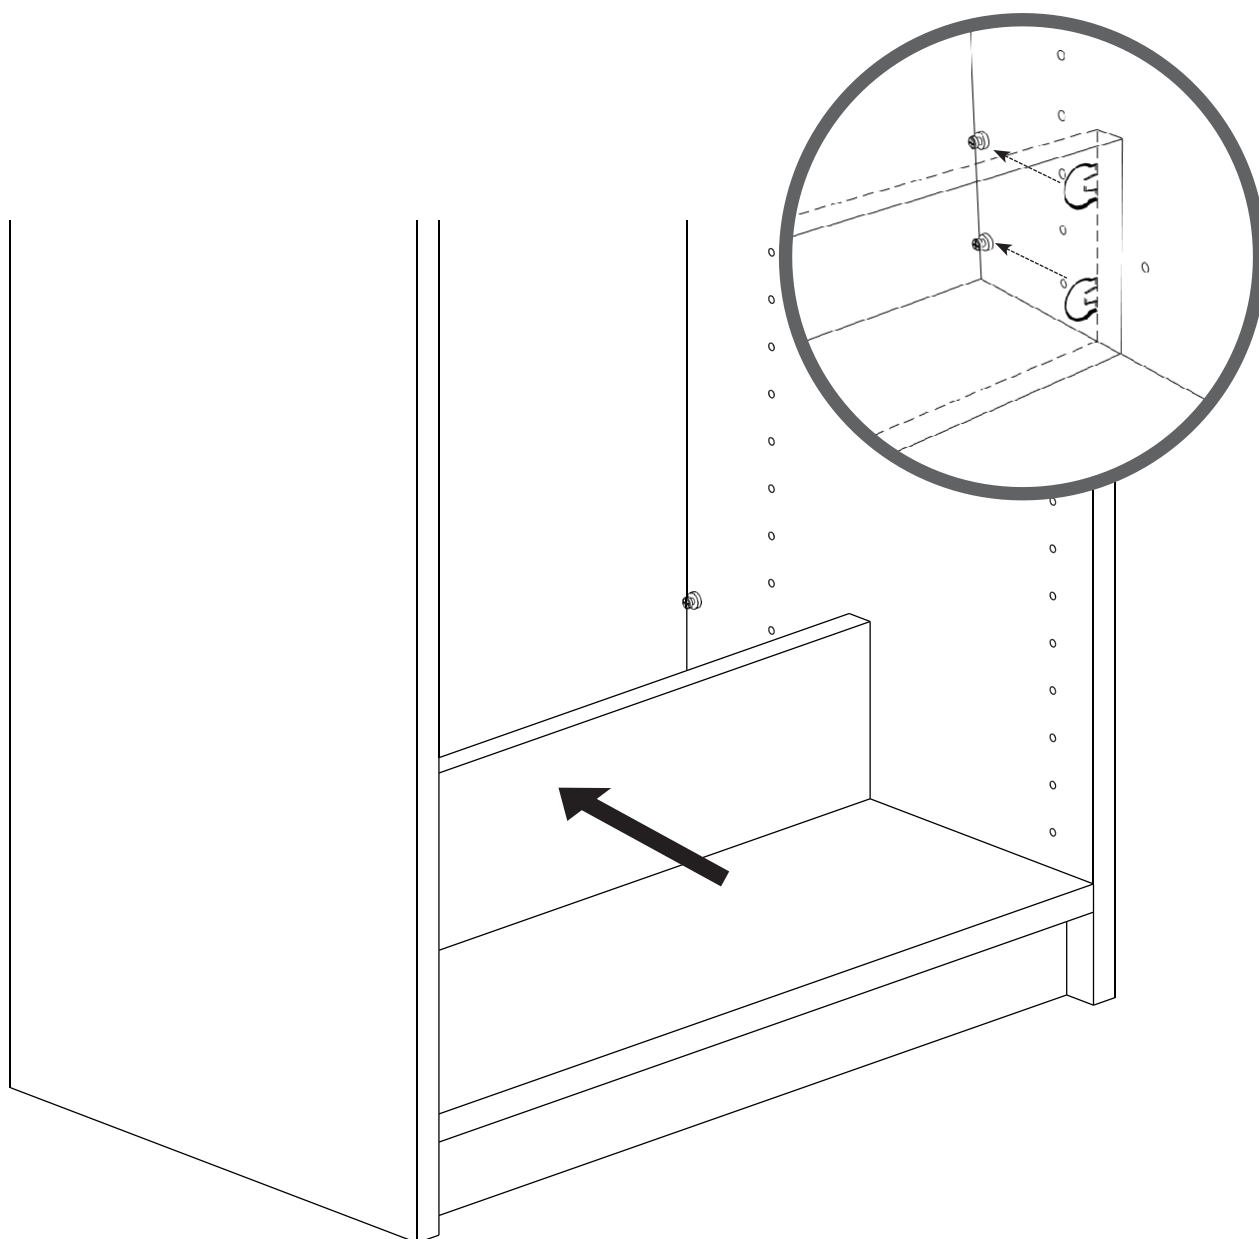





Step 16

You have now completed the first base unit! Simply repeat steps 8-15 for the remaining units.

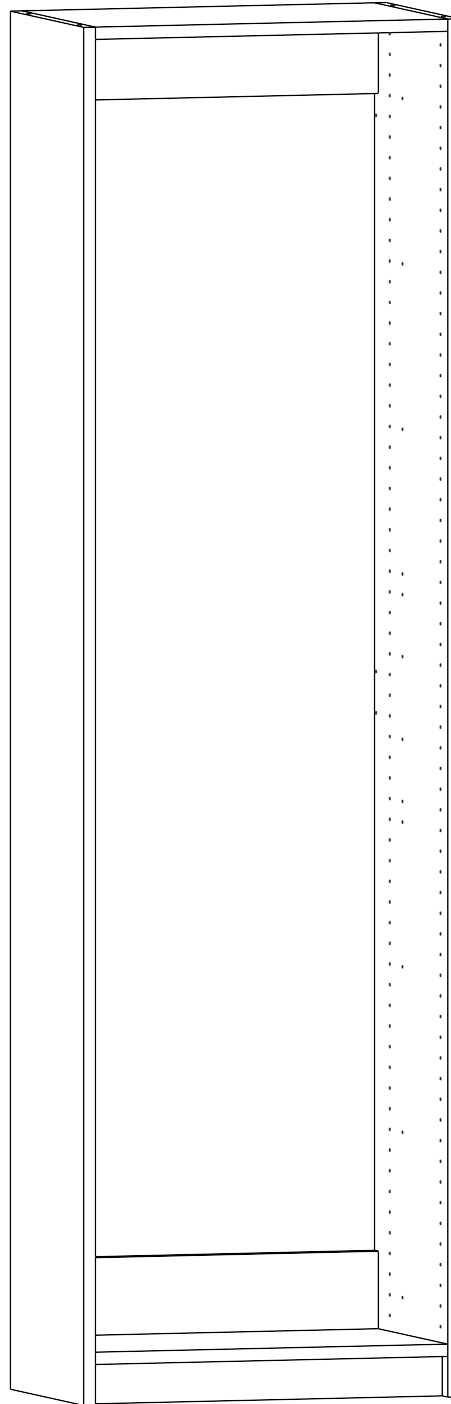

Step 17

Ensure that the base units are in their final place and leveled.
You can also swing open the bottom shelf to place wedges.

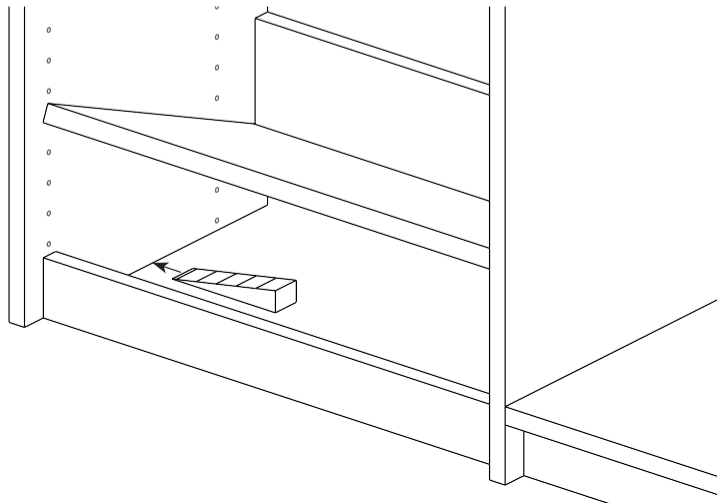
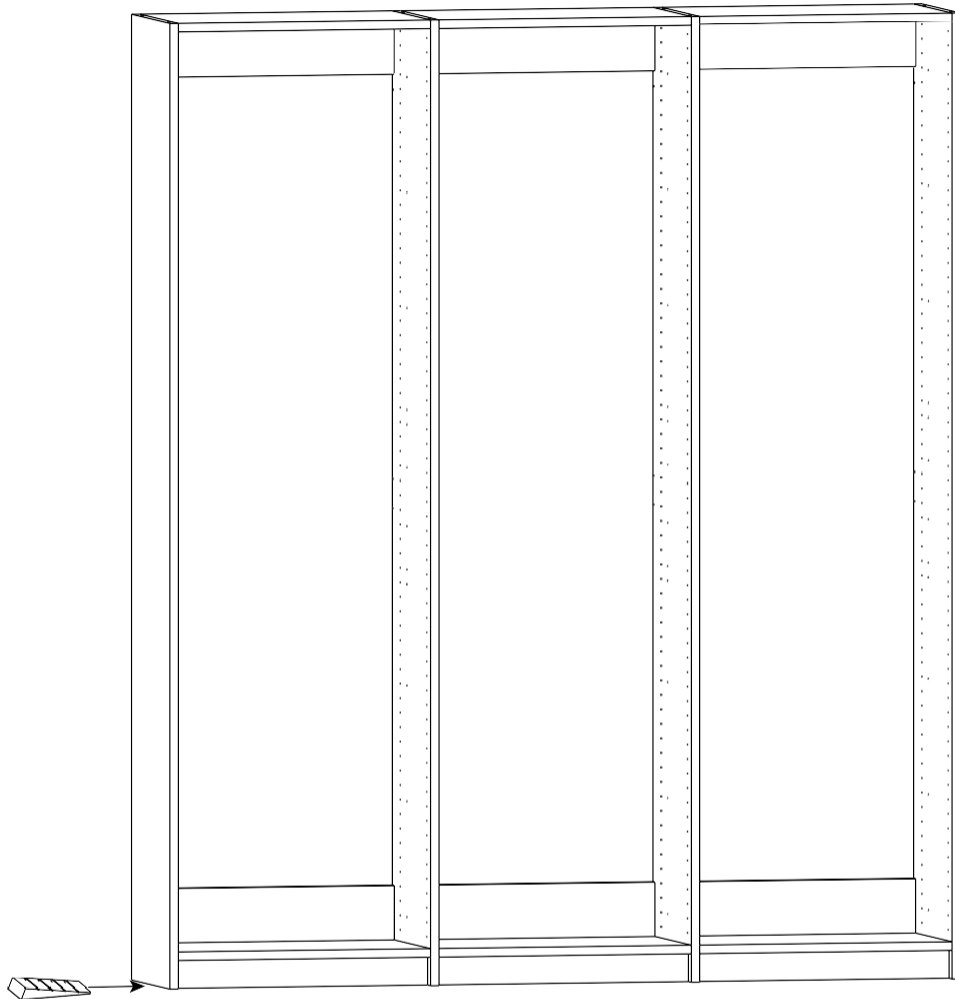




Step 18

Using a stud finder, search for the studs in the wall and drill the screws through the top and bottom cleats in each unit into the studs. If there is only one stud, drill two screws into each cleat, one on top of the other.

install screws

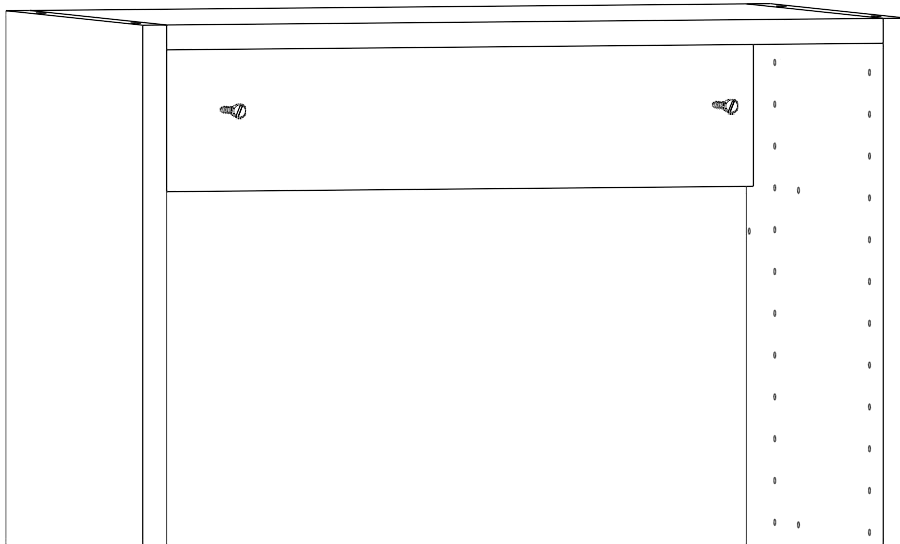


Interior component assembly

Refer to your closet plan for the interior components and follow the manual for assembly.


The default configurations shown here are just examples and may not always match your custom design.

Double Hang
Assembly

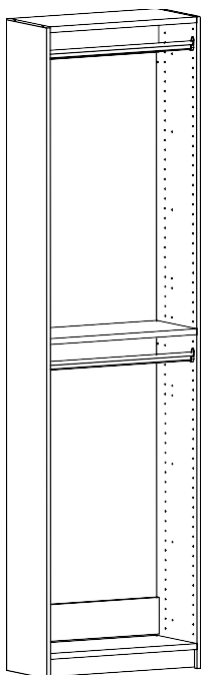


Page 26

Tall Hanging
Assembly

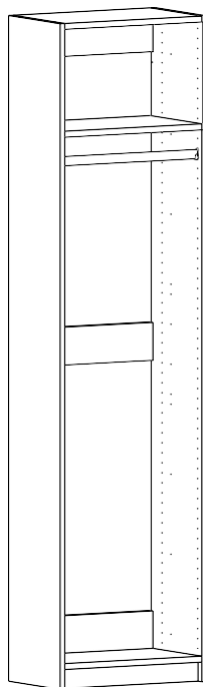

Page 30

Drawer Assembly

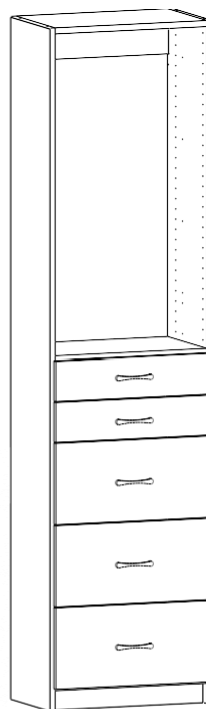


Page 34




Double Hang Assembly Parts Needed

Shelf Rod Pack

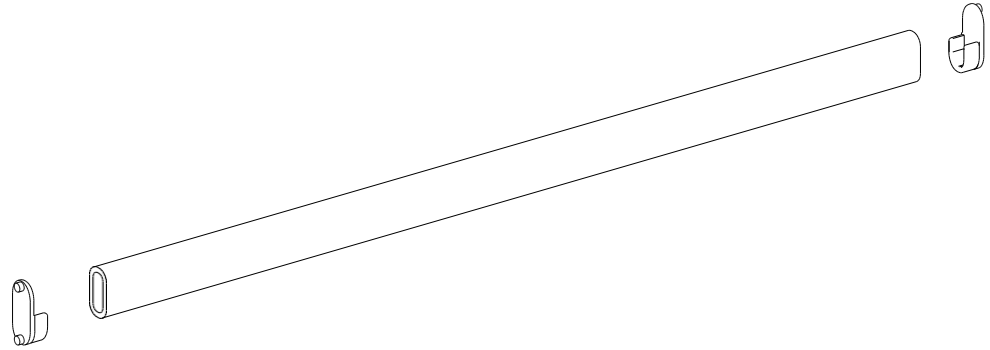


Middle Shelf
from
ALT-FS
Alto Fixed Shelf Pack

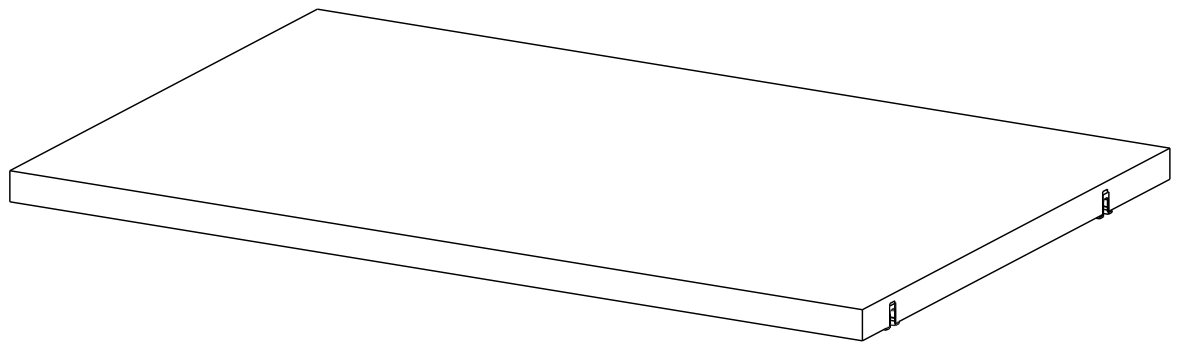



Step 1

Start by inserting the middle shelf by inserting screw dowels as shown and securing the shelf with the rafixes

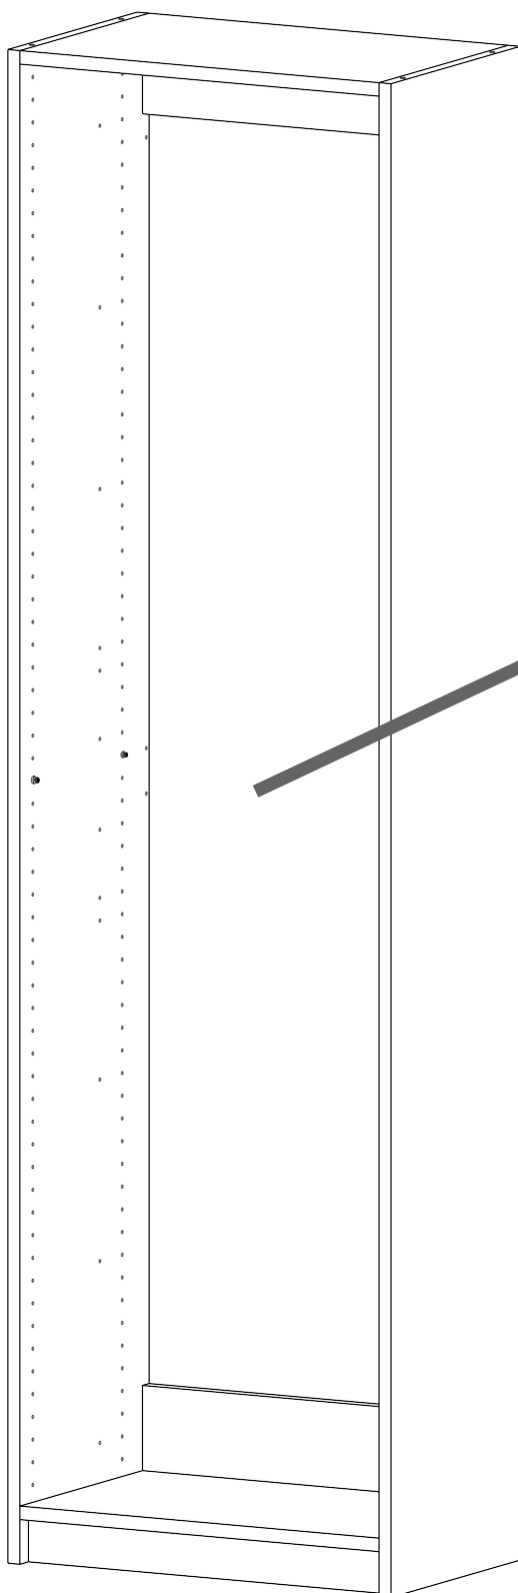


Screw dowel

x4





Holes are on
same level
with top of
cleat holes

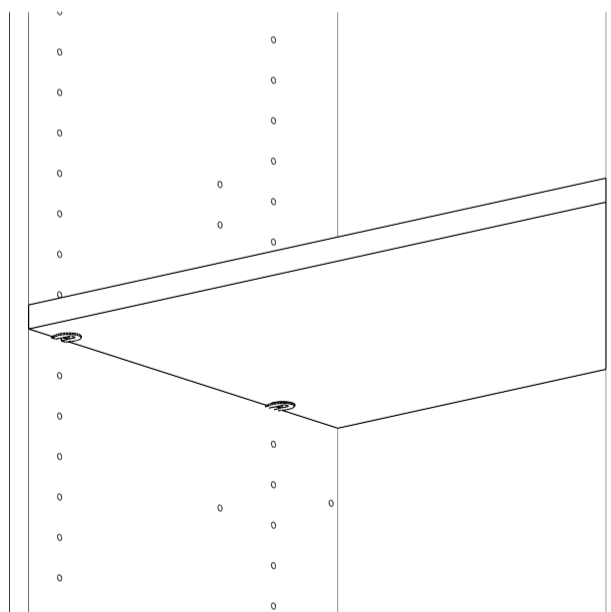




Step 3

Connect the rod flanges on either side and insert shelf rod under the top shelf

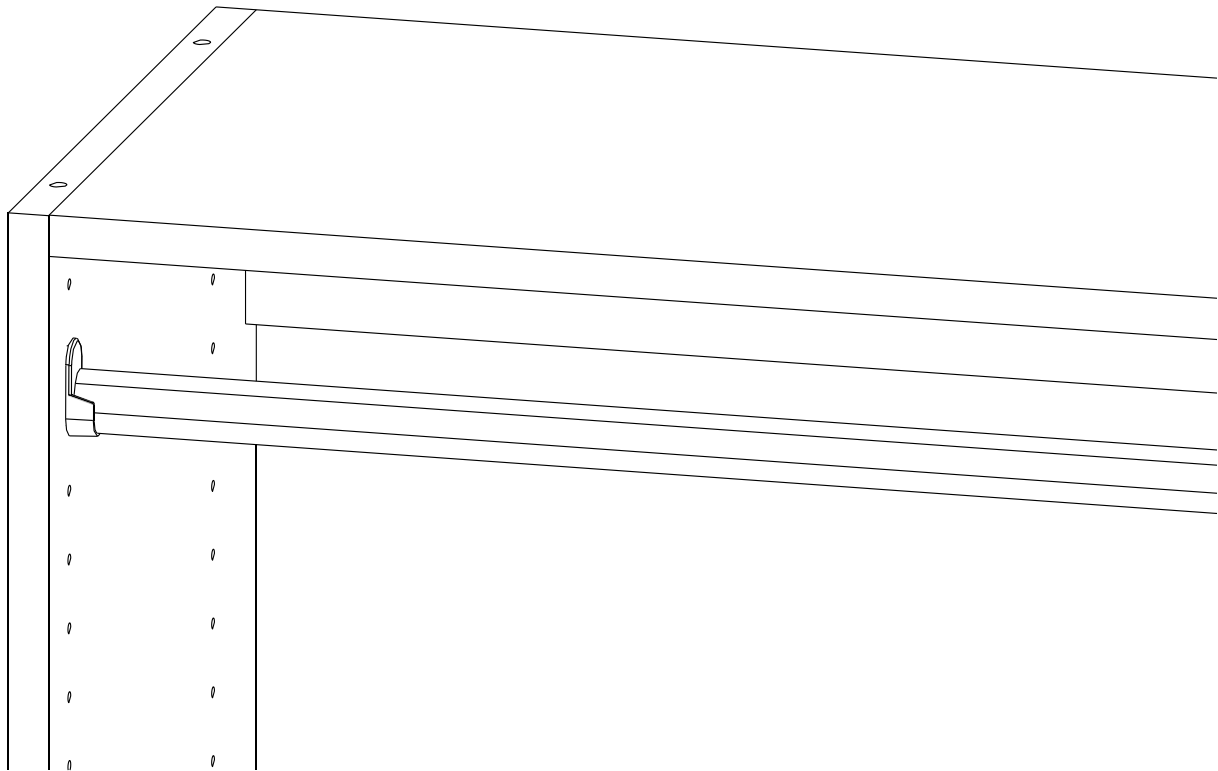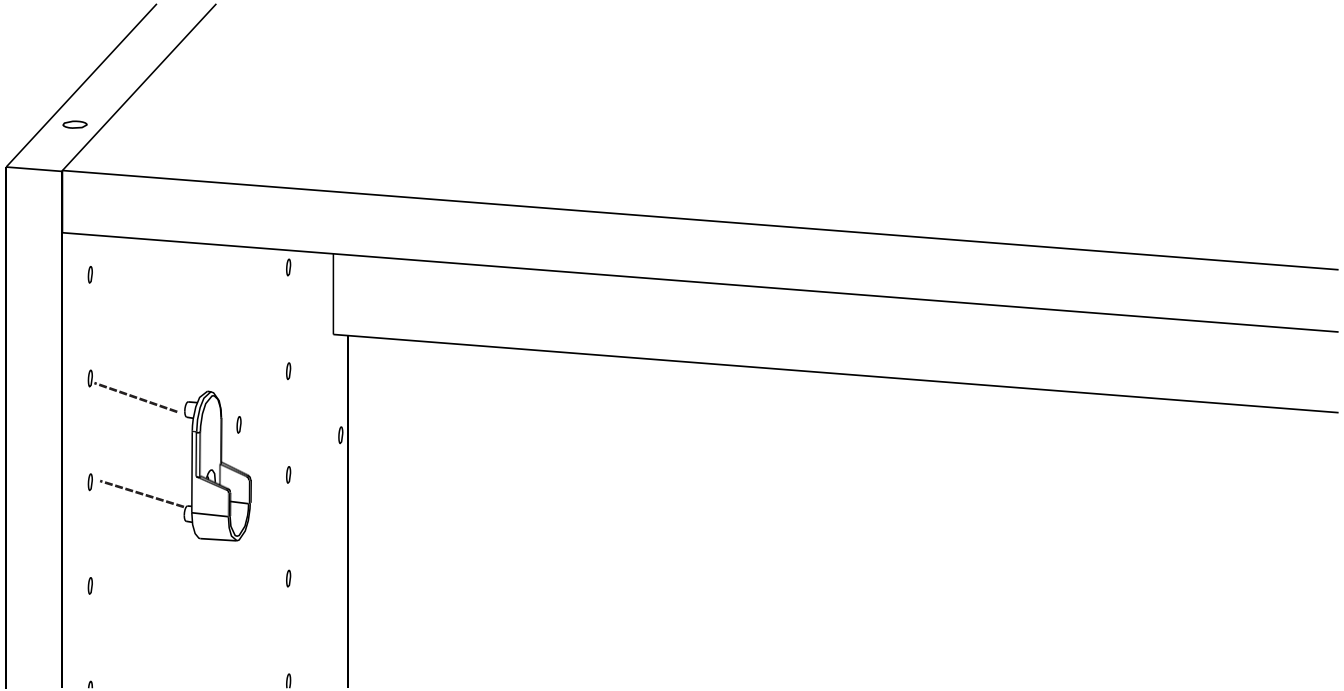

Step 3


Connect the rod flanges on either side and insert shelf rod under the middle placed shelf

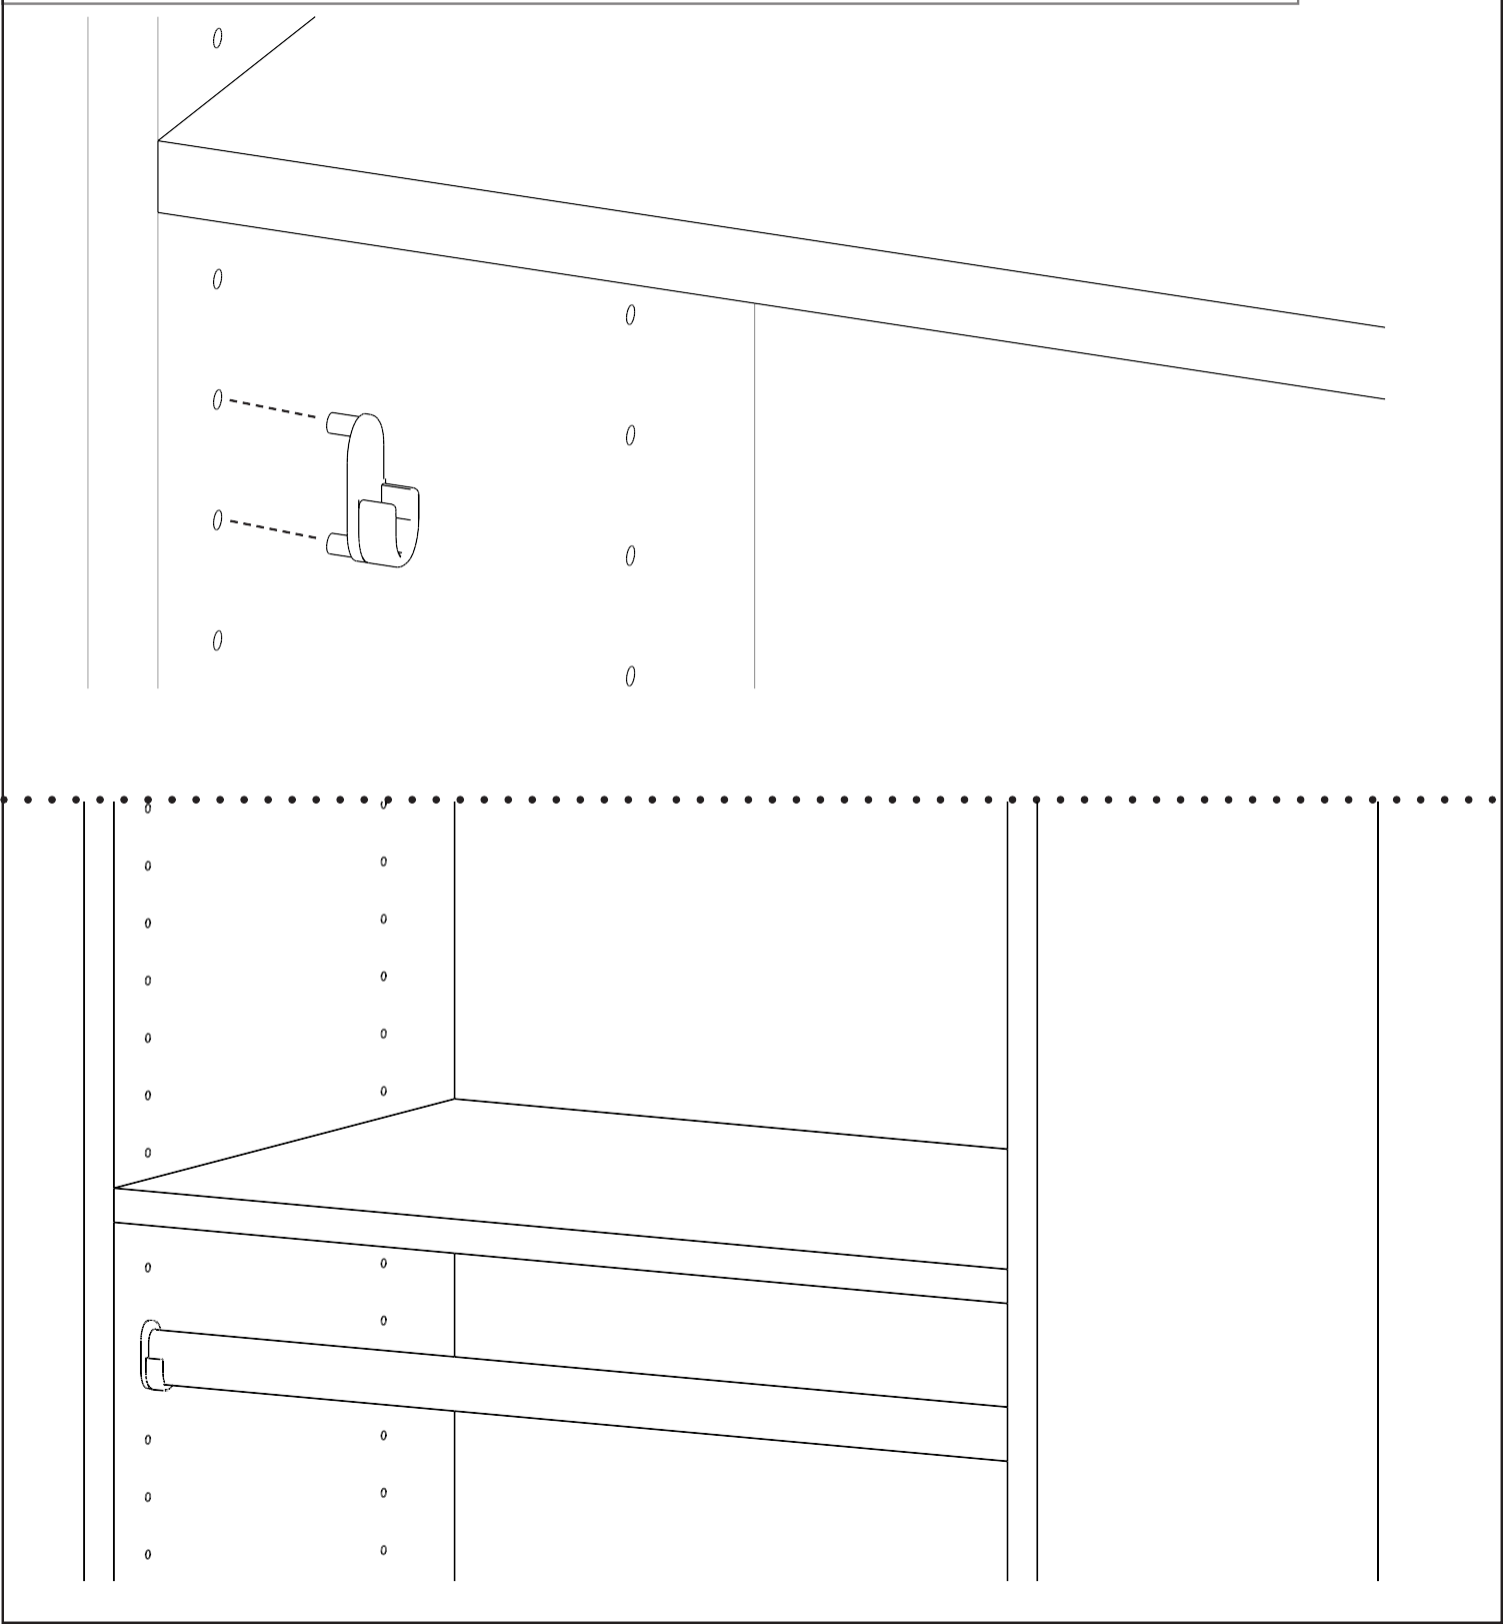





Tall Hang Assembly Parts Needed

Shelf Rod Pack

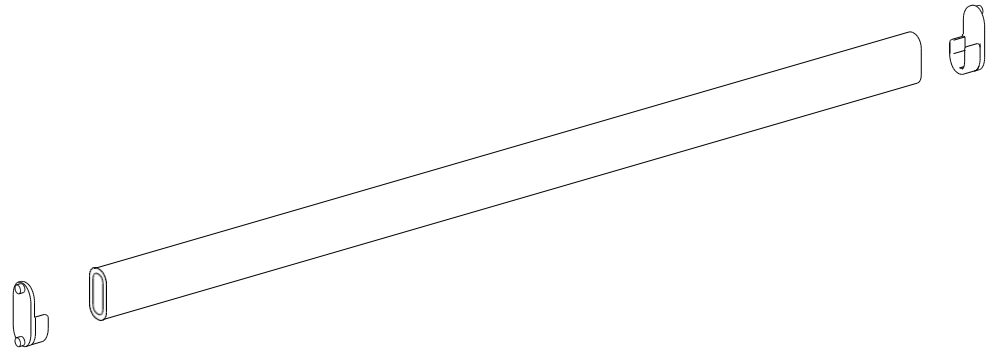


Third Cleat
&
Middle Shelf
from
ALT-FS
Alto Fixed Shelf Pack

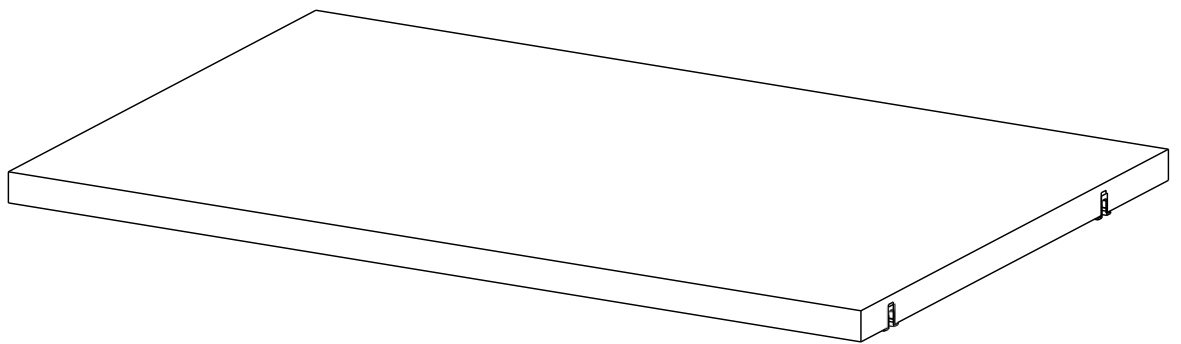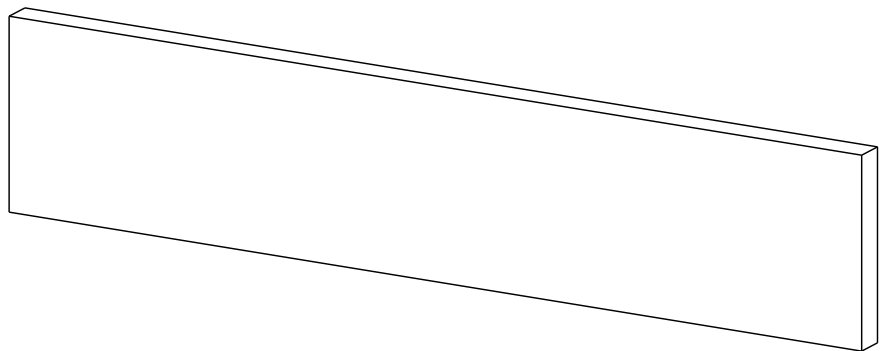

Step 1

Insert screws in the middle cleat holes on panels on both sides and simply click in the 3rd cleat


Screw dowel
x4

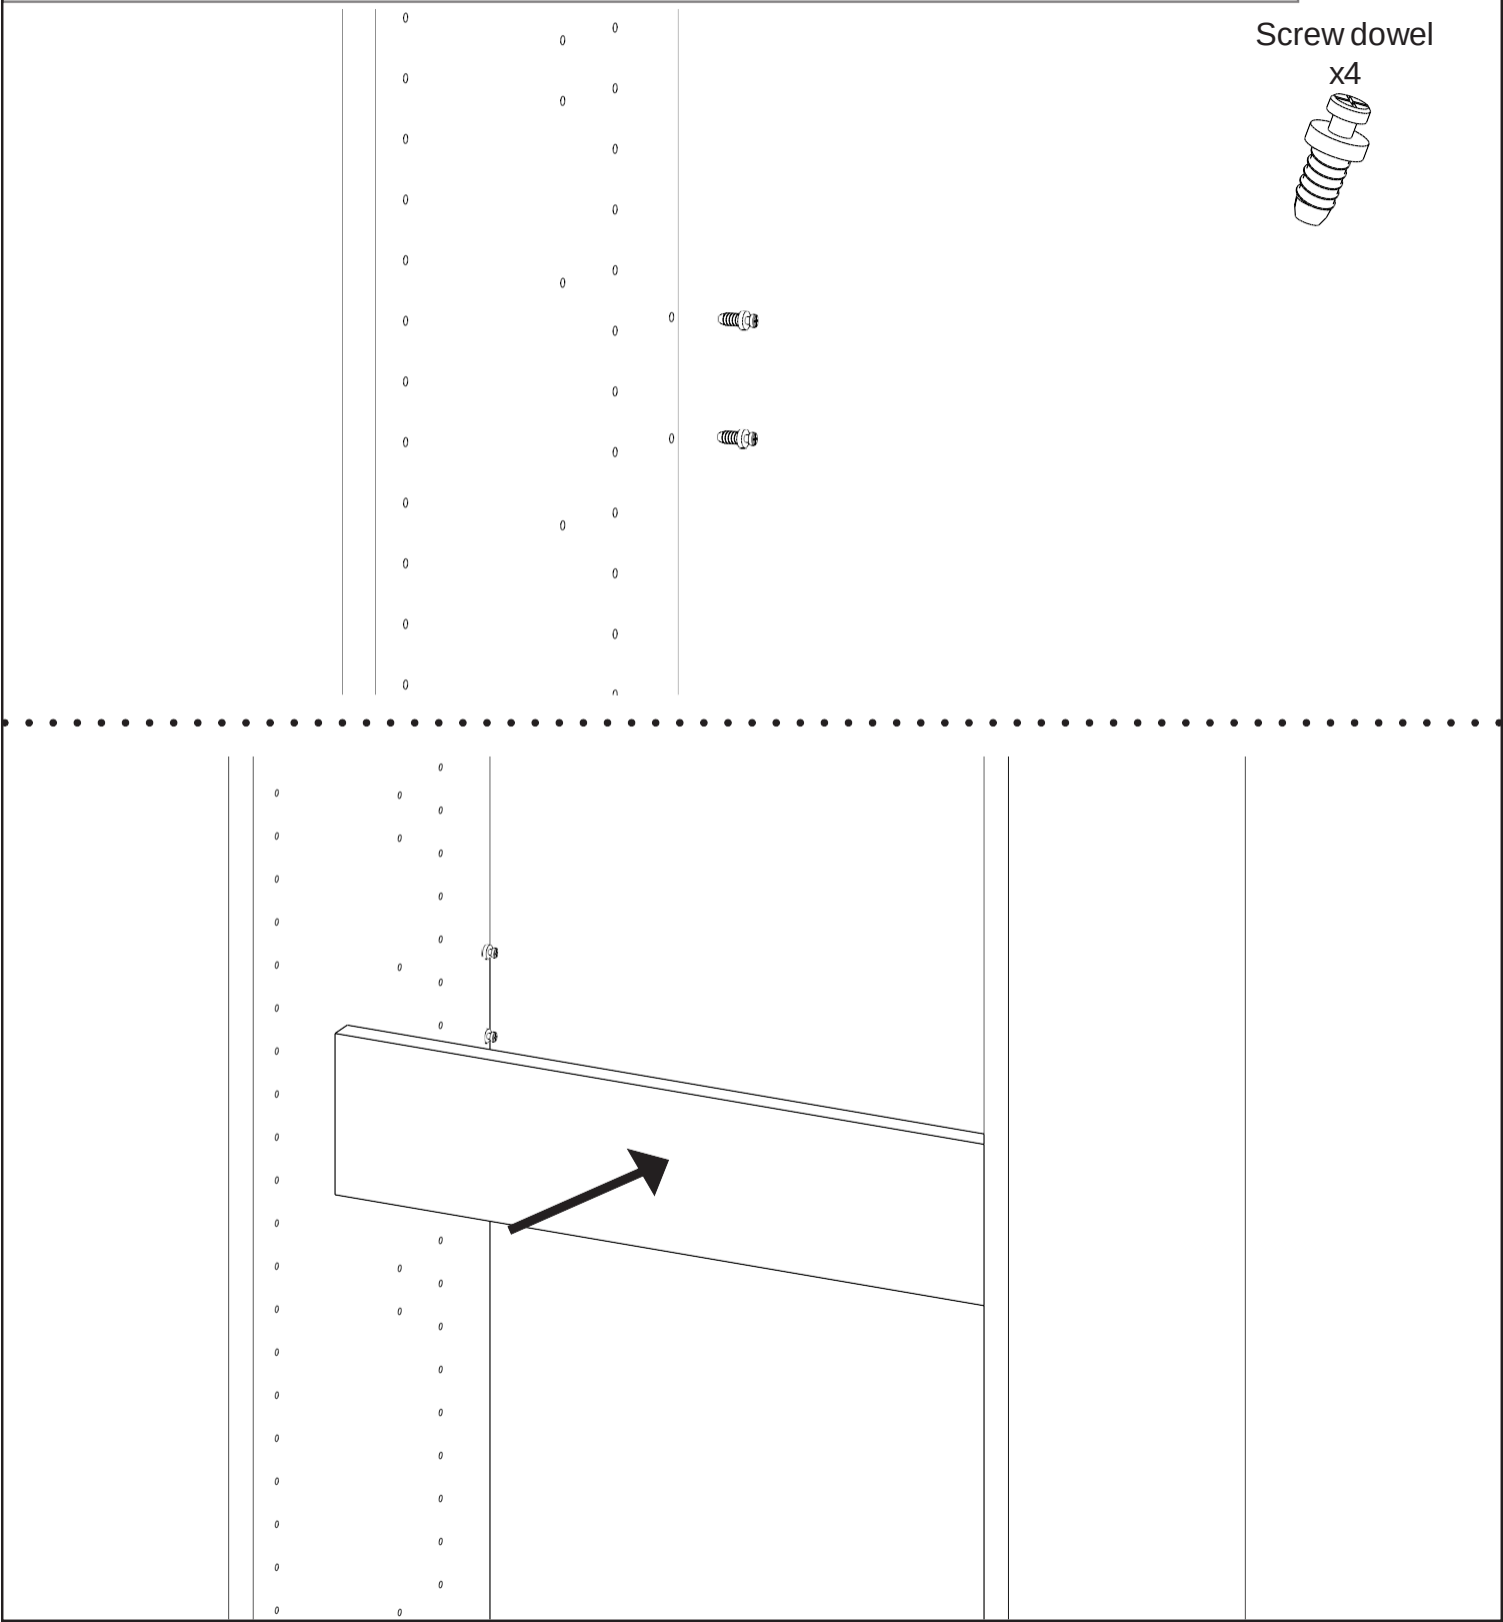





Step 2

Insert screw dowels in holes on panels on both sides and then connect and secure the middle shelf by turning the rafixes

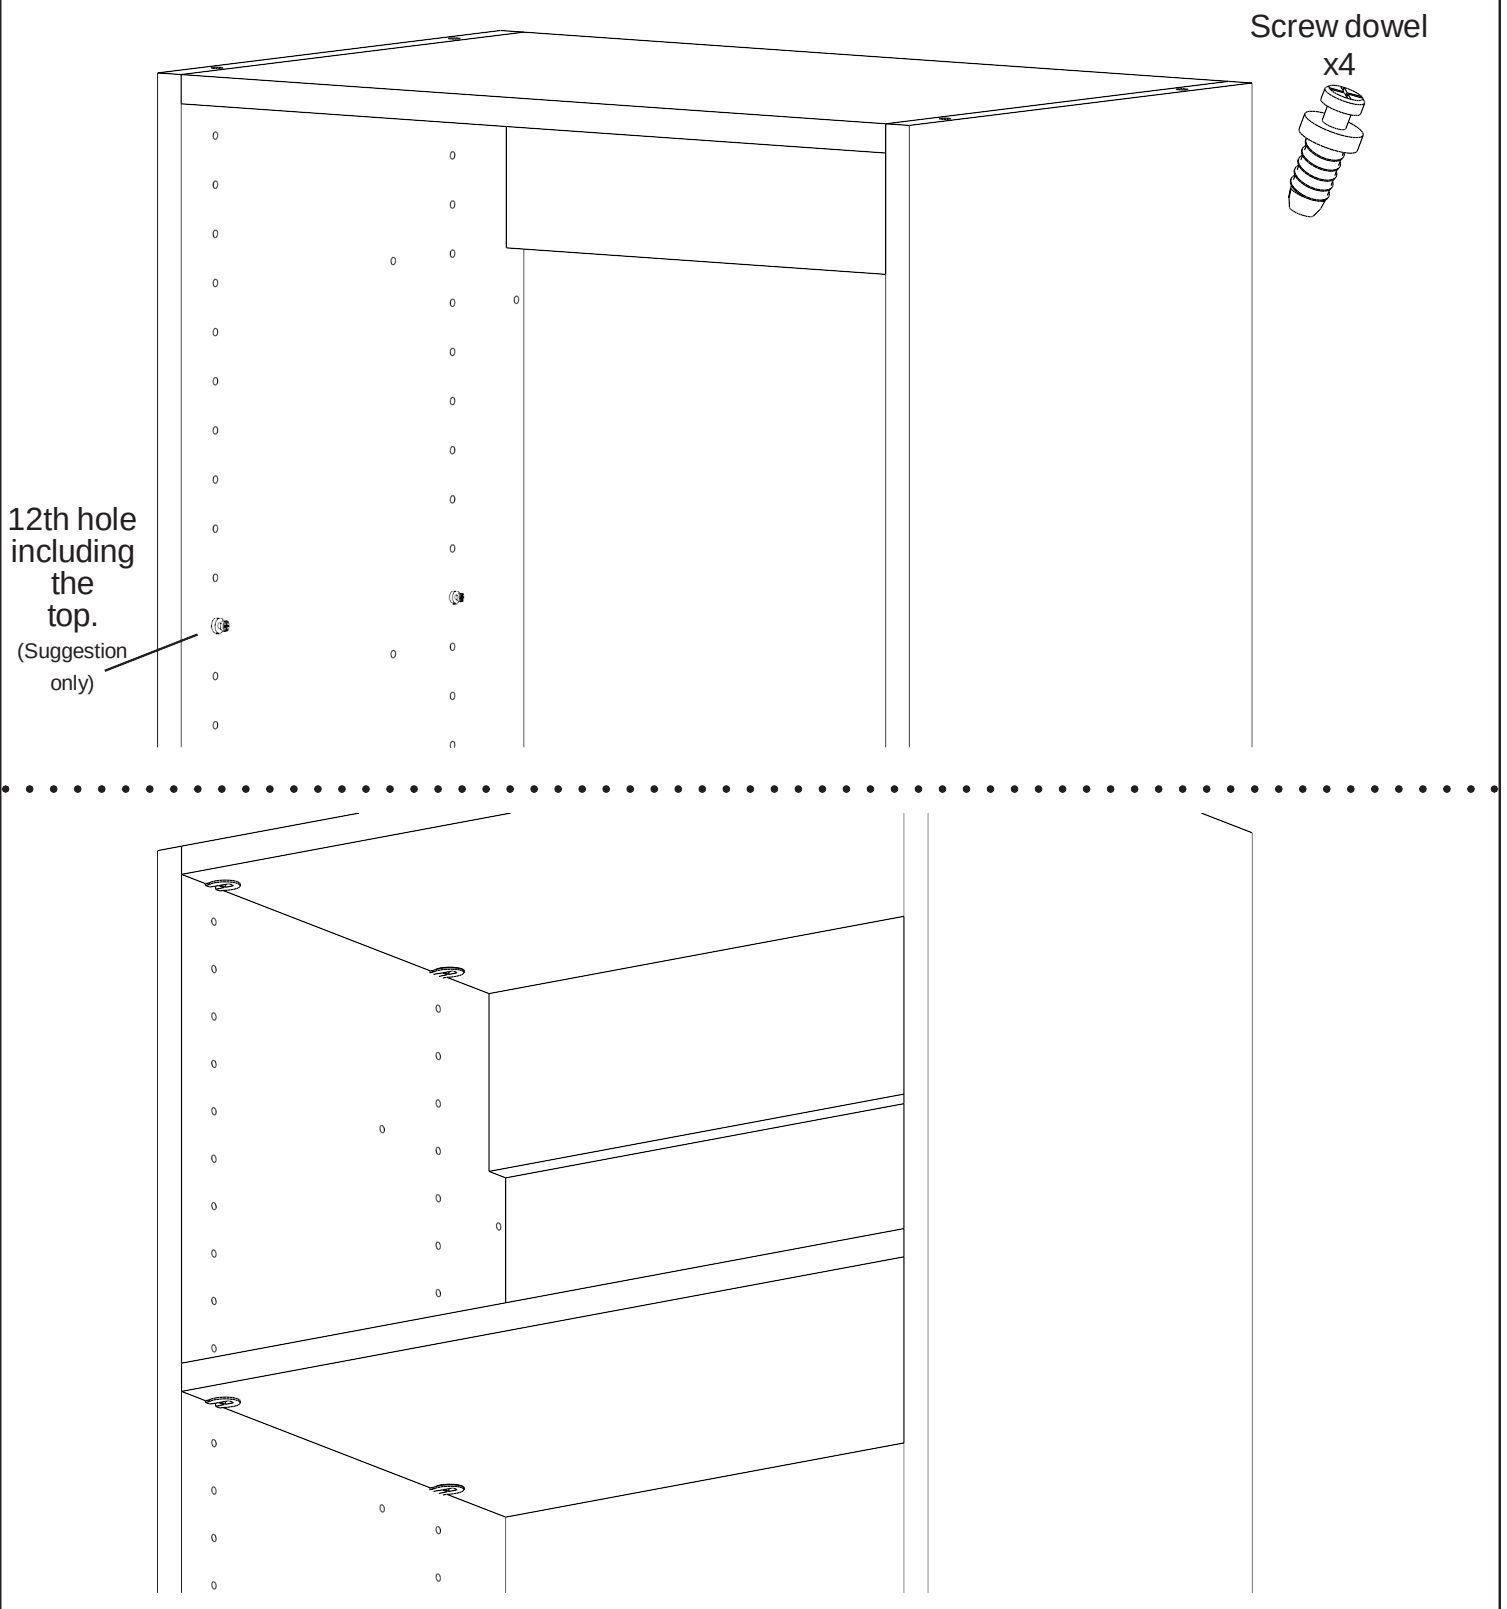

Step 3

Connect the rod flanges on either side and insert shelf rod

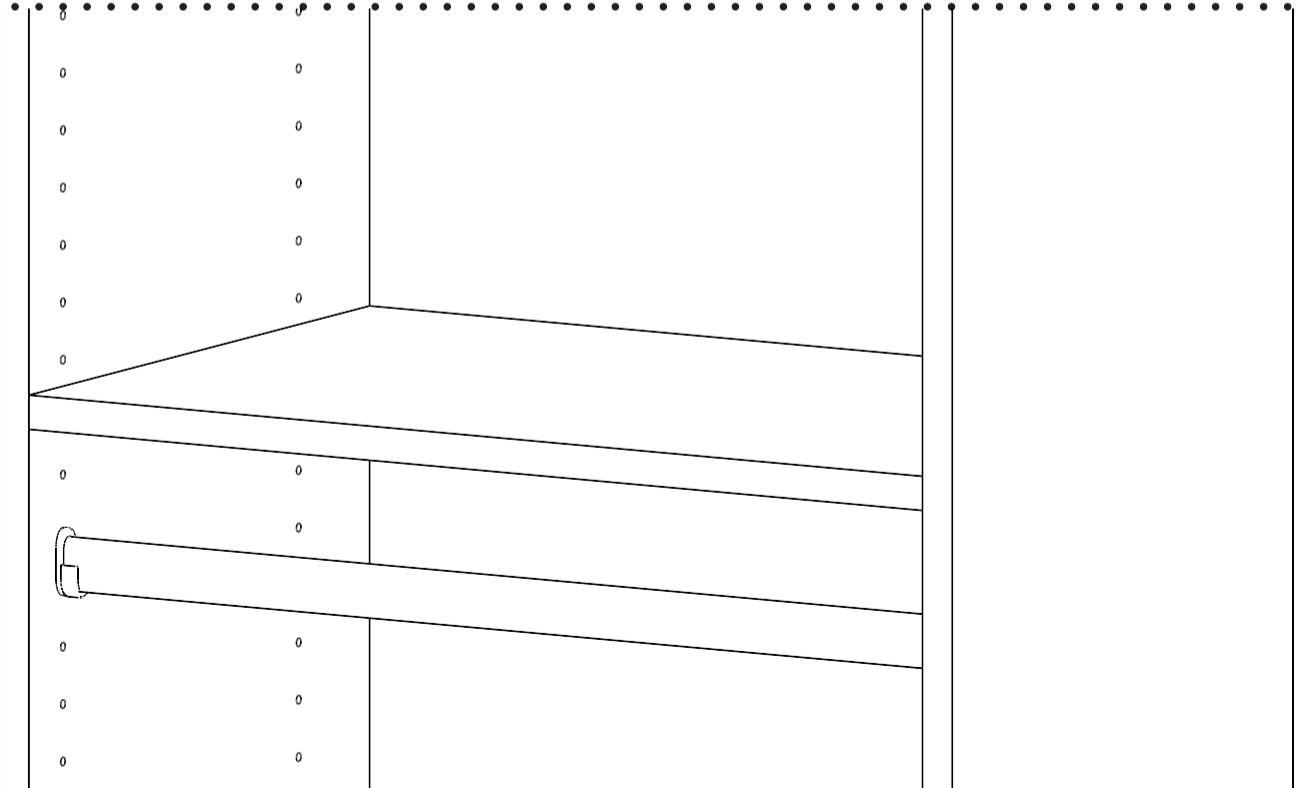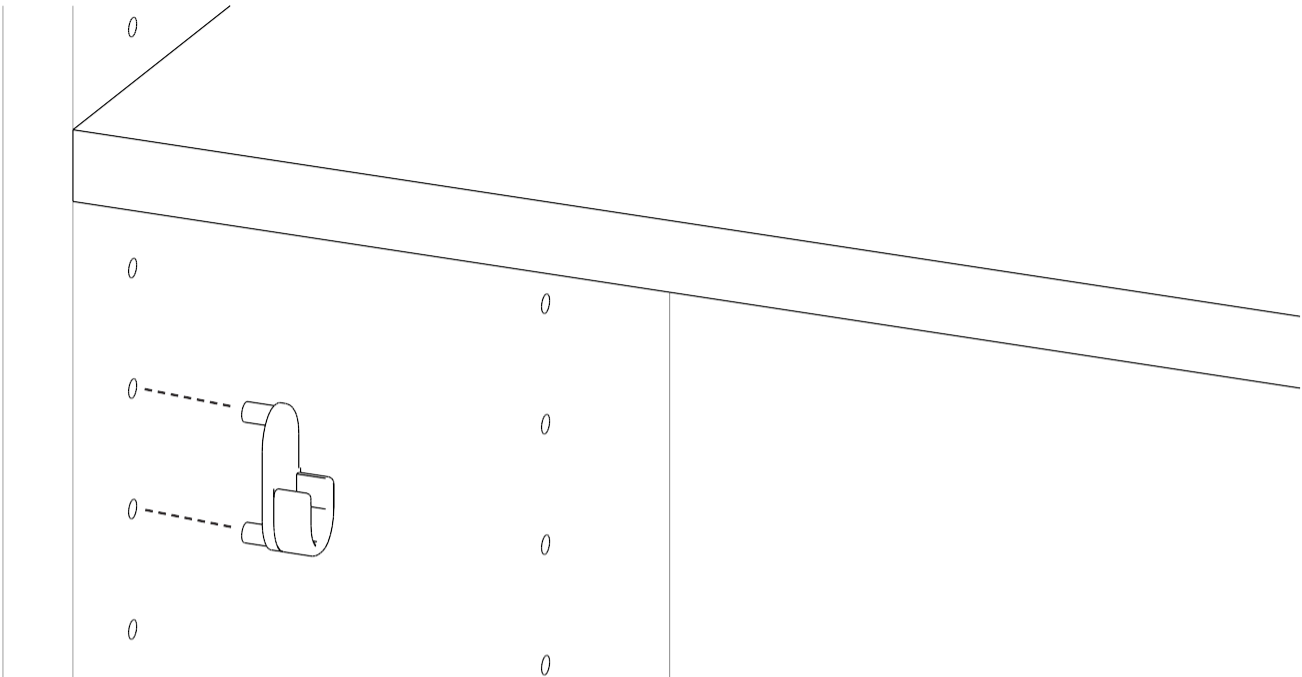




Drawer assembly Boxes Needed


ALT-DF
Alto Drawer Front
OR
ALT-DFS
Alto Small Drawer Front

*(There are 1 pack and 2
pack boxes)*

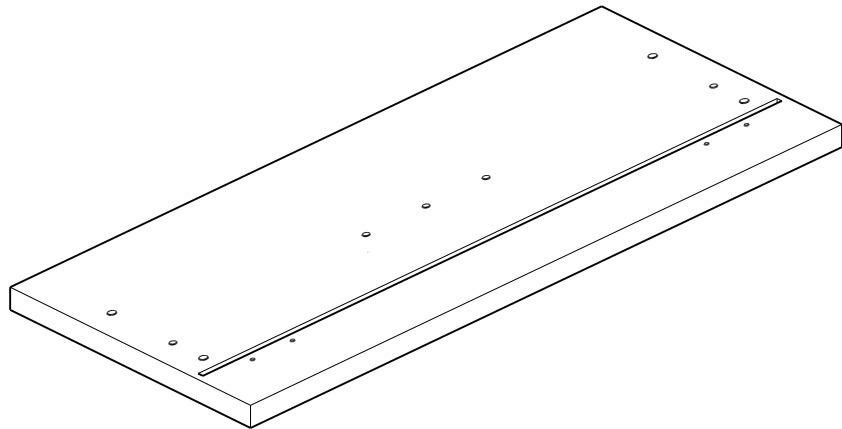

ALT-DB
Alto Drawer Boxes
OR
ALT-DBS
Alto Small Drawer Box

*(There are 1 pack and 2
pack boxes)*

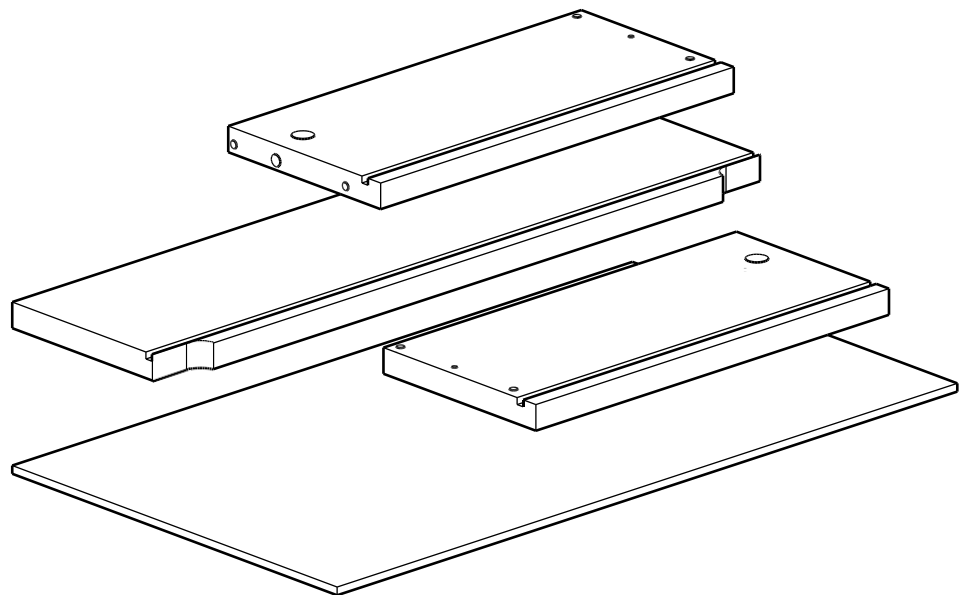


Tools needed


Philips screw driver




drawer slides (comes in separate box)

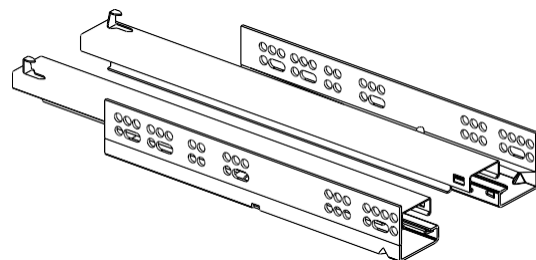

Hardware Packs Needed ALT-HRDP-DB

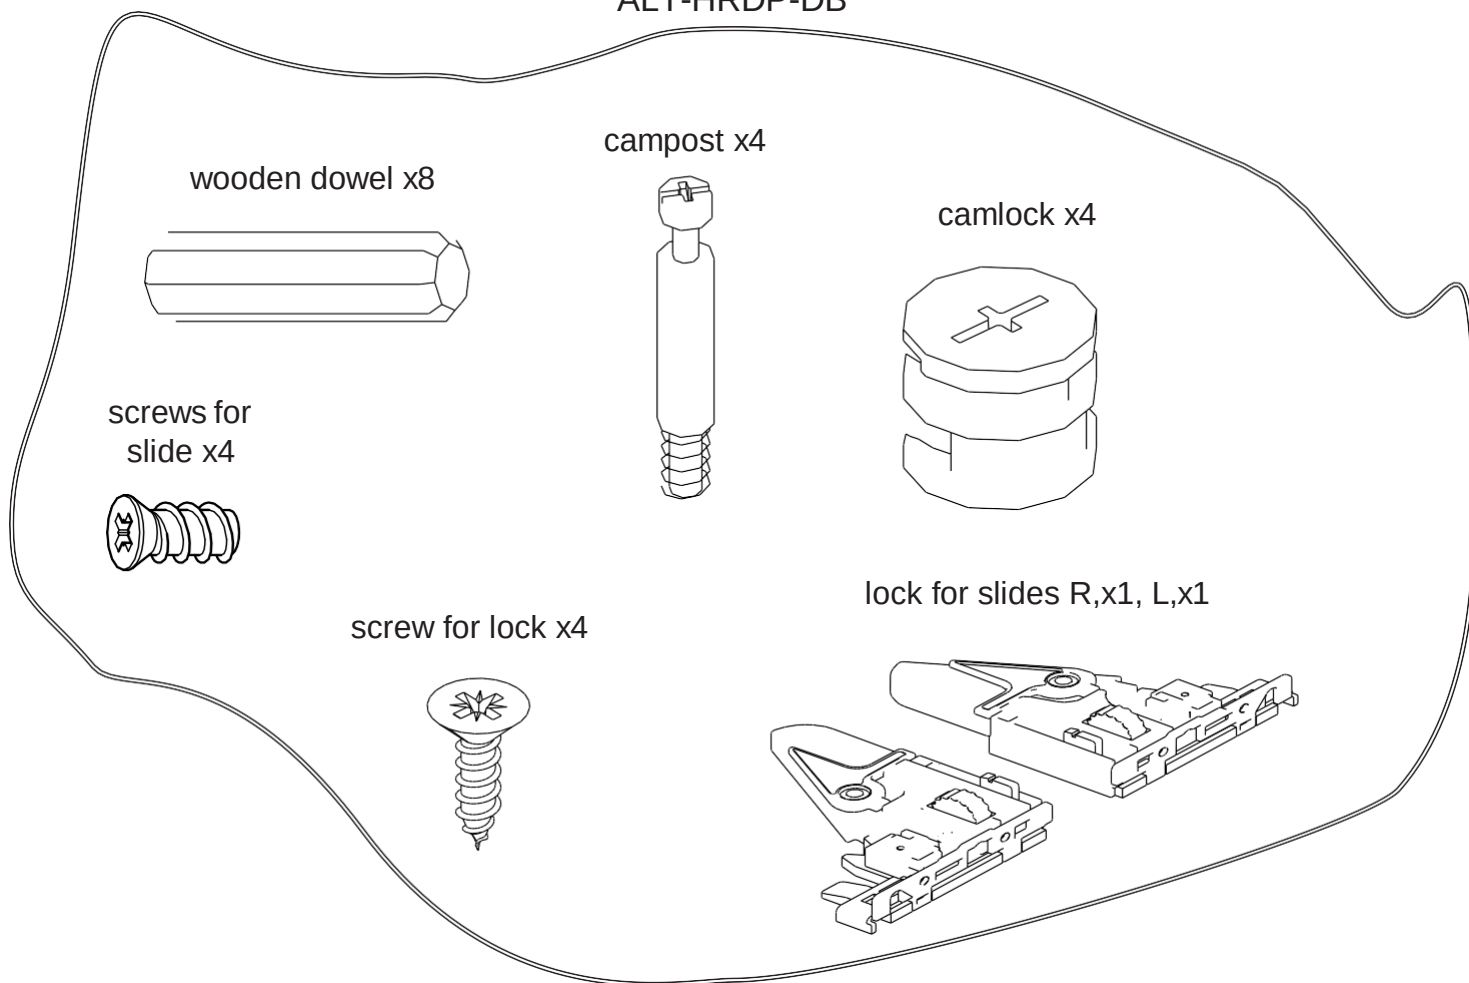


How to use the
Cam lock system

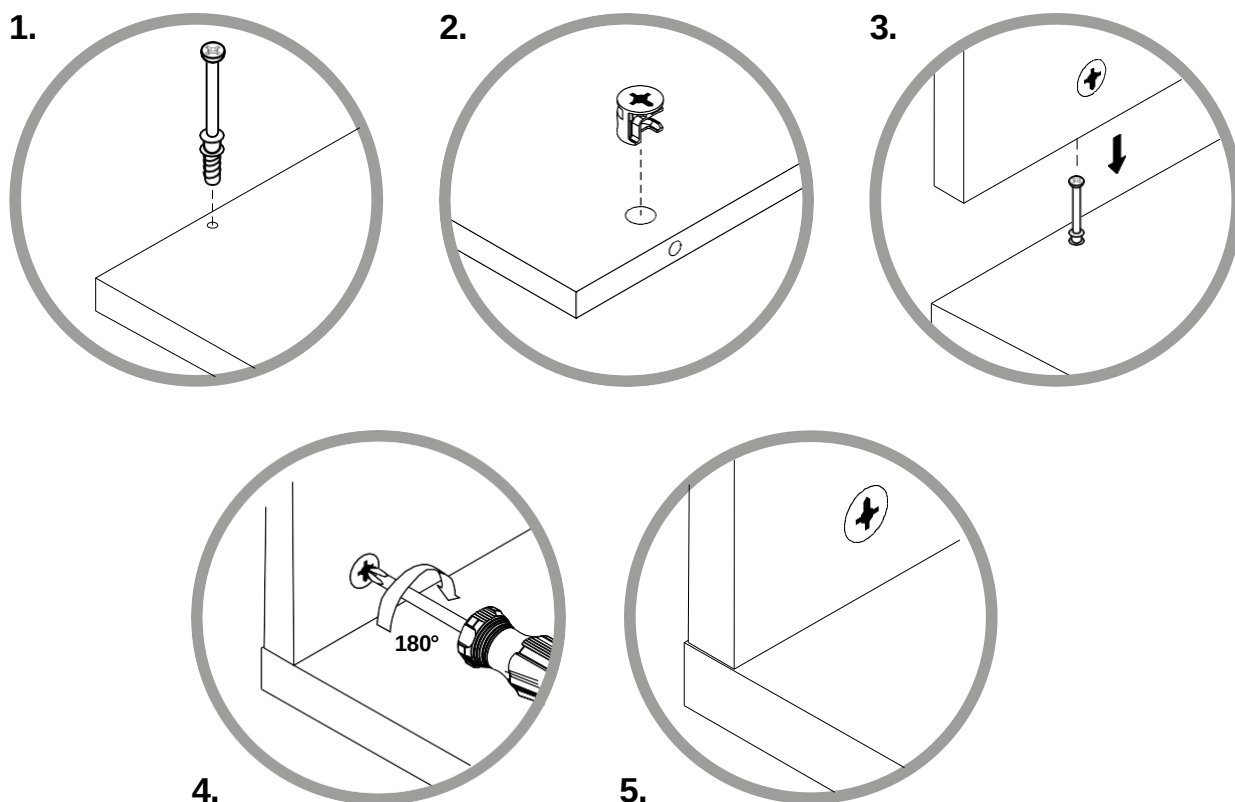




Step 1

Removing the parts from ALT-DB(s), insert cam locks, cam posts and wooden dowels in the drawer sides and back as shown below.

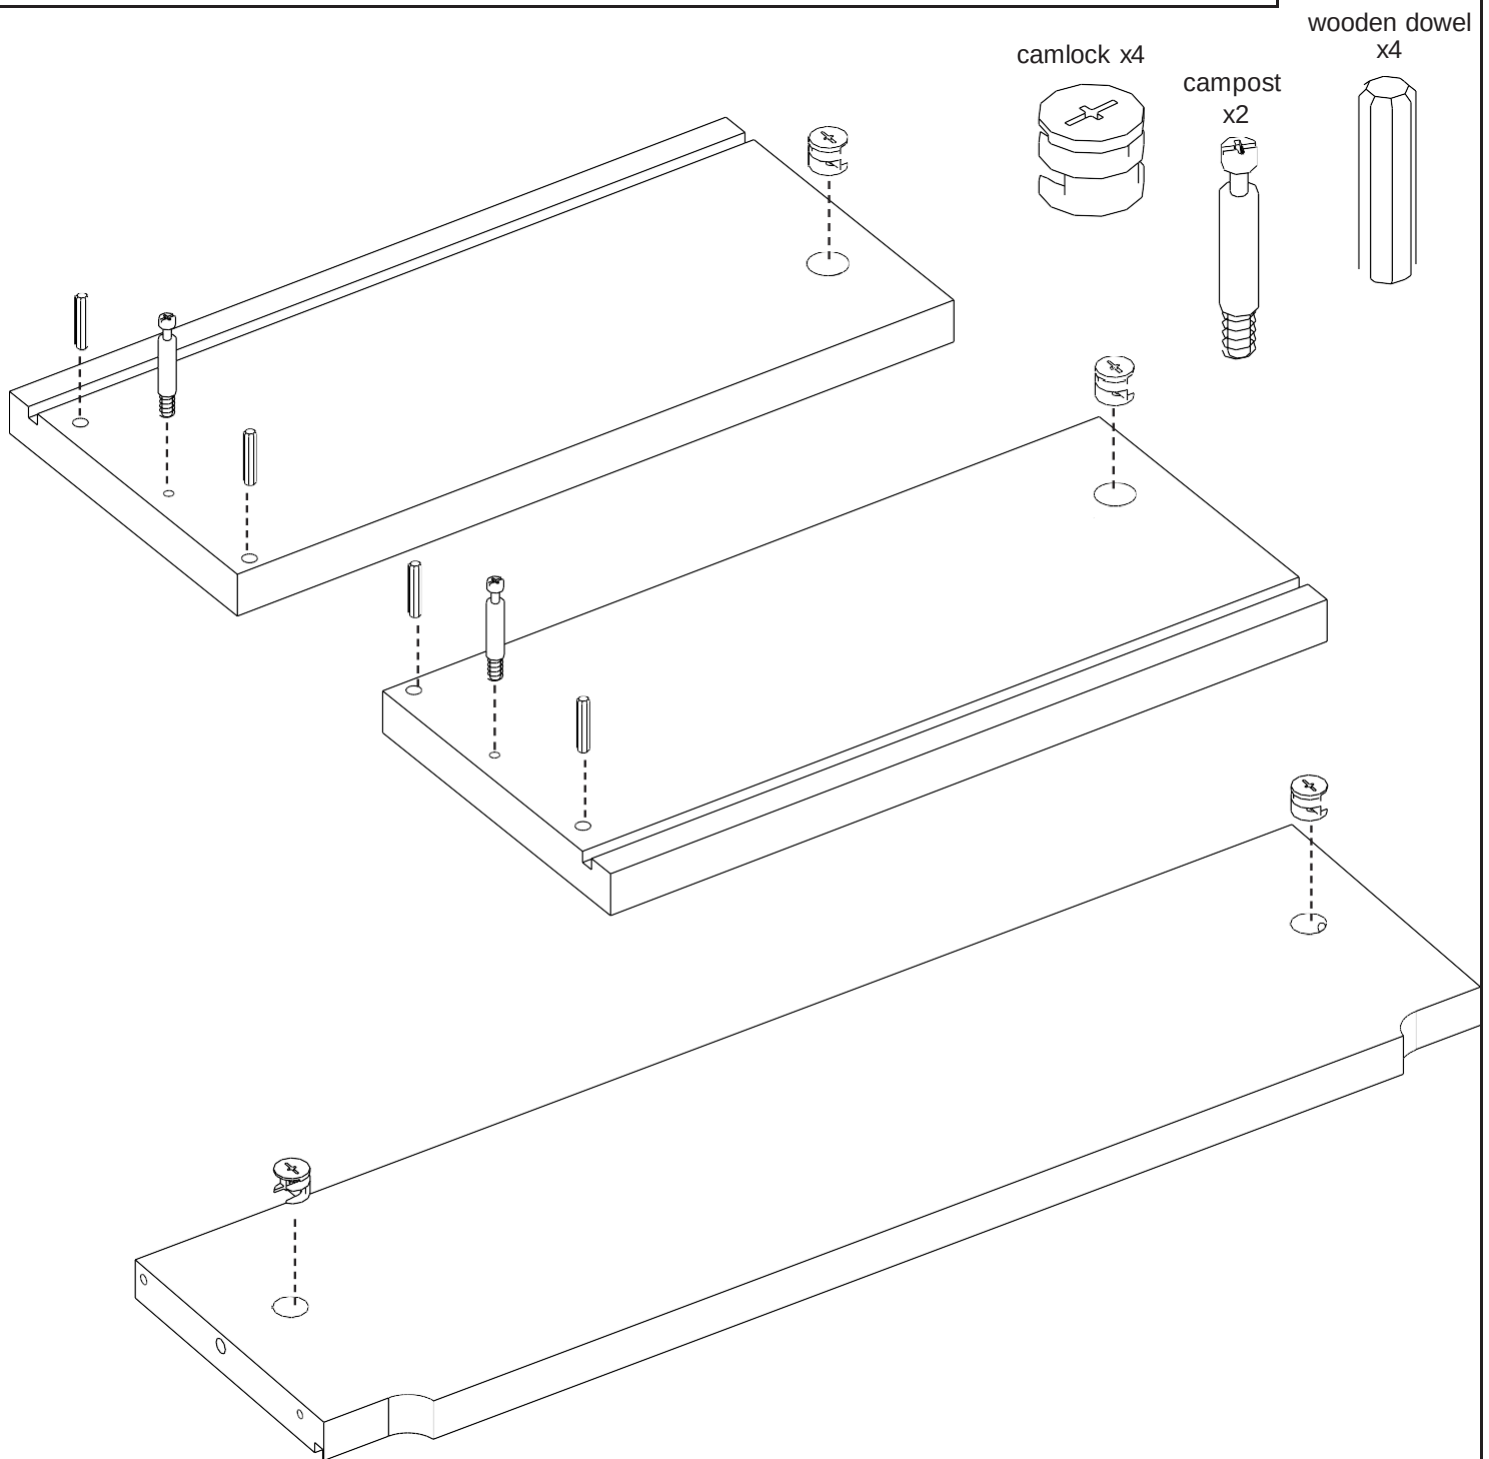

Step 2


Connect the side panels to the back.

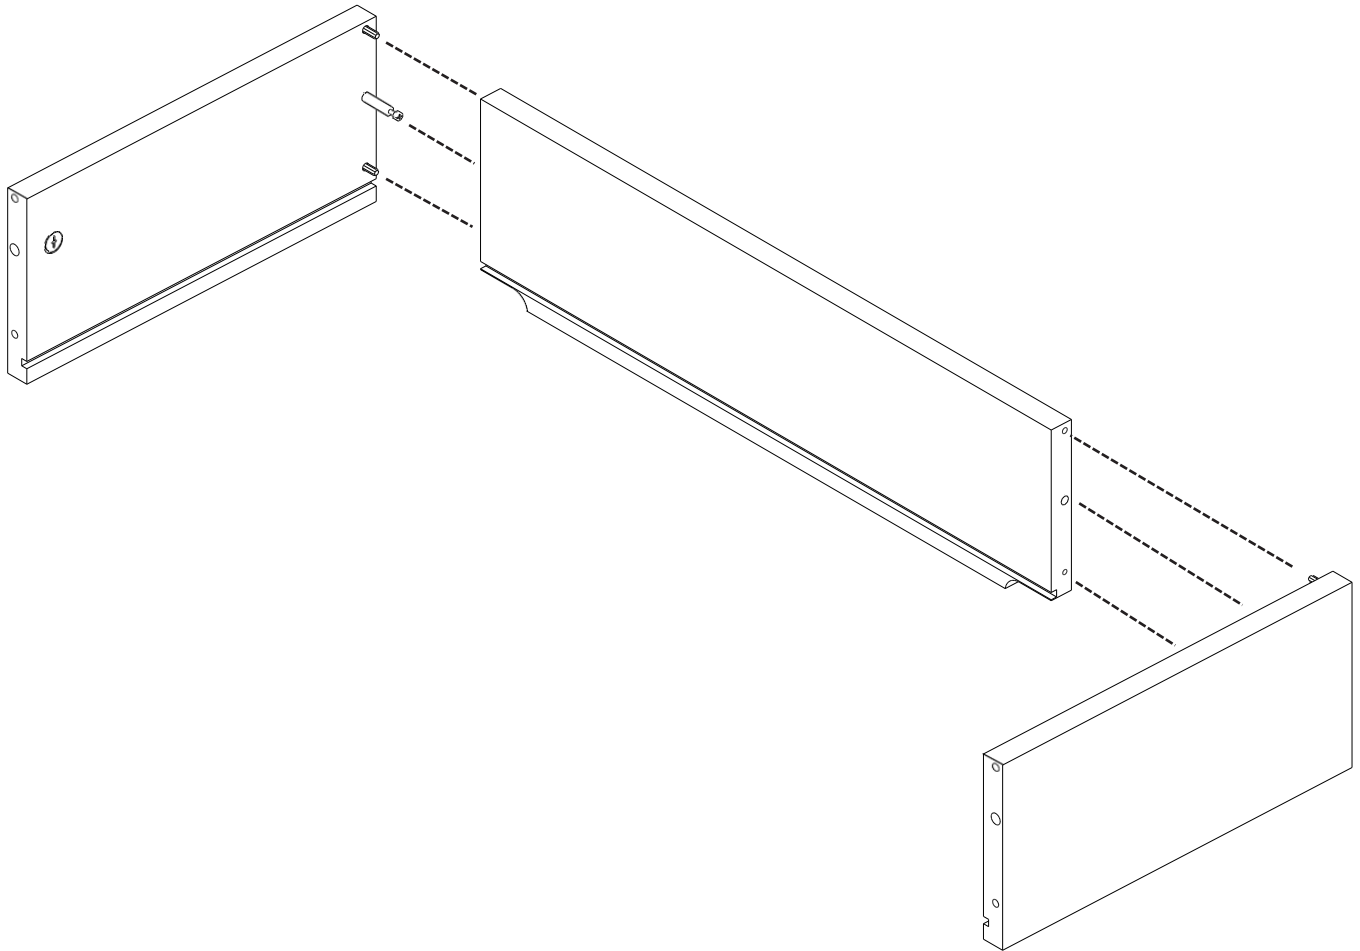




Step 3

Tighten both cam locks by turning them 180°

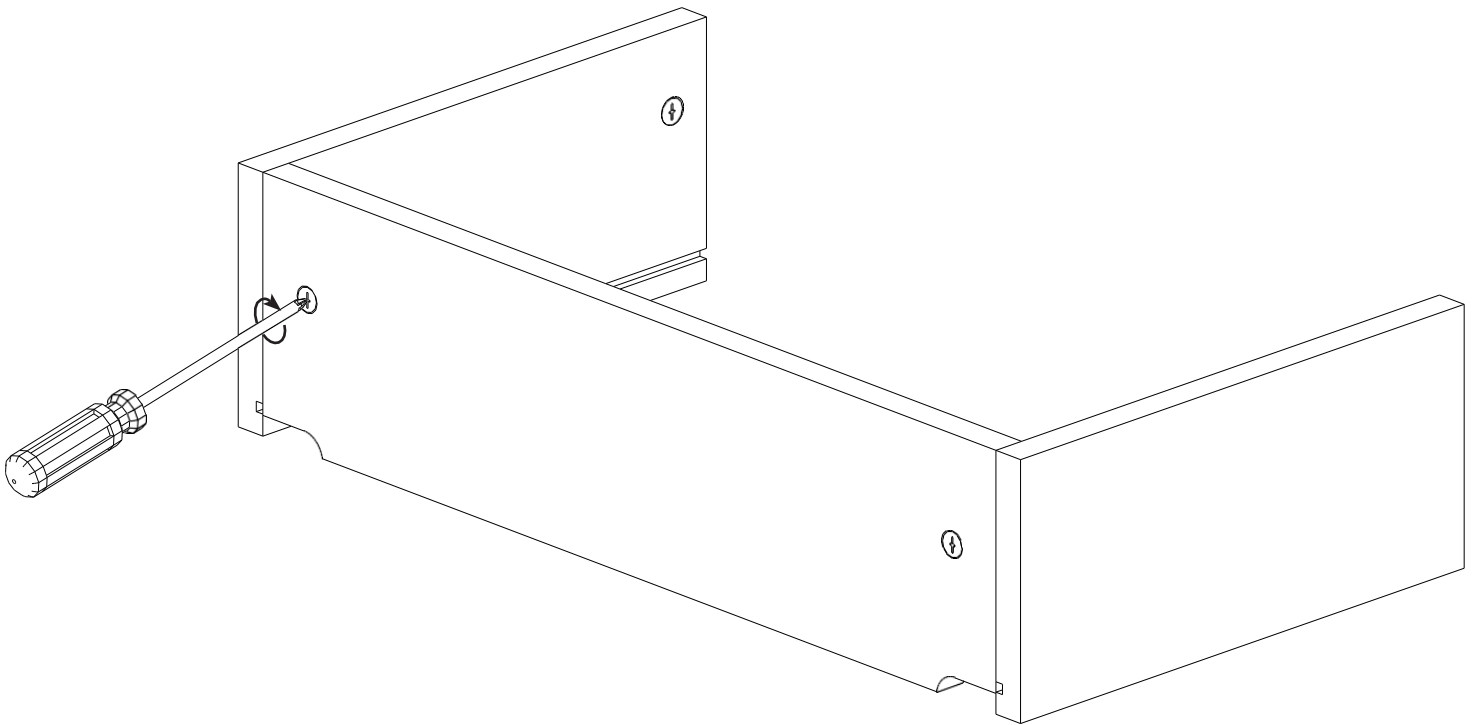

Step 4

Slide the drawer bottom in

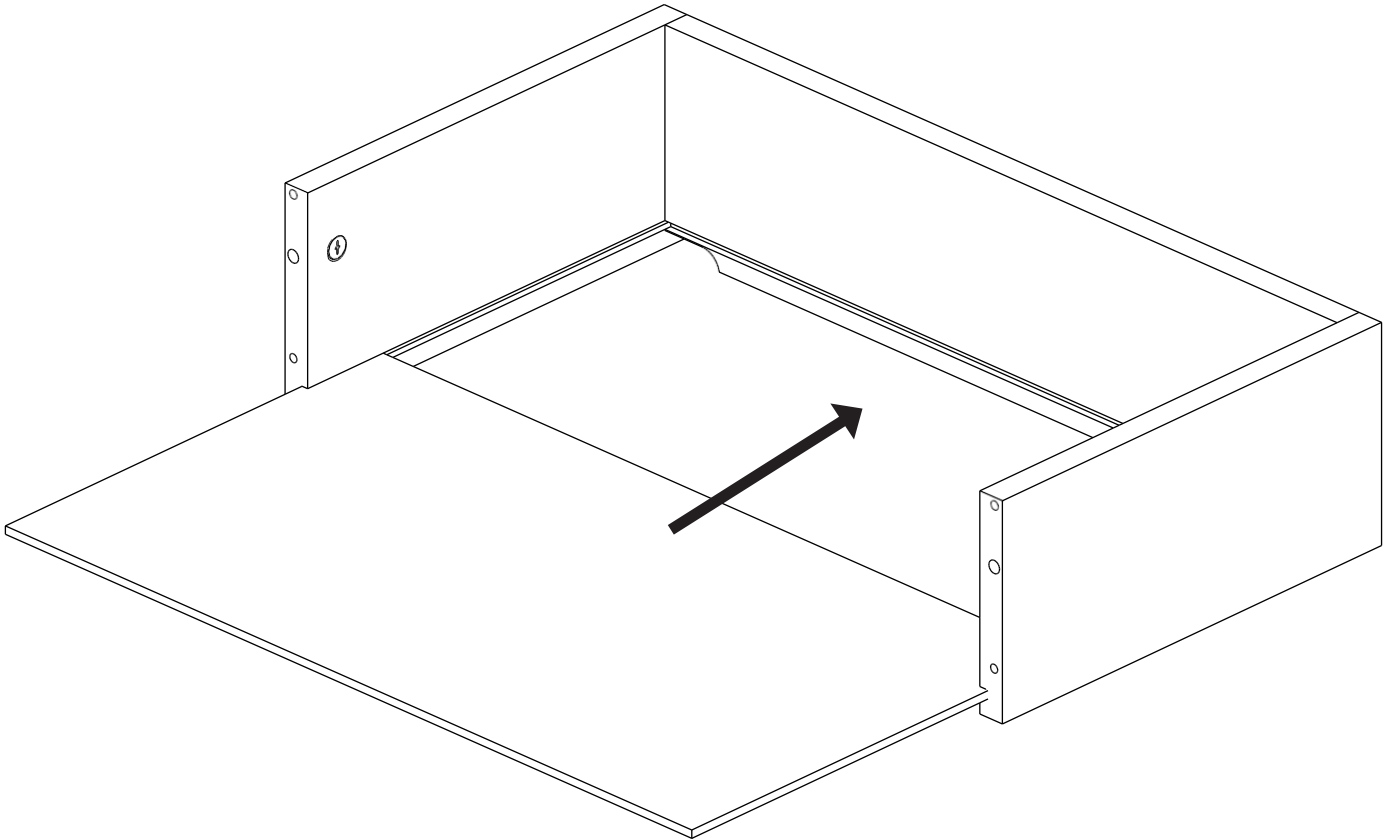




Step 5

Using the parts from ALT-DF, if using a bar pull, drill a hole through the two outside guide holes. If using a knob, drill a hole through the middle guide hole.


Drill bit

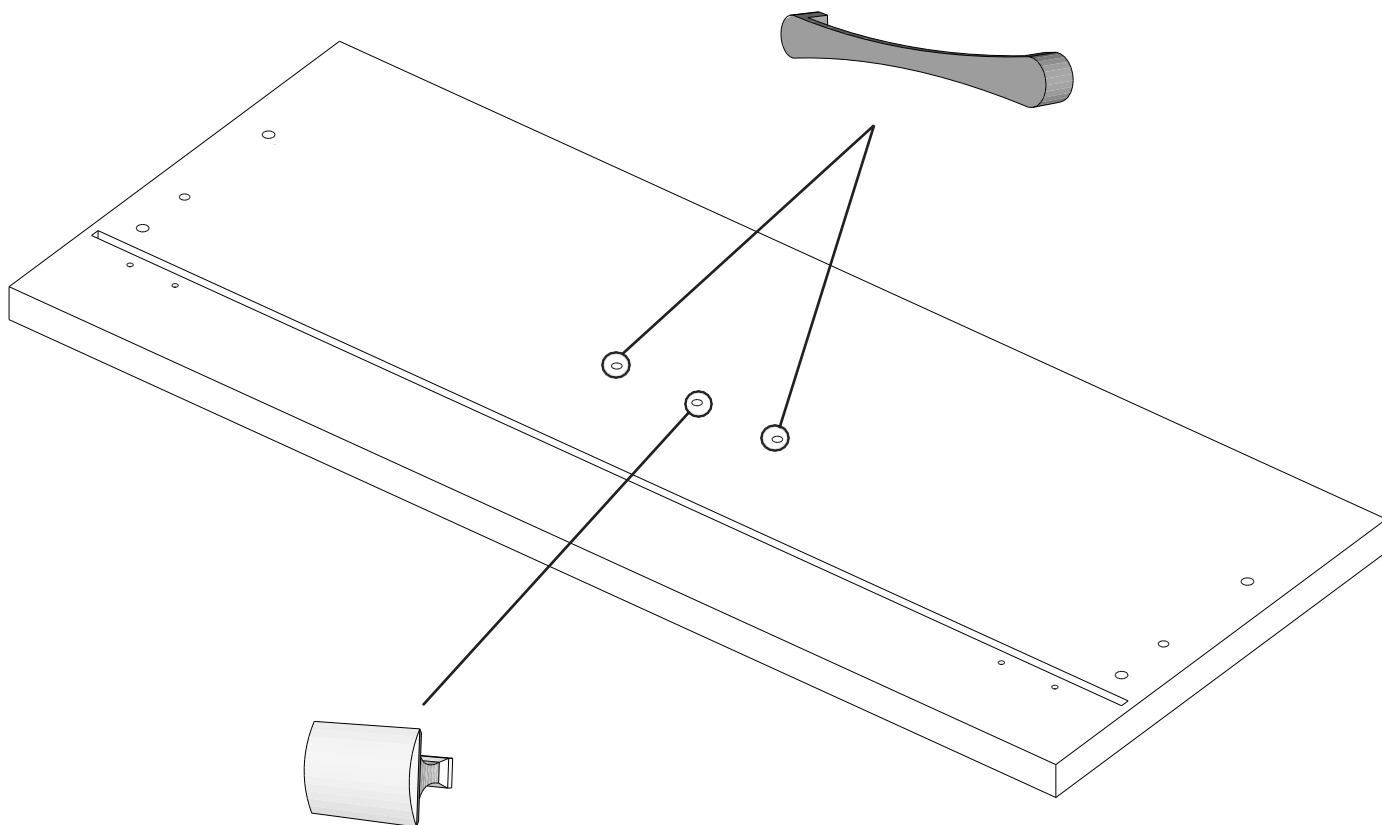



Step 6


Insert cam locks and camposts into drawer front as shown below.

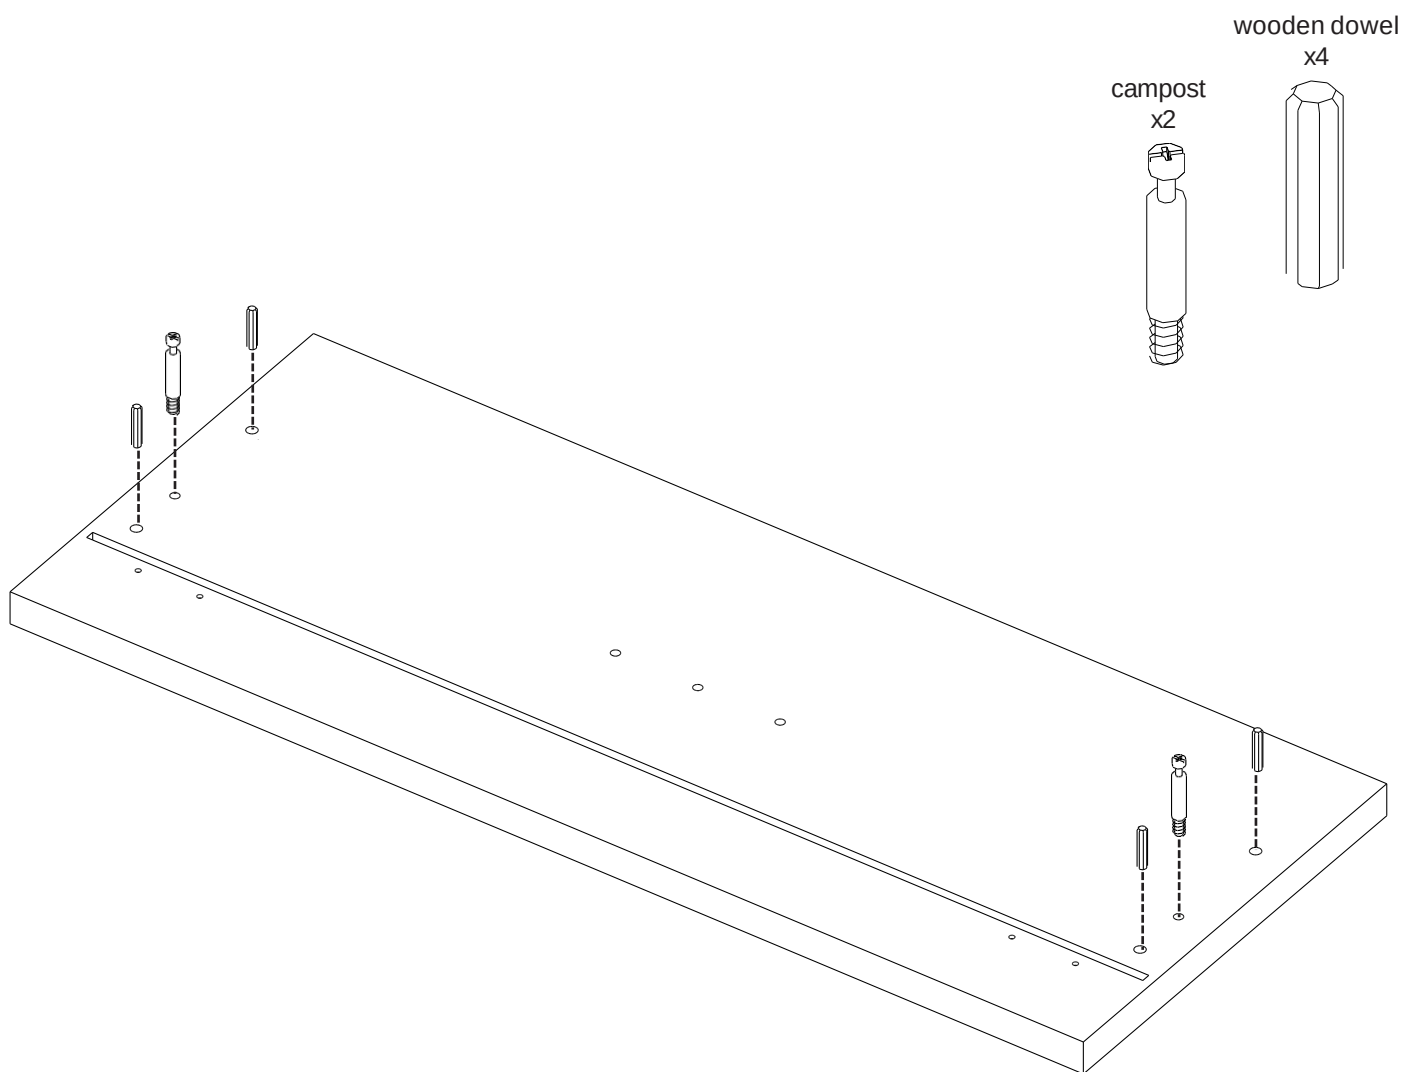




Step 7

Connect drawer front to drawer box.

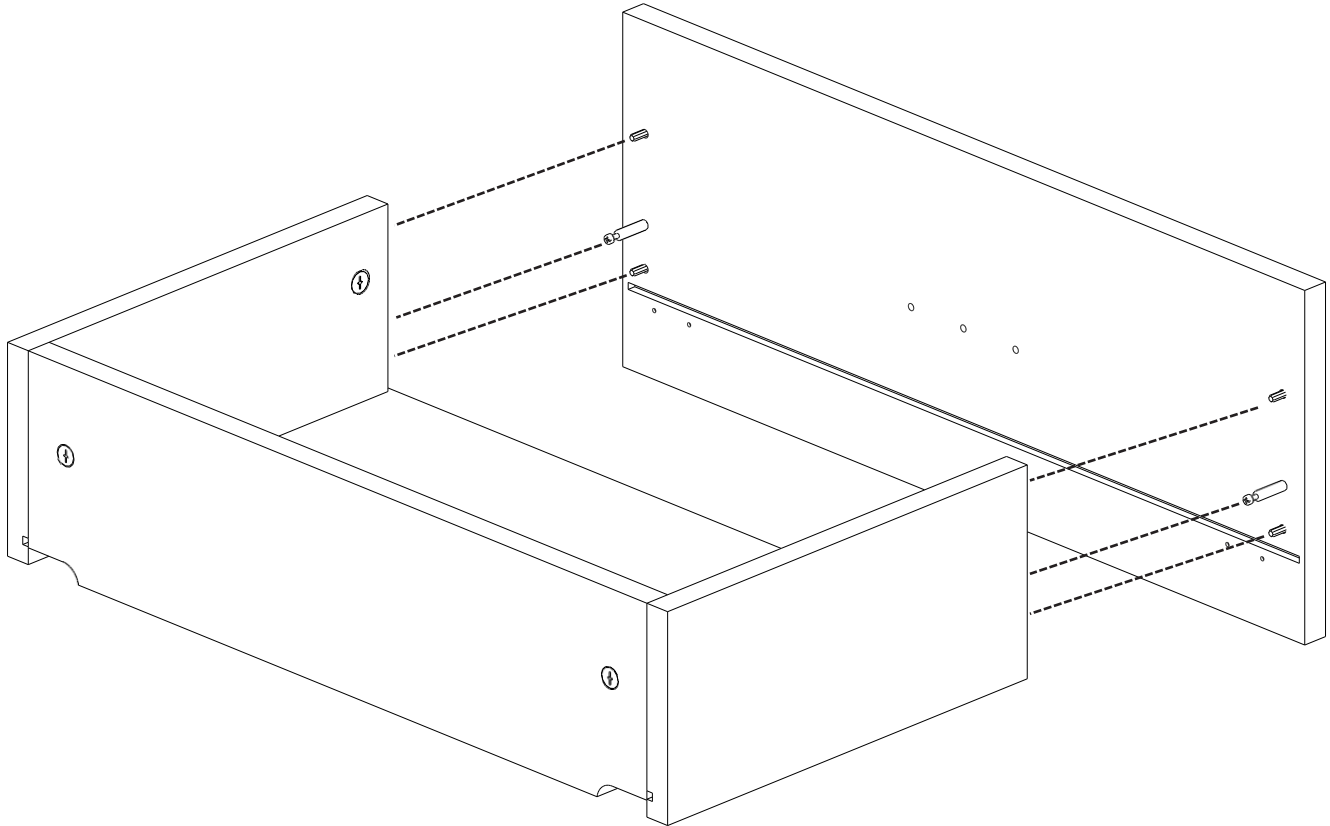

Step 8

Tighten cam locks on both sides.

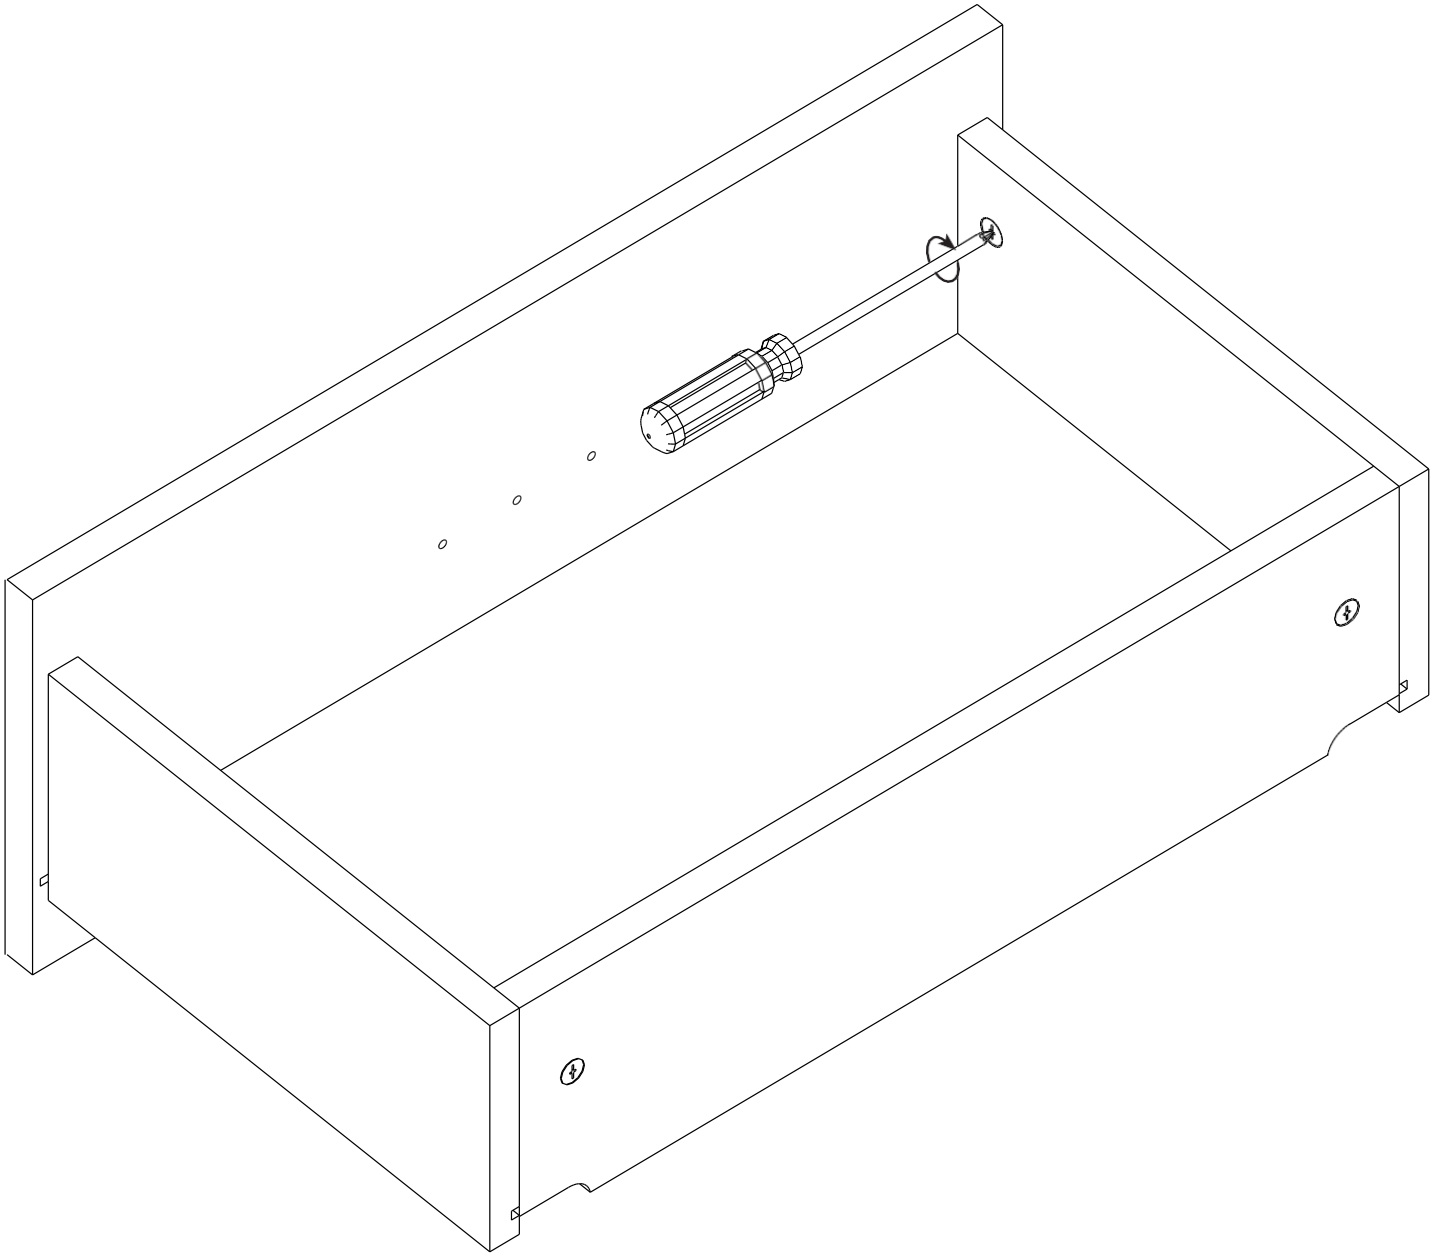







Step 9

Flip over the drawer and put the lock for slides in each corner and screw in as shown. Repeat steps 2 - 9 for all drawers.

lock for slides R,x1, L,x1


screw for lock x4

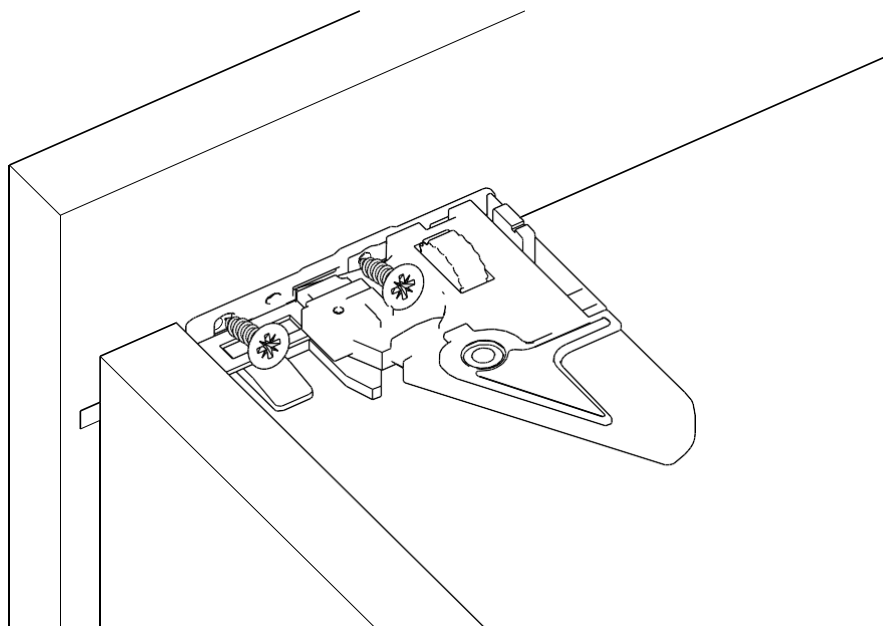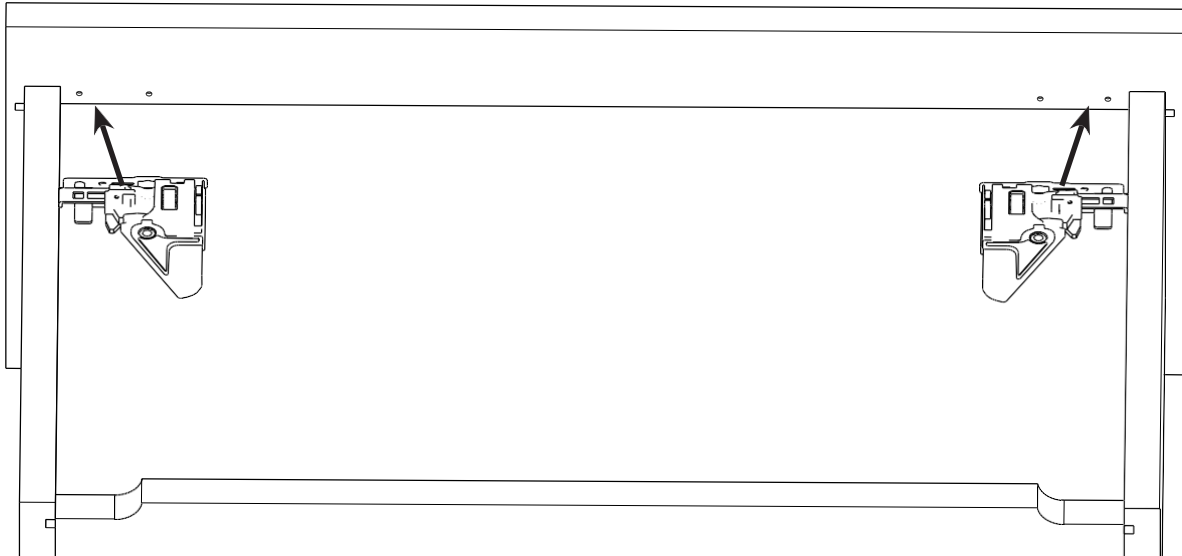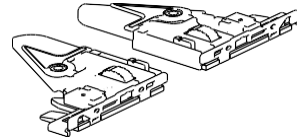



Step 10

Insert the middle shelf by inserting screw dowels as shown and securing the shelf with the rafixes

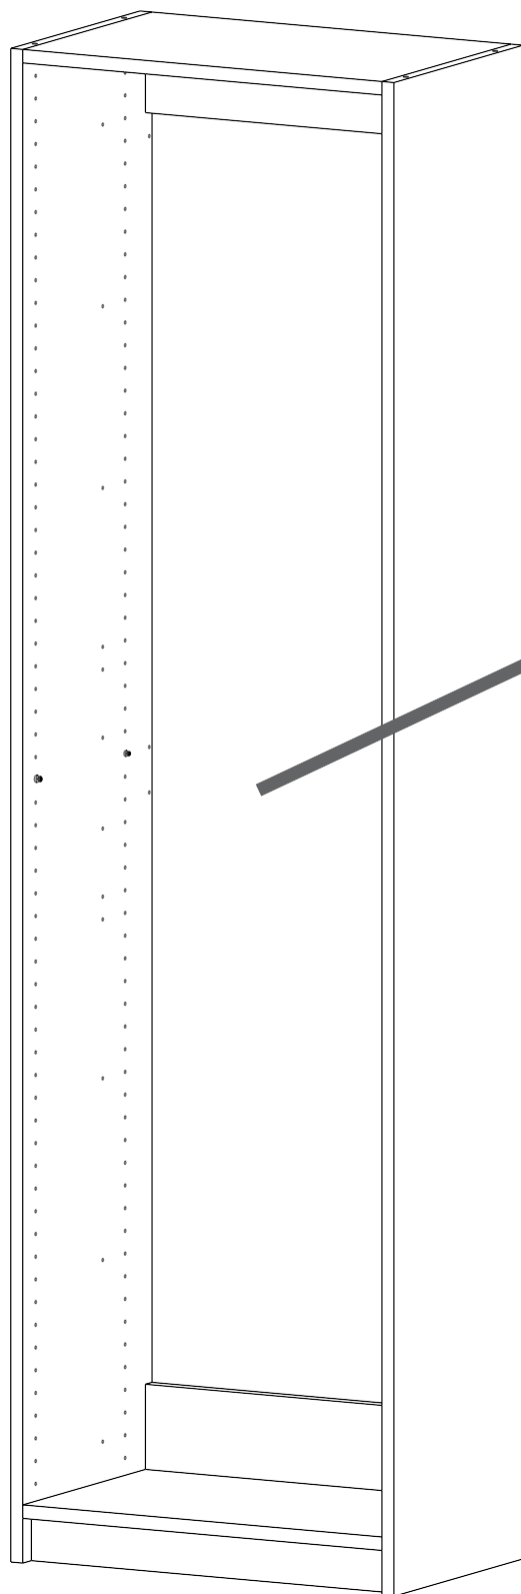


Screw dowel

x4



Holes are on same level with top of cleat holes


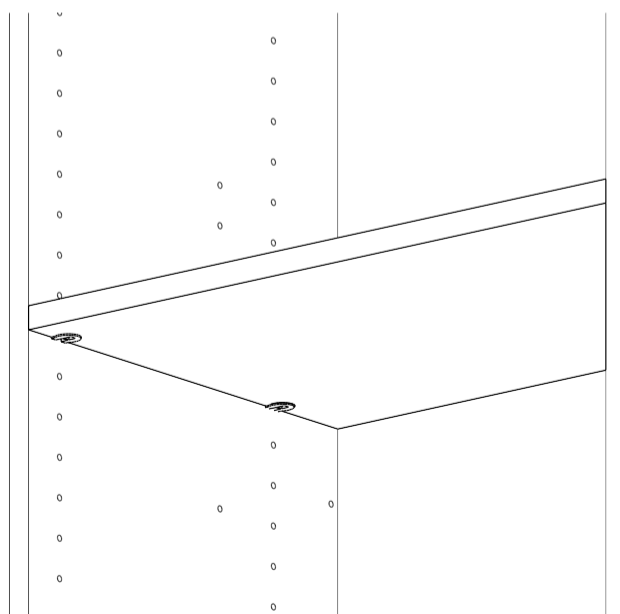




Step 11


Attach the drawer slides on either side as shown

screws for
slide x4

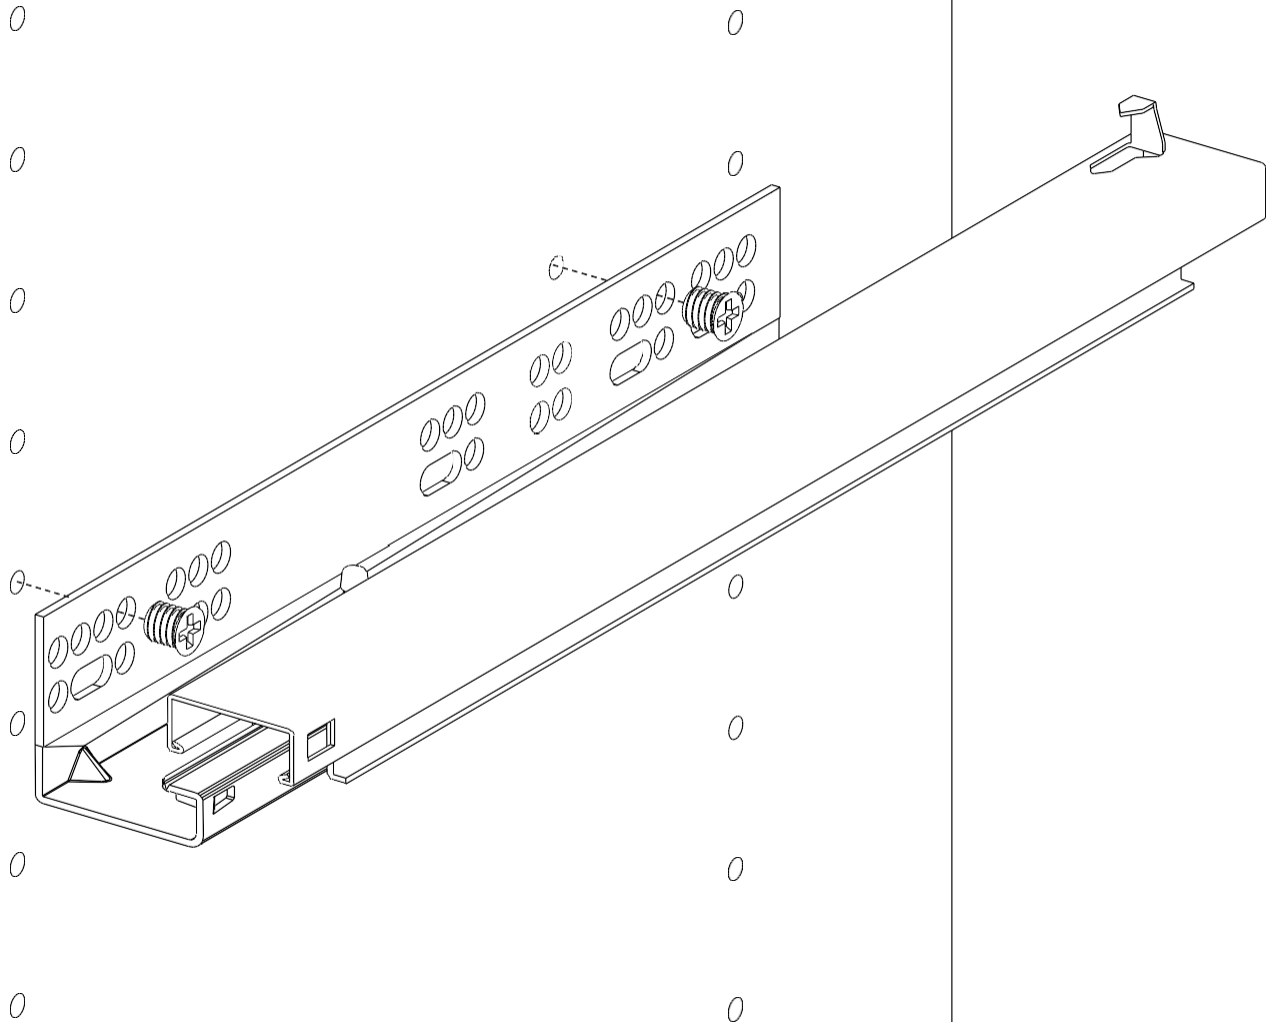

Step 12




Repeat for remaining drawer slides. Please note the different placements for the 4 drawer and 5 drawer configuration as shown below.

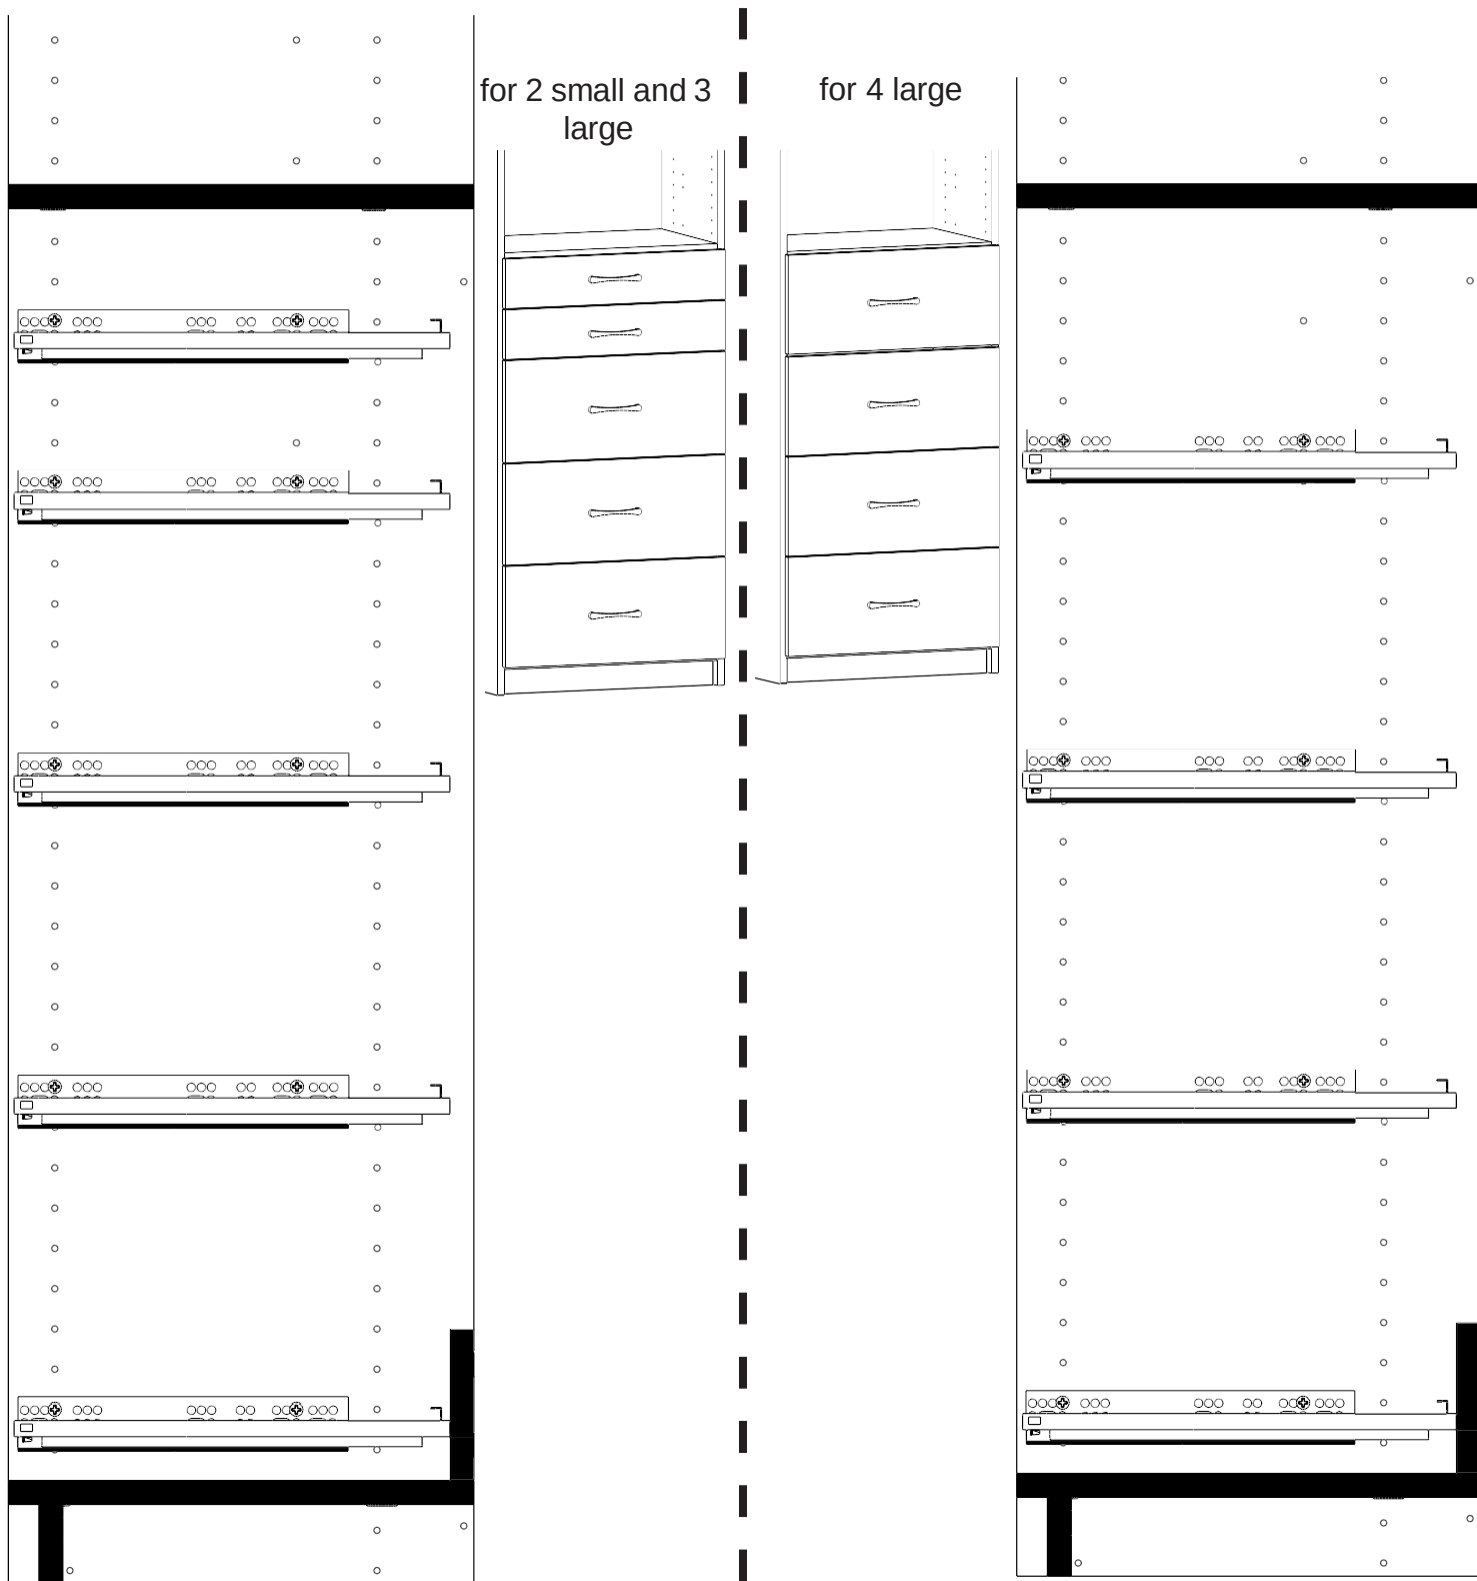





Step 13

Start with the bottom drawer slide.
Slide out the drawer slide and insert the drawer

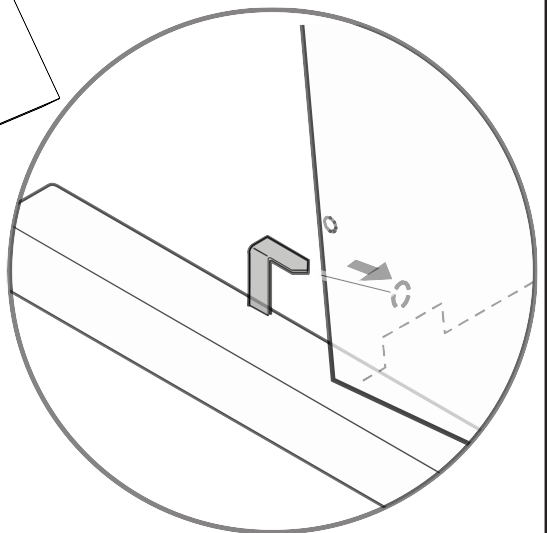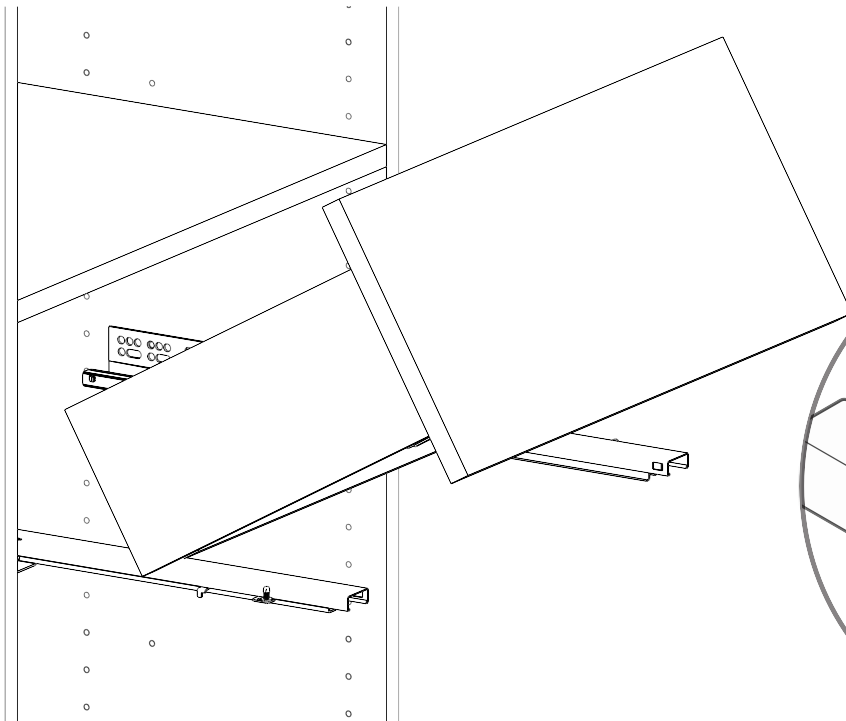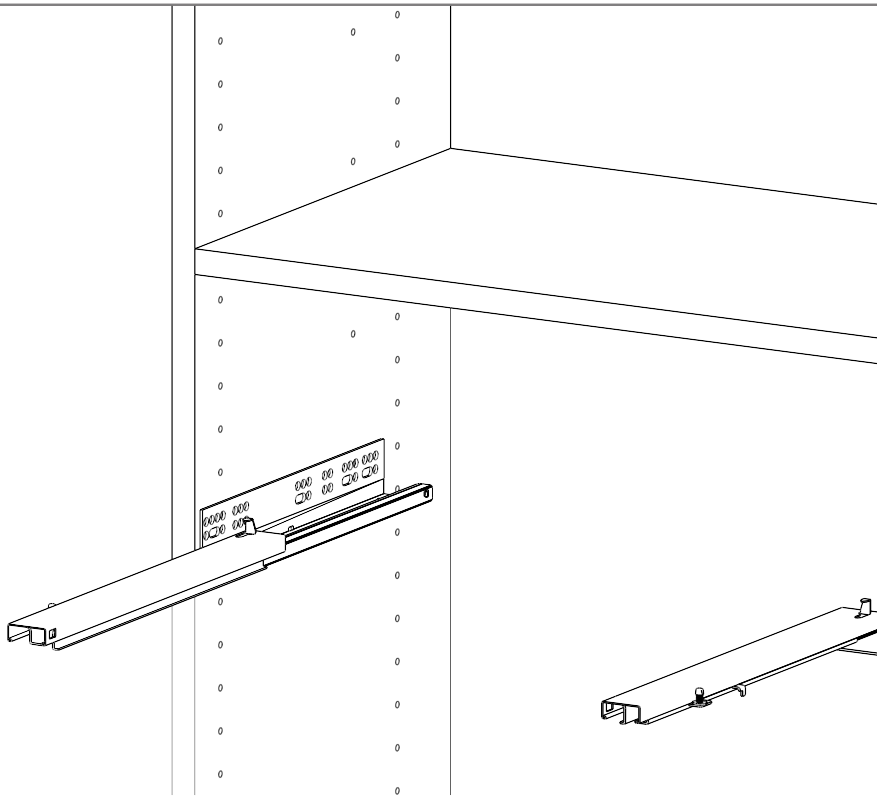

Step 14

From the underside click the slides into the lock and secure by turning the dial. Repeat for all the drawers

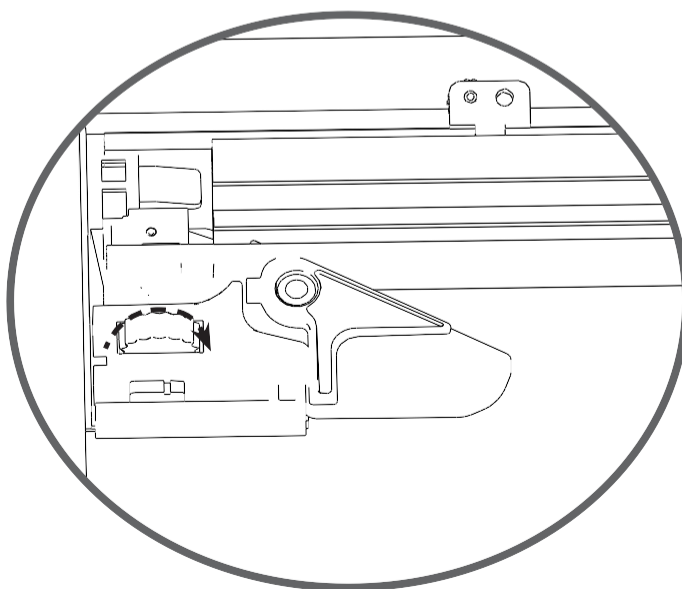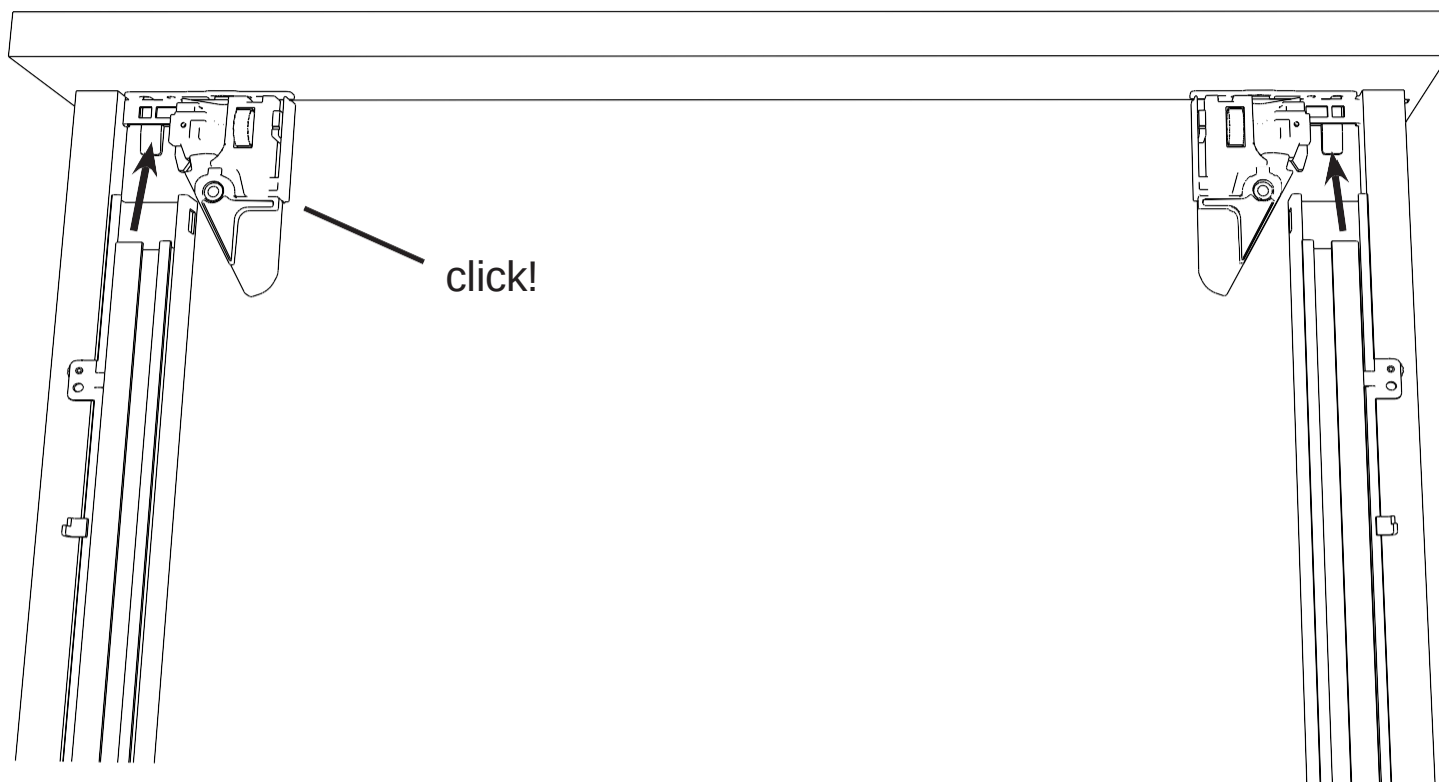



Step 15

Use a screw driver to screw in the knobs \ pulls in to the drawer front. Repeat steps 13 - 15 for all drawer

