



The
**CEDAR
PLANTER**
by **Greenes®**

MODEL#
RCPB1146H2
NOMINAL DIMENSIONS:
46" Long x 11" Wide x 7" High
EXACT OVERALL OUTSIDE:
45½" Long x 10⅛" Wide x 6⅞" High
INSIDE PLANTING AREA:
42⅞" Long x 9" Wide x 5½" Deep
PATENT PENDING

THE CEDAR PLANTER | ASSEMBLY INSTRUCTIONS

Questions? Email info@greenesfence.com or call 800-622-5510 Monday - Friday 9am-5pm EST

If staining or painting the planter box do so after assembly


PACKAGE CONTENTS



ROUTED SIDE BOARDS
45½" Long x 3⅜" High x 1⅝" Thick



DOVETAIL BOTTOM BOARDS
10" Long x 3⅞" High x 1⅝" Thick

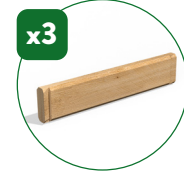


**DOVETAIL TOP BOARDS /
DOVETAIL CONNECTOR BOARD**
10" Long x 2⅞" High x 1⅝" Thick

1. START BY BUILDING THE PLANTER FRAME




Begin by placing two **Routed Side Boards** parallel to each other with the horizontal routing on the bottom.

2. BUILD THE FLOOR

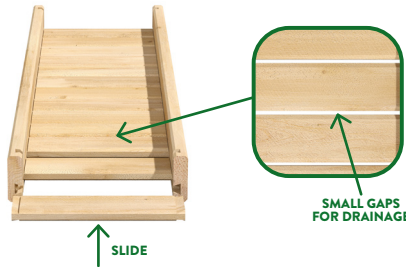

Slide thirteen **Dovetail Bottom Boards** into the routed edges of the **Routed Side Boards** to complete the floor. Make sure to leave small gaps between the **Dovetail Bottom Boards** for drainage.

3. COMPLETE THE BOTTOM LAYER

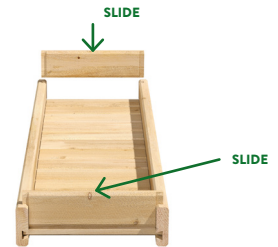


Once the floor is built - insert the last two **Dovetail Bottom Boards** into the **Routed Side Boards**.

4. BUILD THE TOP LAYER




Place two **Routed Side Boards** parallel to each other with the horizontal routing on the bottom. Next, slide the **Dovetail Connector Board** between them until it is positioned in the middle. The **Dovetail Connector Board** holds the Top Layer together.

5. CONNECT THE TOP LAYER TO THE BOTTOM LAYER

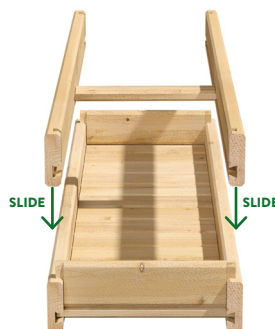

Slide the Top Layer over the ends of the **Dovetail Bottom Boards** to connect it with the Bottom Layer.

6. COMPLETE THE PLANTER

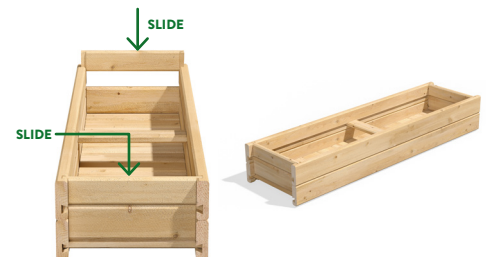

Lastly, insert the **Dovetail Top Boards** into the **Routed Side Boards**. Plant and enjoy!