



Installation Instructions for 1" Industrial Wall/Ceiling Bracket

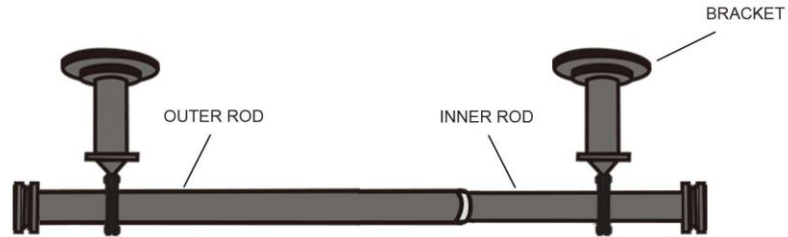

- 1** Place brackets against ceiling at desired locations. Mark screw holes with a pencil. Be sure marks are level across opening. Keep in mind that at least one bracket will be mounted on inner rod and outer rod to prevent rod movement when sliding curtain.



- 2** If screws are going directly into wood trim or ceiling studs, drill a 1/8" pilot hole at pencil marks. If screwing into drywall, follow drywall anchor instructions at the bottom of the page.

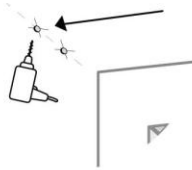

- 3** Insert screws through brackets, and tighten screws until you feel increased resistance. Ensure to mount at least one bracket, on each inner rod and outer rod to prevent rod movement when sliding curtain.



***Similar installation for wall brackets**