


WINDOW CURTAIN MEASURING GUIDE

CURTAIN ROD

Ideally, a curtain rod should be mounted 2" to 4" above the window trim.

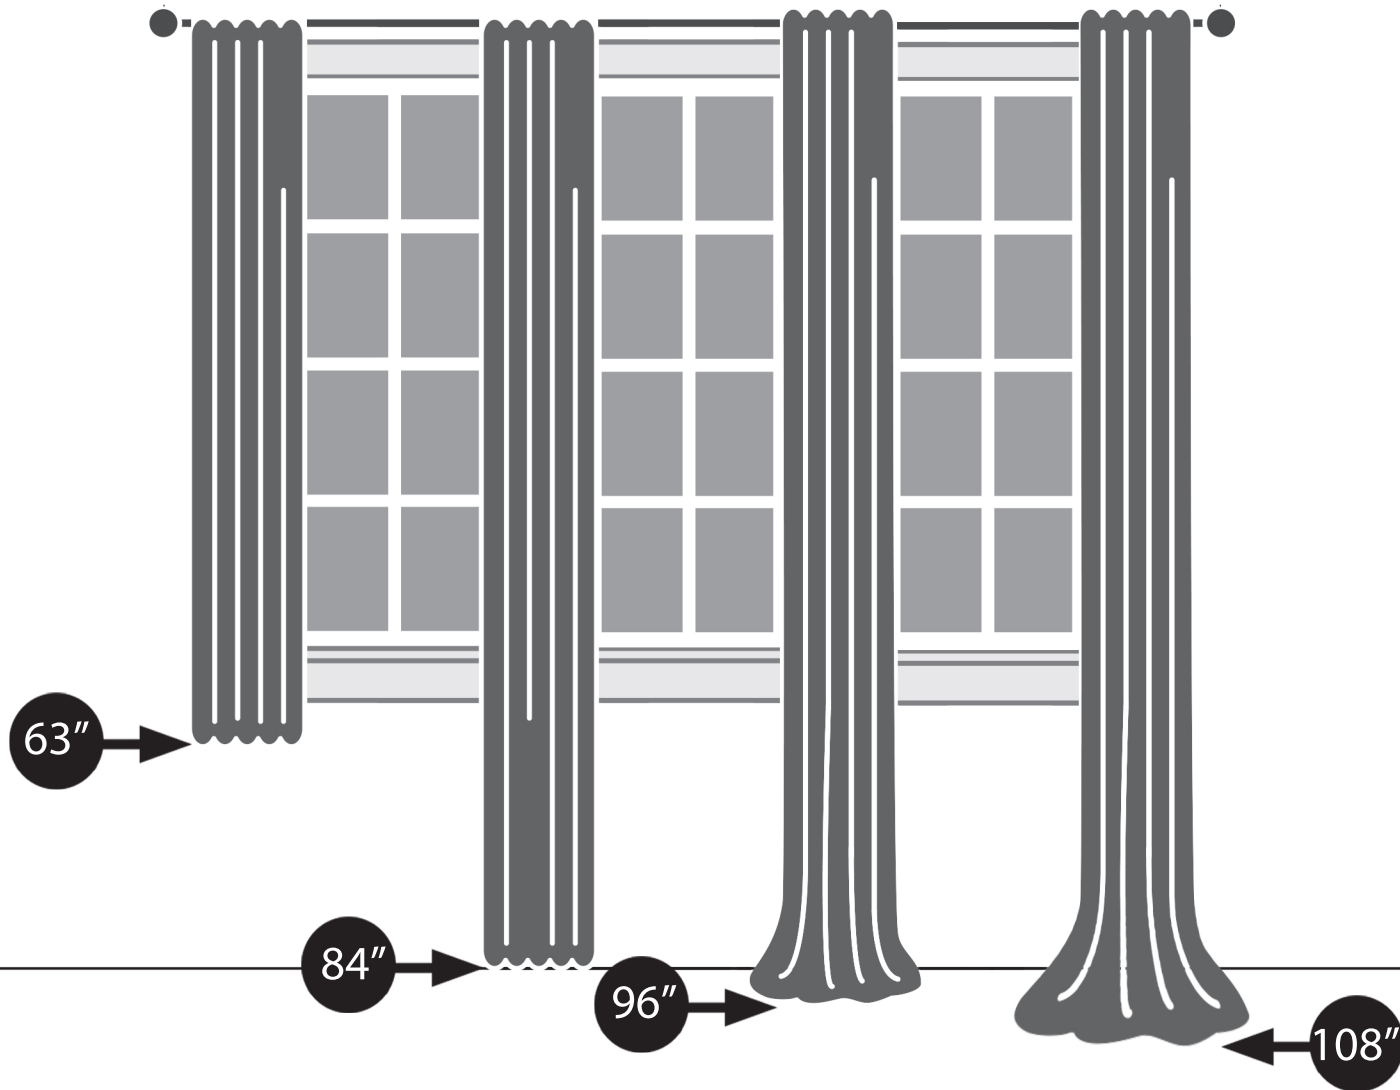

Panels

WINDOW WIDTH	YOU WILL NEED
Up to 29" Wide	1 Panel
30" to 39"	1 or 2 Panels
40" to 48"	2 Panels
49" to 72"	3 Panels
73" to 96"	4 Panels
97" to 120"	5 Panels
121" to 144"	6 Panels