



# ASSEMBLY INSTRUCTIONS

## LOFT BED WITH DESK

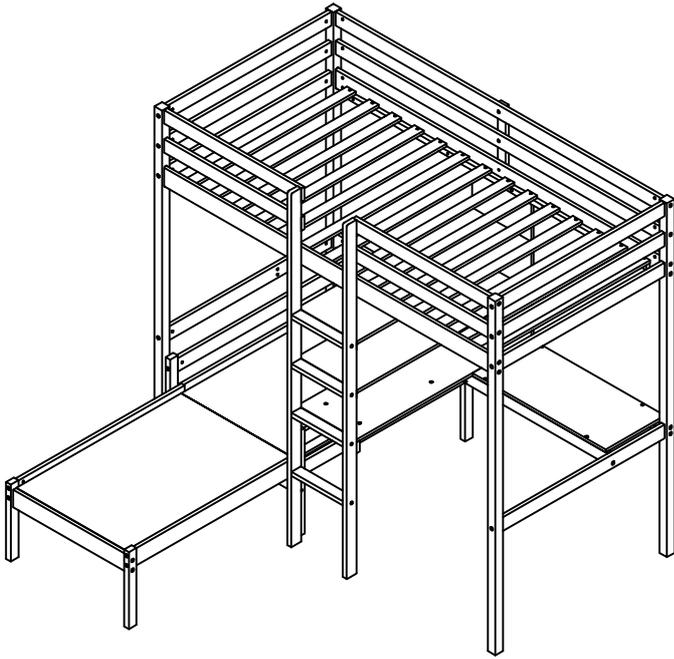

OR

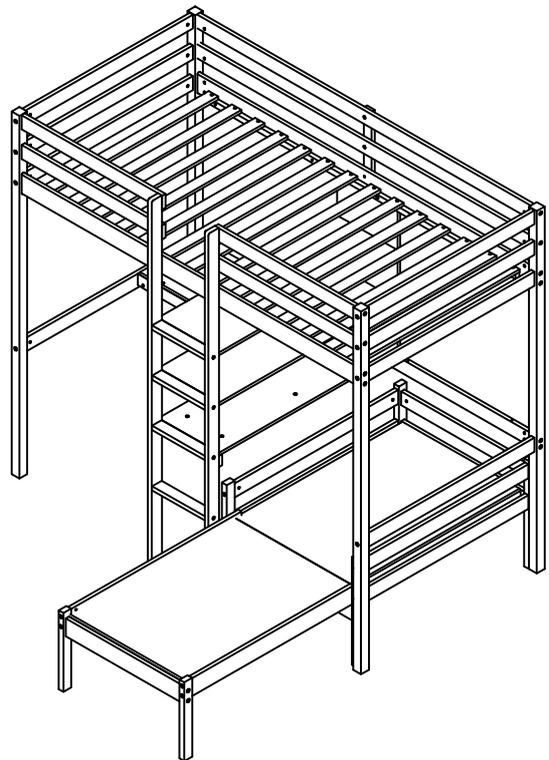

**WF292907/WF292908**

## SAFETY WARNINGS AND GENERAL NOTES:

Follow the information on the warnings on the loft bed end structure and on the carton. Do not remove the warning label from the bed. Always use the recommended size mattress on mattress support, or both, to help prevent the likelihood of entrapment or falls.

The top surface of the mattress must be at least 5\*inch (127mm) below the upper edge of the guardrail.

Do not allow children under 6 years of age to use the upper bunk.

Periodically check and ensure the guardrail, ladder and other components are in their proper position, free from damage, and all connectors are tight.

Do not allow horseplay on or under beds.

Always prohibit jumping on the bed.

Prohibit more than one person on upper bunk.

Always use the ladder for entering and leaving the upper bunk.

Do not use substitute parts. Contact the manufacturer or dealer for replacement parts.

Use of a night-tight may provide added safety precaution for a child using the upper bunk.

Always use guardrails on both long sides of the upper bunk.

If the loft bed will be placed next to a wall, the guardrail that runs the full length of the bed should be placed against the wall to prevent entrapment between the bed and the wall.

The use of water or sleep flotation mattresses is prohibited.

**STRANGULATION HAZARD**-Never attach or hang items to any part of the loft bed that are not designed for use with the bed.

Keep these instructions for future reference.

We recommend assembling your loft bed on the shipping carton to protect your floor or carpet.

Be certain all staples are out of the box before beginning assembly on the shipping carton.


**USE ONLY MATTRESSES WHICH ARE 74"-75" LONG AND 38 1/2" WIDE ON UPPER AND ON LOWER BUNKS. ENSURE THICKNESS OF MATTRESS DOES NOT EXCEED 6".**

**SURFACE OF MATTRESS MUST BE AT LEAST 5" (127MM) BELOW THE UPPER EDGE OF GUARDRAILS.**

Replacement Parts:






Replacement Parts, including additional guardrails, may be obtained from any of our (GIGACLOUD TECHNOLOGY (USA) INC. 18961 ARENTH AVENUE, CITY OF INDUSTRY , CA, 91748.) dealers

# Detail View


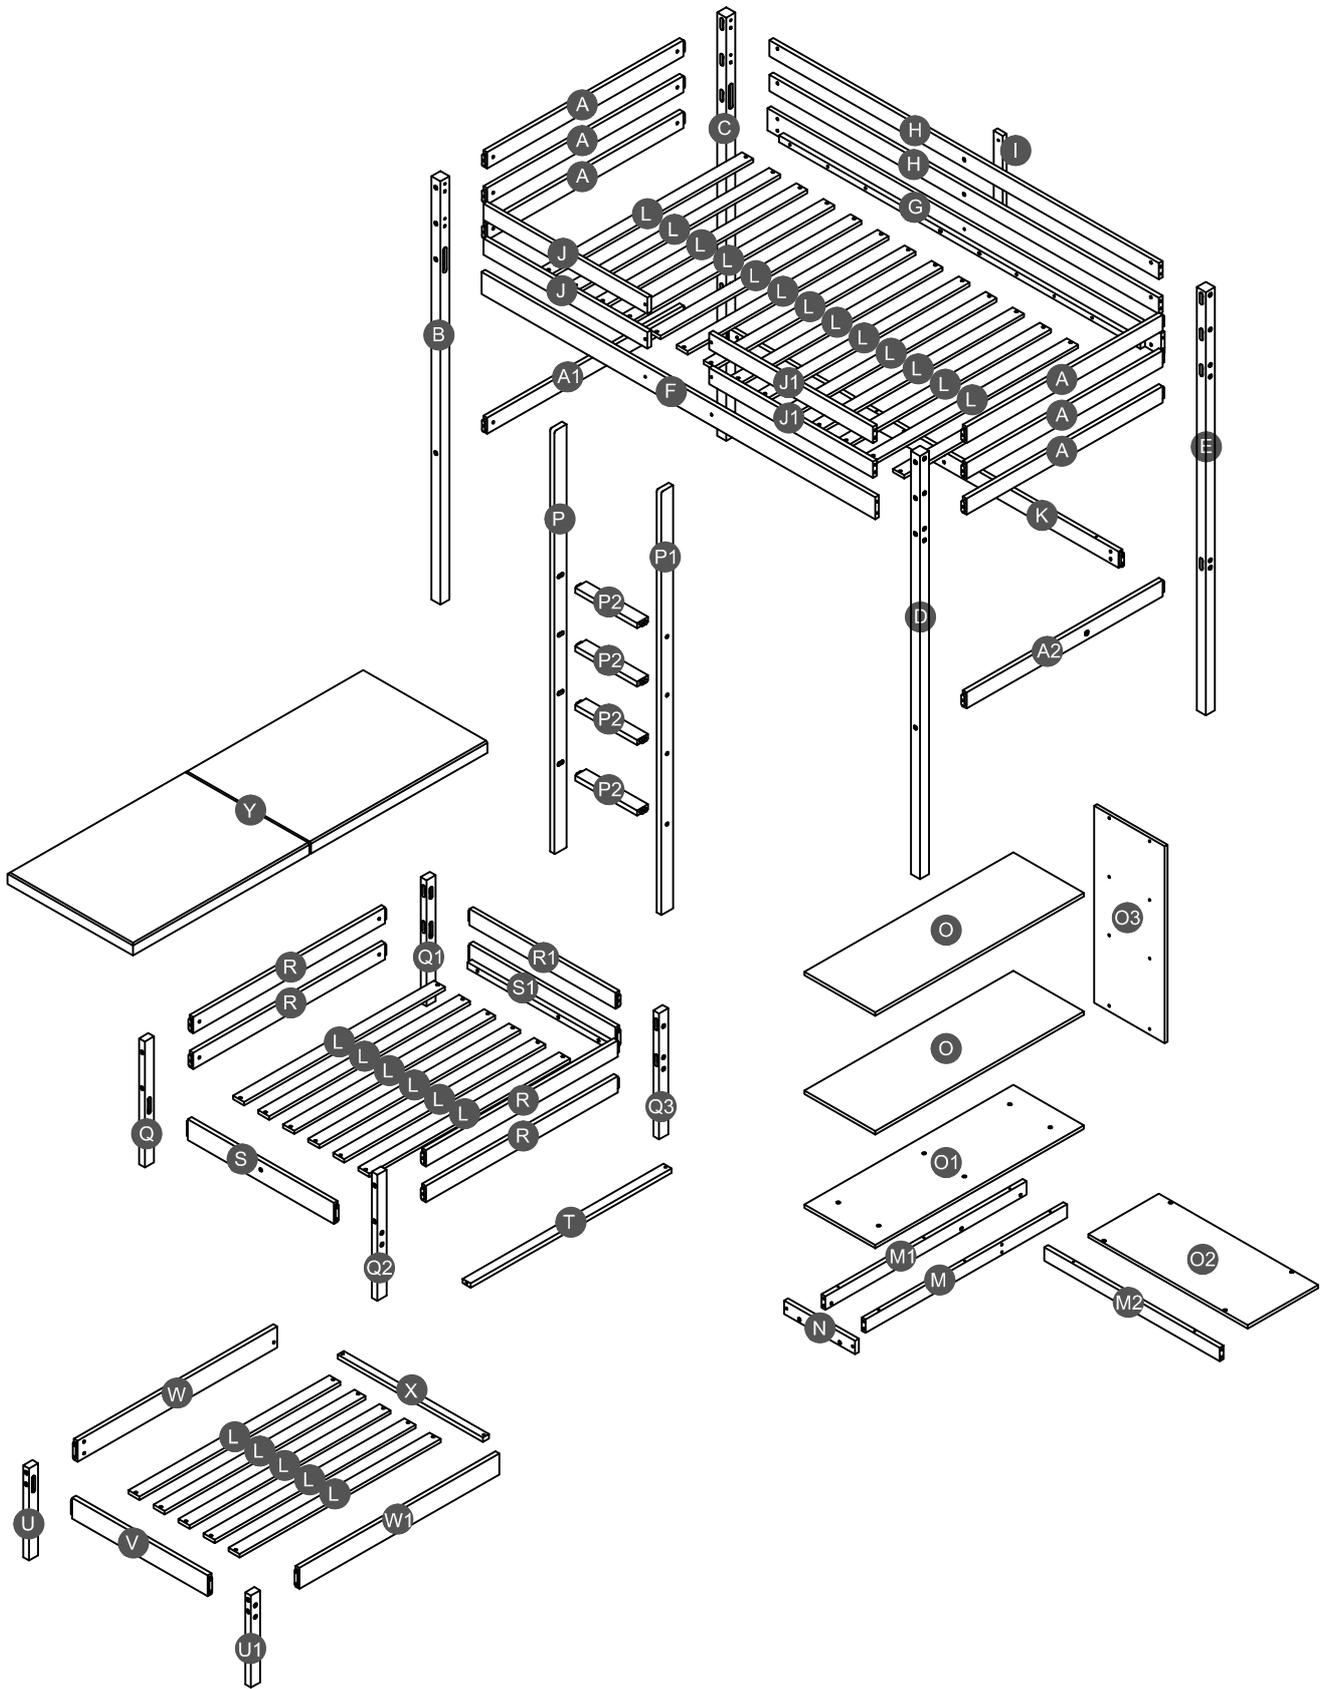


# Part List

## Hardware List WF292907








|  |   |   |
|--|---|---|
| <p><b>B</b></p>  <p>Leg (Left front ) - 1pc</p>       | <p><b>C</b></p>  <p>Leg (Left back ) - 1pc</p>             | <p><b>D</b></p>  <p>Leg (Right front ) - 1pc</p> |
| <p><b>E</b></p>  <p>Leg (Right back ) - 1pc</p>       | <p><b>F</b></p>  <p>Side rail (front) -1pc</p>             | <p><b>G</b></p>  <p>Side rail (back) -1pc</p>    |
| <p><b>H</b></p>  <p>Long guard rail (back) - 2pcs</p> | <p><b>K</b></p>  <p>Lower horizontal bar (Back) - 1pc</p> | <p><b>L</b></p>  <p>Slat - 14pcs</p>             |
| <p><b>P</b></p>  <p>Left side ladder - 1pc</p>        | <p><b>P1</b></p>  <p>Right side ladder - 1pc</p>          | <p><b>R</b></p>  <p>Horizontal bar - 4pcs</p>    |

## WF292908



|  |   |   |
|--|---|---|
| <p><b>A</b></p>  <p>Horizontal bar - 6pcs</p>       | <p><b>A1</b></p>  <p>Lower horizontal bar (Left) - 1pc</p>   | <p><b>A2</b></p>  <p>Lower horizontal bar (Right) - 1pc</p>    |
| <p><b>I</b></p>  <p>Vertical guard rail - 1pc</p>   | <p><b>J</b></p>  <p>Short guard rail (front-Left) - 2pcs</p> | <p><b>J1</b></p>  <p>Short guard rail (front-right) - 2pcs</p> |
| <p><b>L</b></p>  <p>Slat - 11pcs</p>                | <p><b>M</b></p>  <p>Lower horizontal bar - 1pc</p>           | <p><b>M1</b></p>  <p>Lower horizontal bar - 1pc</p>            |
| <p><b>M2</b></p>  <p>Lower horizontal bar - 1pc</p> | <p><b>N</b></p>  <p>Horizontal bar (front) - 1pc</p>         | <p><b>O</b></p>  <p>Shelf panel - 2pcs</p>                     |
| <p><b>O1</b></p>  <p>Top panel - 1pc</p>            | <p><b>O2</b></p>  <p>Top panel - 1pc</p>                     | <p><b>O3</b></p>  <p>Back panel - 1pc</p>                      |

# Part List


**WF292908**

|  |  |   |
|--|--|---|
| <p><b>P2</b></p>  <p>Step ladder - 4pcs</p>           | <p><b>Q</b></p>  <p>Short Leg (Left front)- 1pc</p>     | <p><b>Q1</b></p>  <p>Short Leg (Left back)- 1pc</p>  |
| <p><b>Q2</b></p>  <p>Short Leg (Right front)- 1pc</p> | <p><b>Q3</b></p>  <p>Short Leg (Right back)- 1pc</p>    | <p><b>R1</b></p>  <p>Horizontal bar - 1pc</p>        |
| <p><b>S</b></p>  <p>Short side rail (Front) -1pc</p>  | <p><b>S1</b></p>  <p>Short side rail (Back) -1pc</p>    | <p><b>T</b></p>  <p>Lower horizontal bar - 1pc</p>   |
| <p><b>U</b></p>  <p>Short Leg (Left front)- 1pc</p>   | <p><b>U1</b></p>  <p>Short Leg (Left right)- 1pc</p>    | <p><b>V</b></p>  <p>Side rail (front) -1pc</p>       |
| <p><b>W</b></p>  <p>Horizontal bar (Left) - 1pc</p> | <p><b>W1</b></p>  <p>Horizontal bar (Right) - 1pc</p> | <p><b>X</b></p>  <p>Lower horizontal bar - 1pc</p> |
| <p><b>Y</b></p>  <p>Bottom mattress - 1pc</p>       |  |   |

## Hardware List WF292907

|   |   |   |
|---|---|---|
| <p><b>1</b></p>  <p style="text-align: center;">Ø8*30mm</p> <p style="text-align: center;">Wood dowel (6pcs)</p>             | <p><b>2</b></p>  <p style="text-align: center;">(Ø15)1/4"*100mm</p> <p style="text-align: center;">Hex-Head bolts (20pcs)</p>        | <p><b>3</b></p>  <p style="text-align: center;">(Ø15)1/4"*80mm</p> <p style="text-align: center;">Hex-Head bolts (44pcs)</p> |
| <p><b>4</b></p>  <p style="text-align: center;">(Ø12)1/4"*60mm</p> <p style="text-align: center;">Hex-Head bolts (20pcs)</p> | <p><b>5</b></p>  <p style="text-align: center;">(Ø12)1/4"*40mm</p> <p style="text-align: center;">Hex-Head bolts (8pcs)</p>          | <p><b>6</b></p>  <p style="text-align: center;">(Ø12)1/4"*30mm</p> <p style="text-align: center;">Hex-Head bolts (9pcs)</p>  |
| <p><b>7</b></p>  <p style="text-align: center;">(Ø12)1/4"*40mm</p> <p style="text-align: center;">Hex-Head bolts (10pcs)</p> | <p><b>8</b></p>  <p style="text-align: center;">1/4"*15 (9.5mm)</p> <p style="text-align: center;">Horizontal-Hole bolts (84pcs)</p> | <p><b>9</b></p>  <p style="text-align: center;">30*18*18*2mm</p> <p style="text-align: center;">Metal bracket (4pcs)</p>     |
| <p><b>10</b></p>  <p style="text-align: center;">(1/4")4.5*58mm</p> <p style="text-align: center;">Allen key (1pc)</p>       | <p><b>11</b></p>  <p style="text-align: center;">Ø3.5*15mm</p> <p style="text-align: center;">Wood screws (4pcs)</p>                 | <p><b>12</b></p>  <p style="text-align: center;">Ø4*30mm</p> <p style="text-align: center;">Wood screws (50pcs)</p>          |
| <p><b>13</b></p>  <p style="text-align: center;">Ø10*40mm</p> <p style="text-align: center;">Wood dowel (8pcs)</p>         |   |   |


### ASSEMBLY TOOLS REQUIRED ( NOT INCLUDED )



PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE  
POSITION WHEN YOU USE POWER TOOLS !

### STEP 1:


|              |   |              |   |
|--------------|---|--------------|---|
| <b>3</b>     |  | <b>8</b>     |  |
| <b>16PCS</b> |   | <b>16PCS</b> |   |

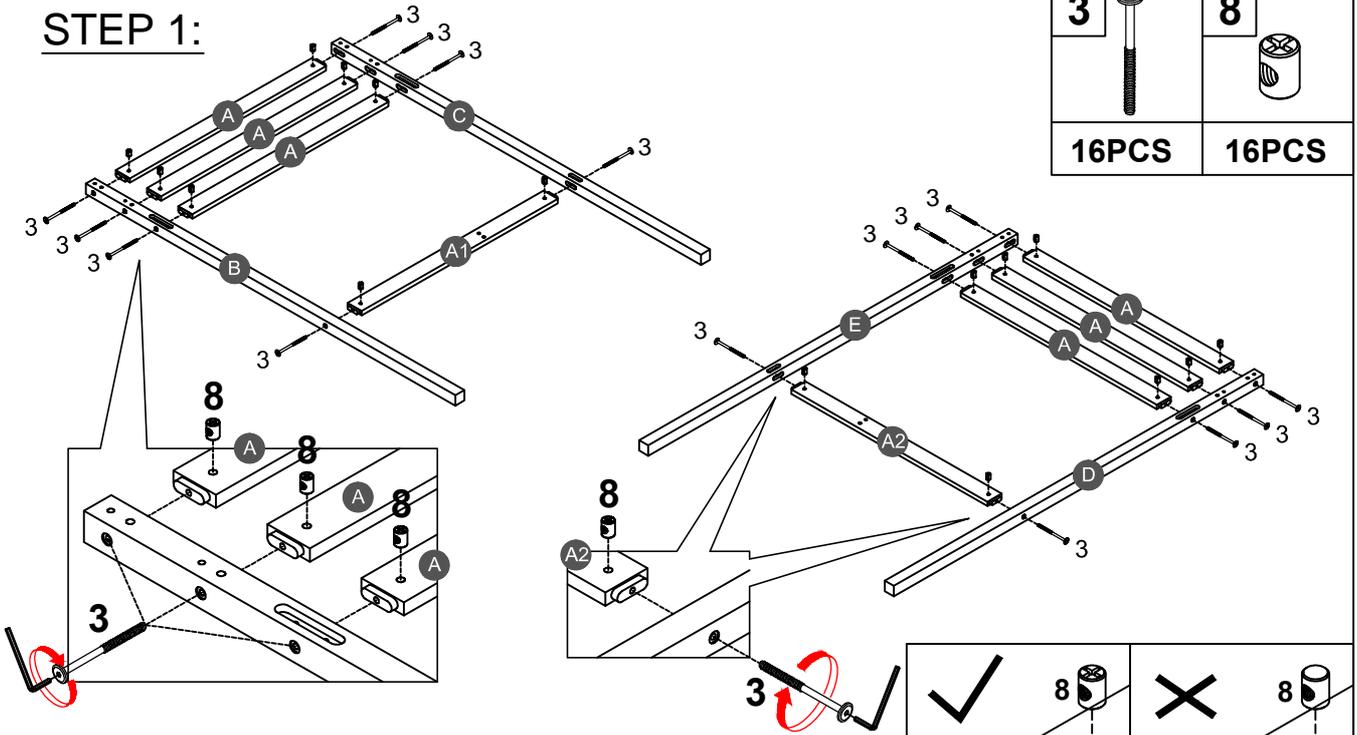


Note: Part 8 will face up with the "x" mark on it, otherwise it cannot be tightened

### STEP 2:

|              |   |              |   |             |   |
|--------------|---|--------------|---|-------------|---|
| <b>2</b>     |  | <b>8</b>     |  | <b>13</b>   |  |
| <b>16PCS</b> |   | <b>16PCS</b> |   | <b>4PCS</b> |   |

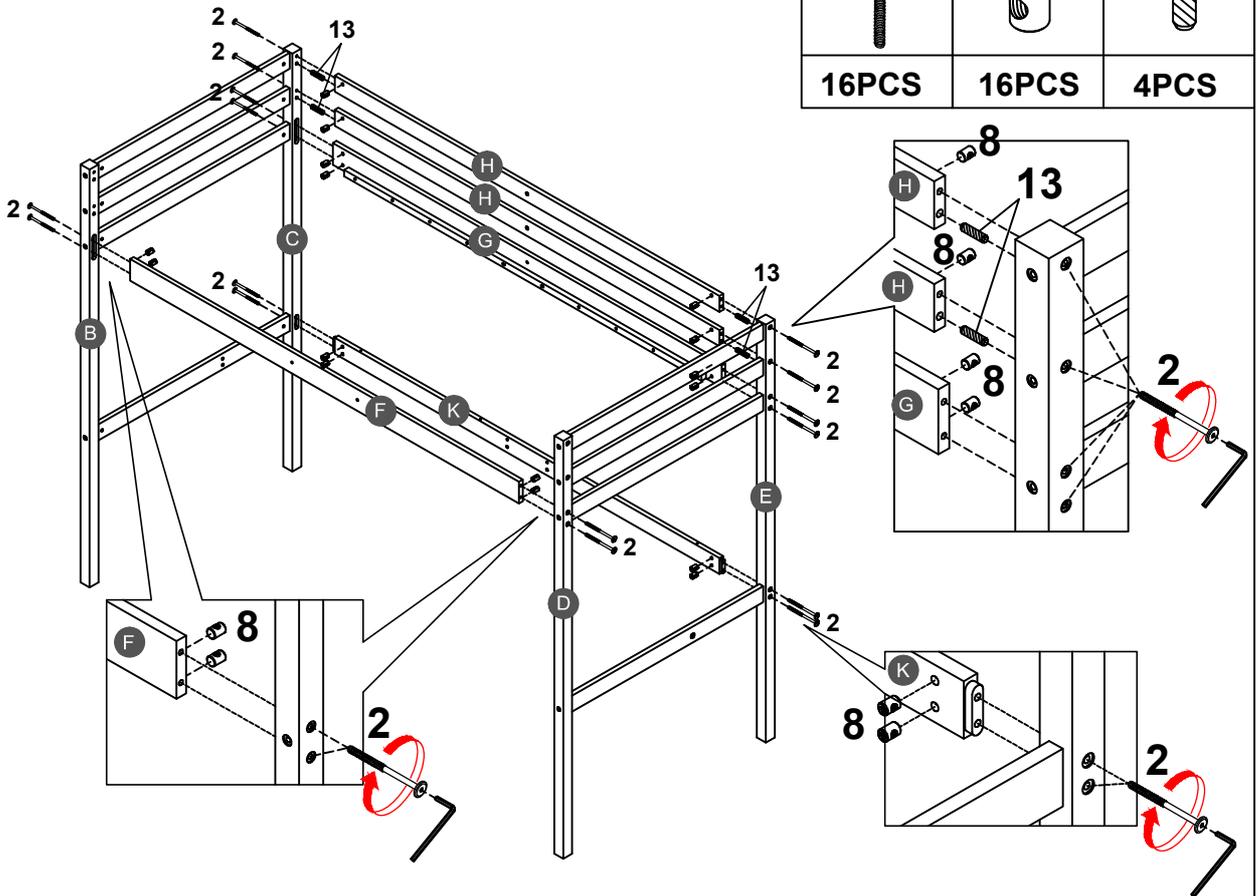


**STEP 3:**

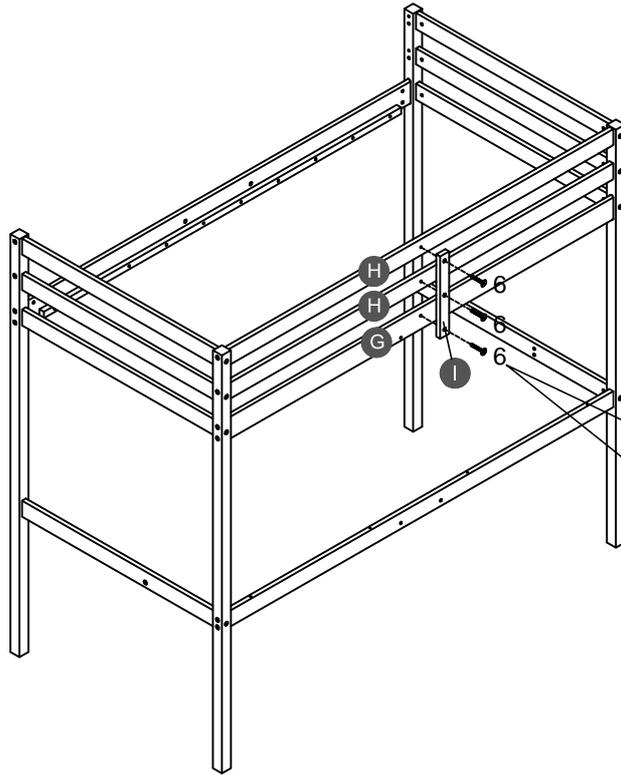


**6**



**3PCS**

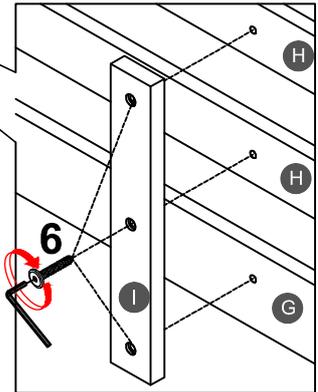

**STEP 4:**

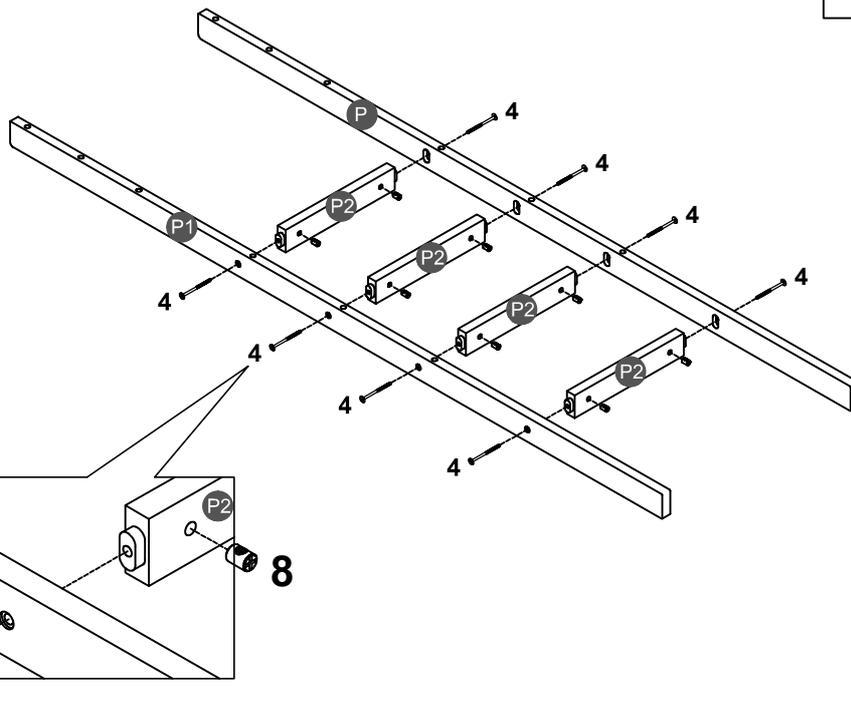

**4**



**8PCS**


**8**



**8PCS**


**STEP 5:**

|             |   |             |   |             |   |
|-------------|---|-------------|---|-------------|---|
| <b>5</b>    |  | <b>6</b>    |  | <b>9</b>    |  |
| <b>2PCS</b> |   | <b>4PCS</b> |   | <b>4PCS</b> |   |

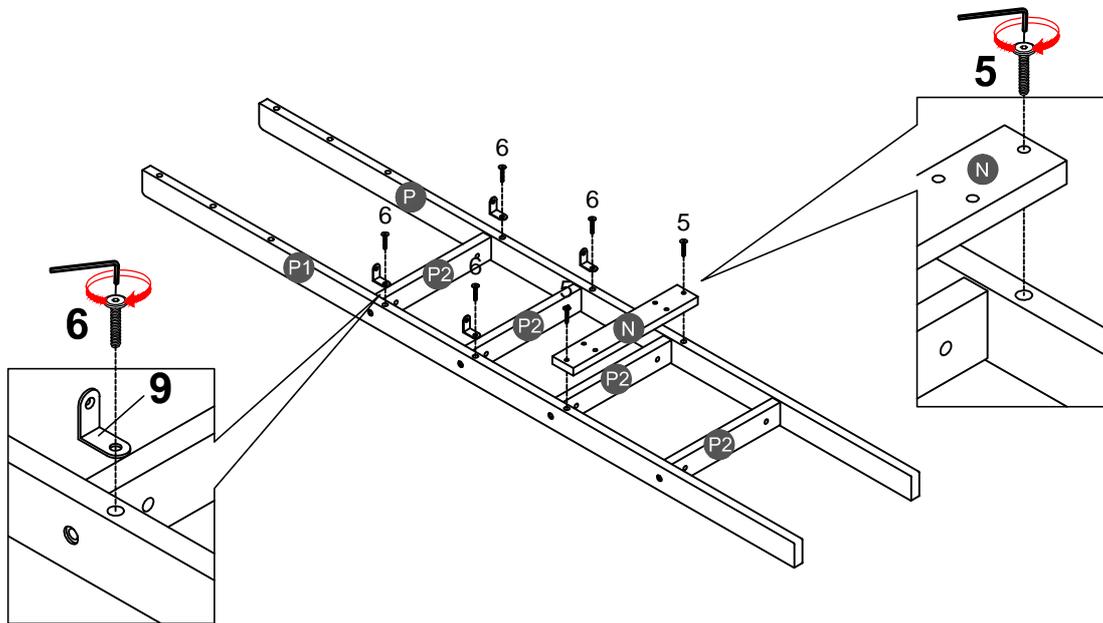


**STEP 6:**

|             |   |             |   |             |   |             |   |
|-------------|---|-------------|---|-------------|---|-------------|---|
| <b>2</b>    |  | <b>5</b>    |  | <b>8</b>    |  | <b>13</b>   |  |
| <b>4PCS</b> |   | <b>6PCS</b> |   | <b>4PCS</b> |   | <b>4PCS</b> |   |

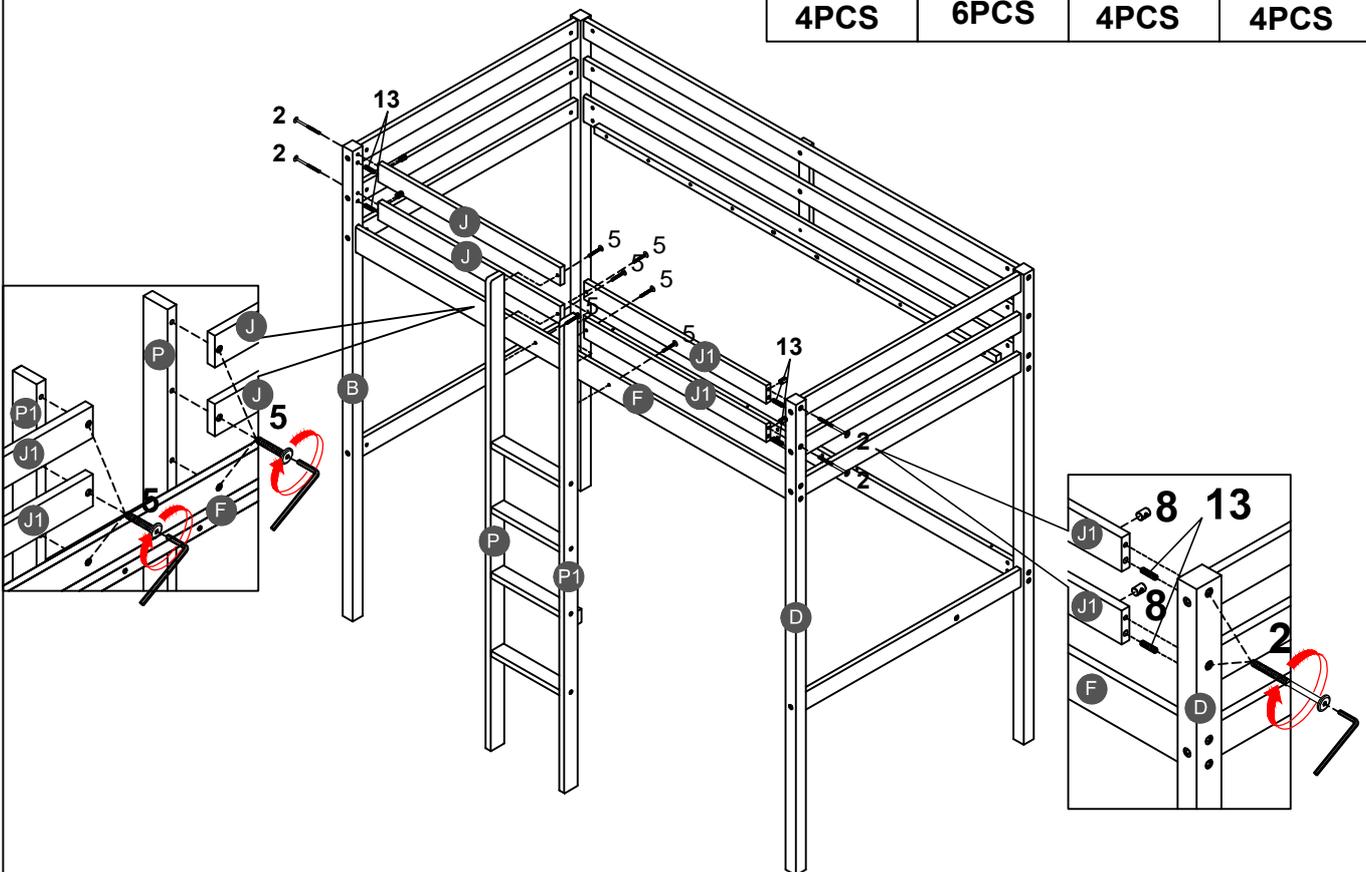


**STEP 7:**

|             |   |             |   |             |   |
|-------------|---|-------------|---|-------------|---|
| <b>1</b>    |  | <b>4</b>    |  | <b>8</b>    |  |
| <b>6PCS</b> |   | <b>4PCS</b> |   | <b>4PCS</b> |   |

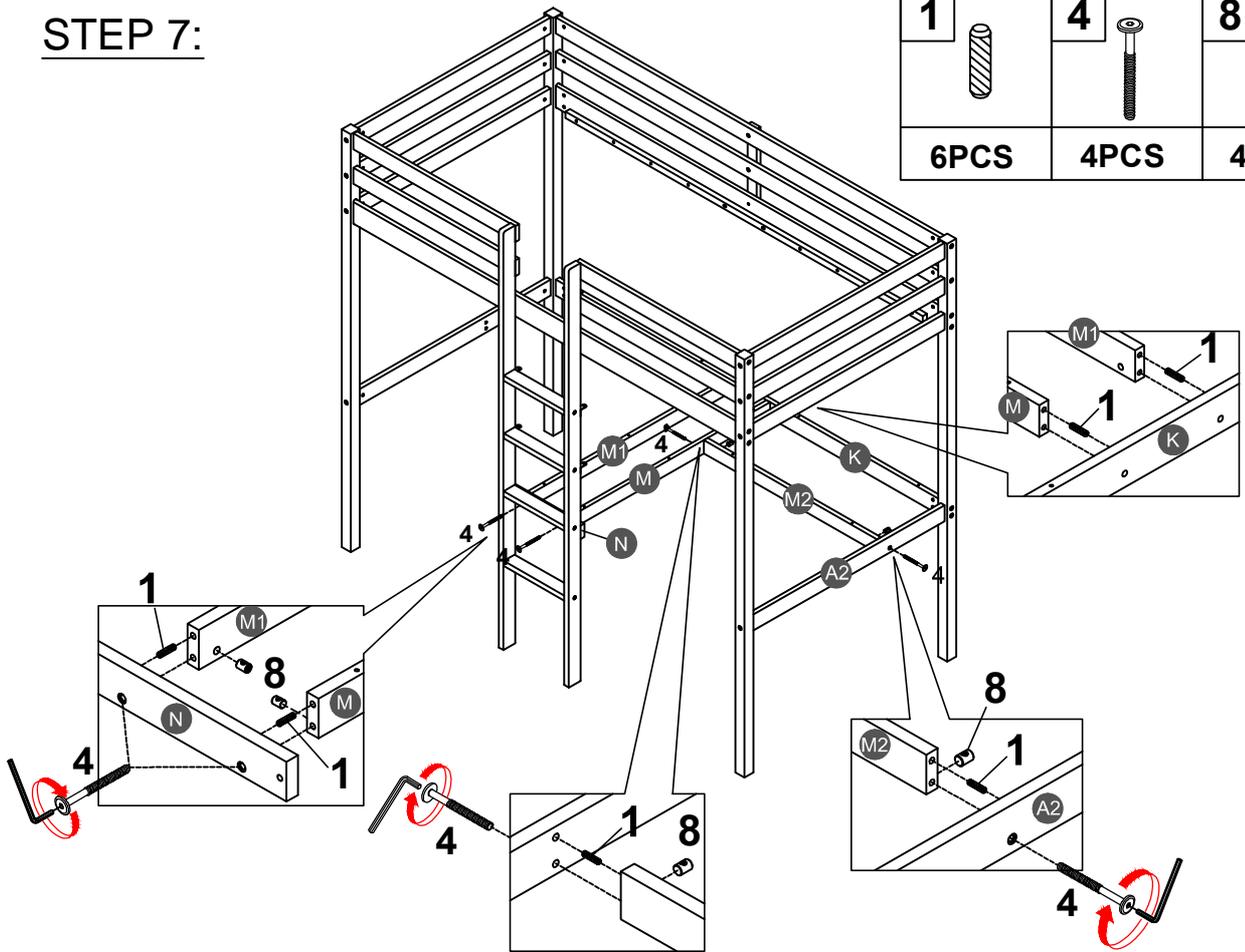


**STEP 8:**

|              |   |
|--------------|---|
| <b>7</b>     |  |
| <b>10PCS</b> |   |

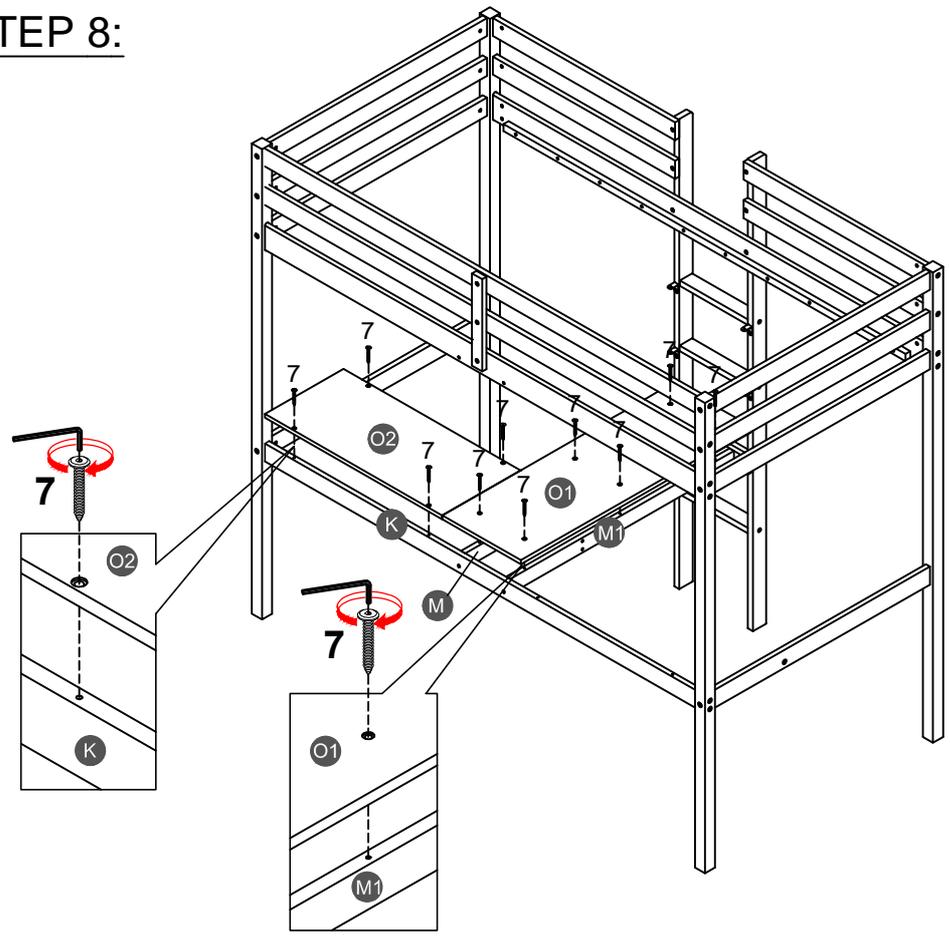


**STEP 9:**

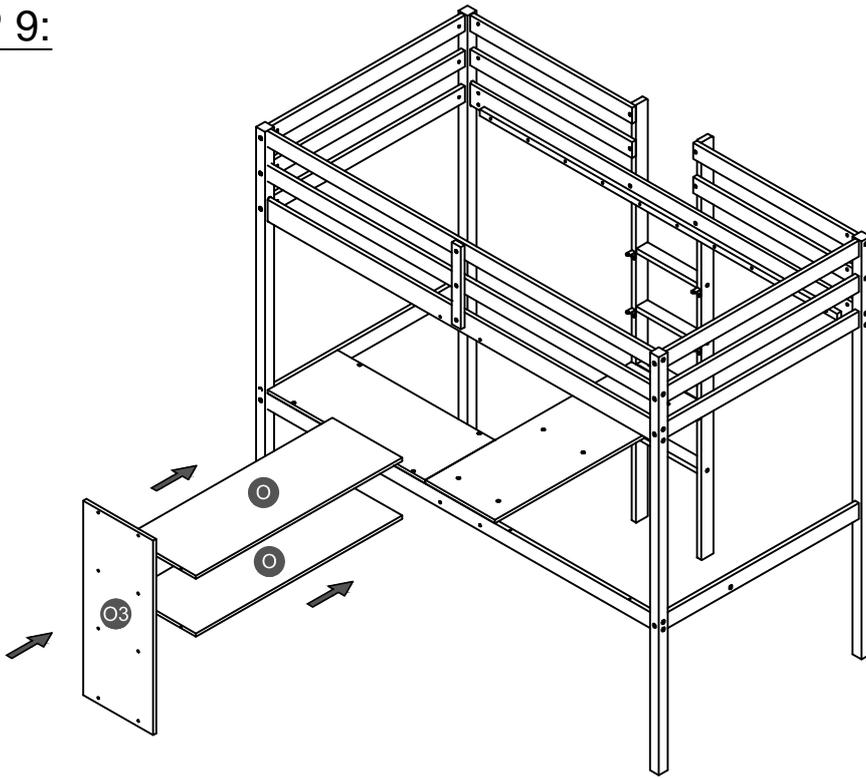




**STEP 10:**

|  |  |  |  |   |  |
|--|--|--|--|---|--|
| <b>3</b>   | <b>4</b>   | <b>6</b>   | <b>8</b>   | <b>9</b>  | <b>11</b>  |
|  |  |  |  |  |  |
| <b>2PCS</b>  | <b>4PCS</b>  | <b>2PCS</b>  | <b>16PCS</b>   | <b>4PCS</b>   | <b>4PCS</b>  |

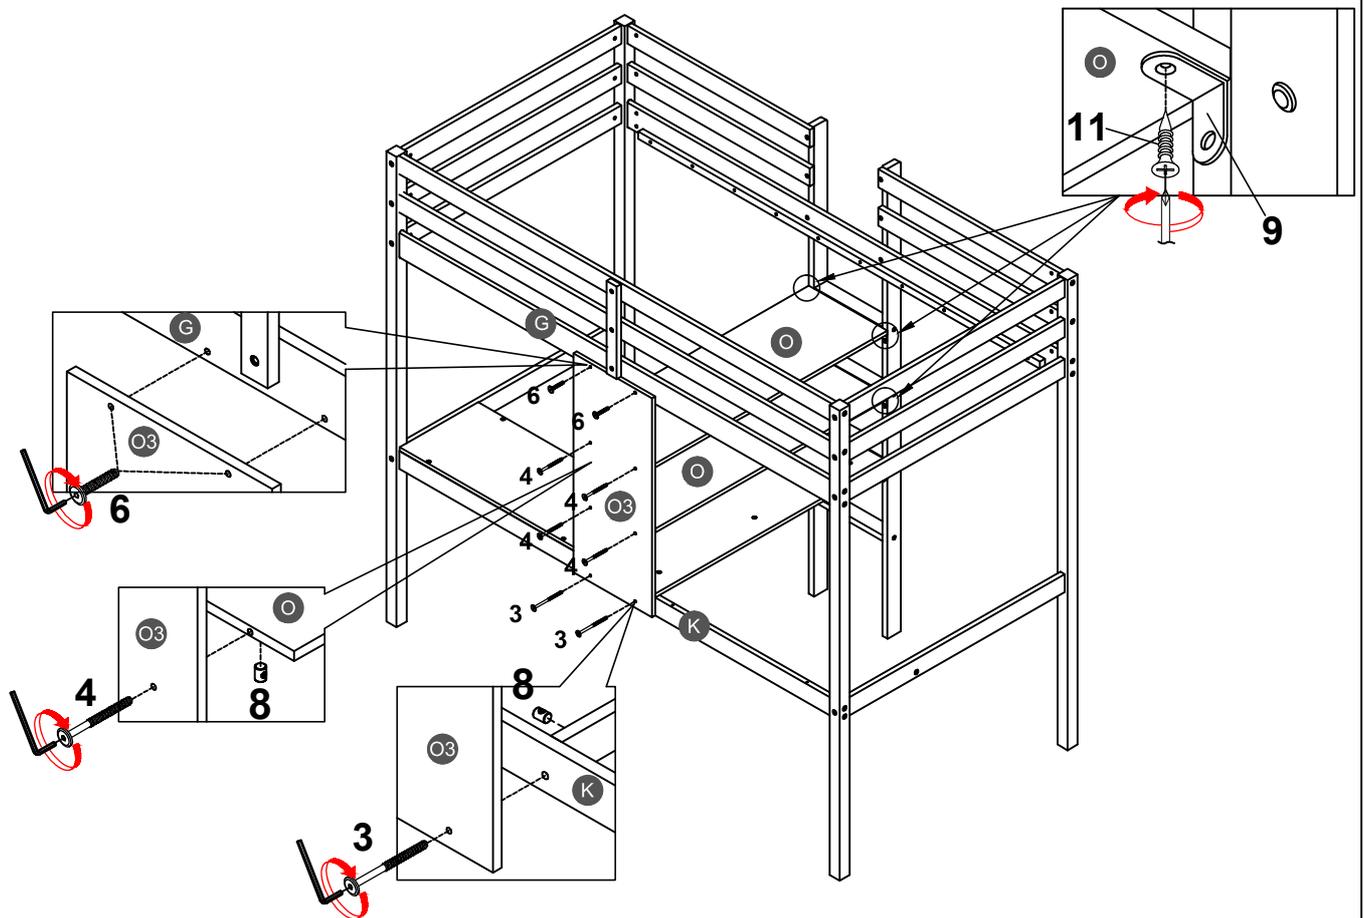

### STEP 11:



|              |   |
|--------------|---|
| <b>12</b>    |  |
| <b>28PCS</b> |   |

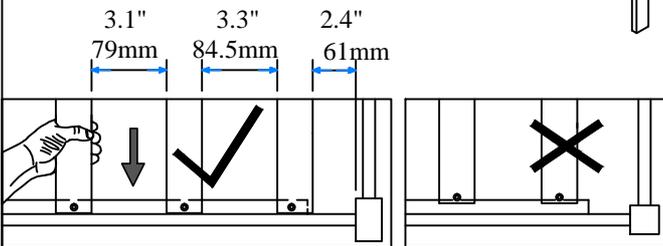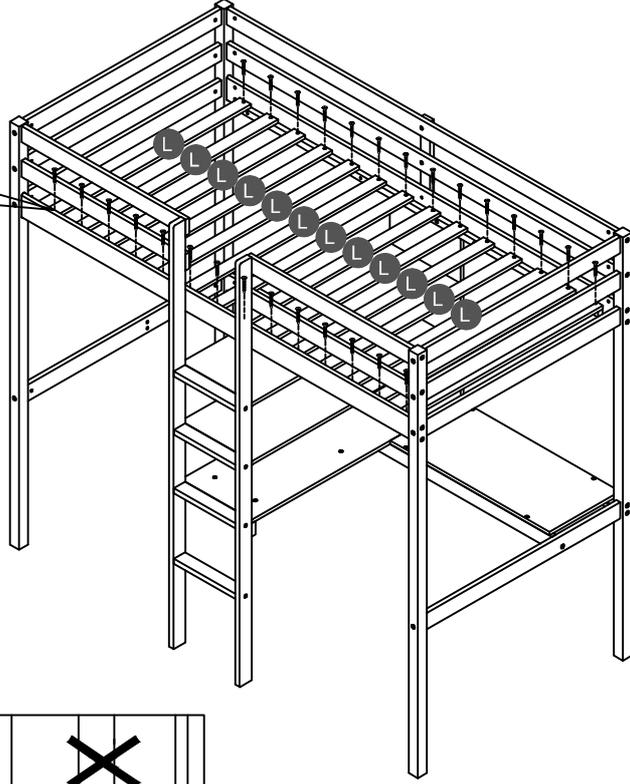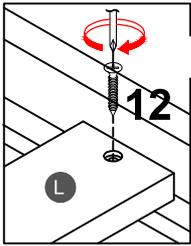


Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break. Do not lock the bed slats on the edge of the wood, please hold firmly before screwing, hold it in place with one hand, then lock the screw.

### STEP 12:


|             |   |             |   |
|-------------|---|-------------|---|
| <b>3</b>    |  | <b>8</b>    |  |
| <b>8PCS</b> |   | <b>8PCS</b> |   |

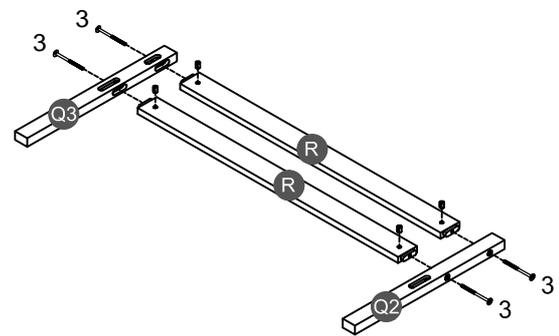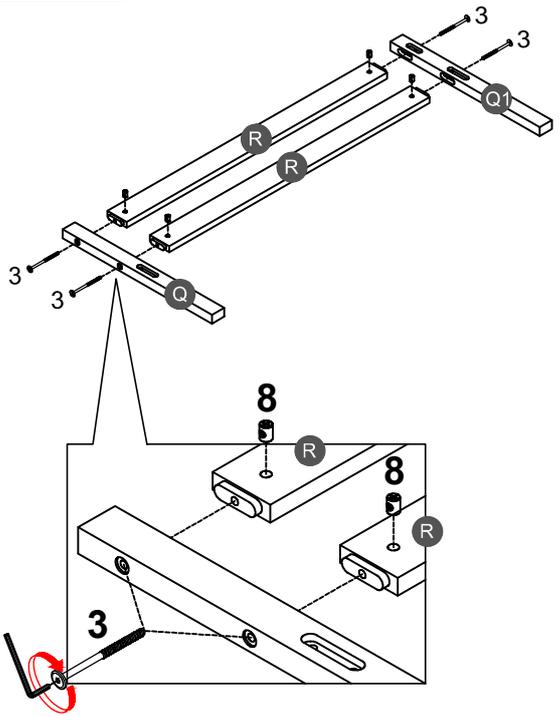


**STEP 13:**

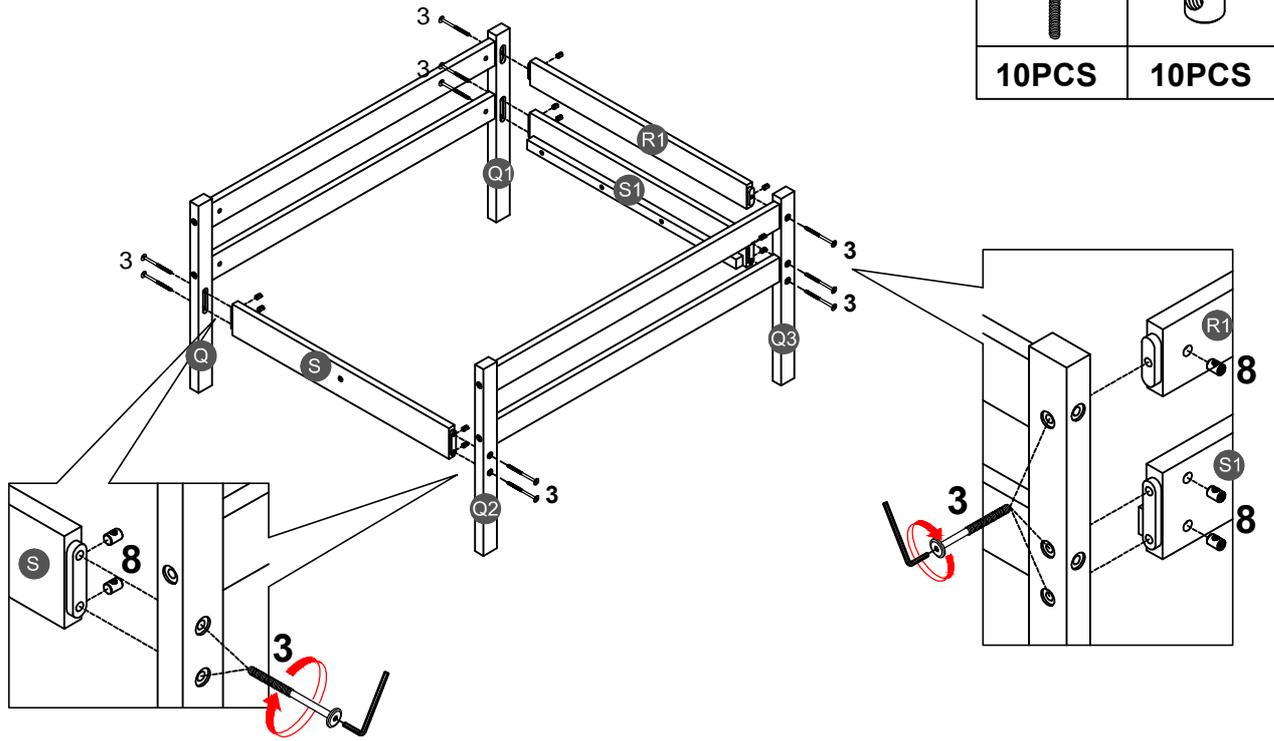

**STEP 14:**

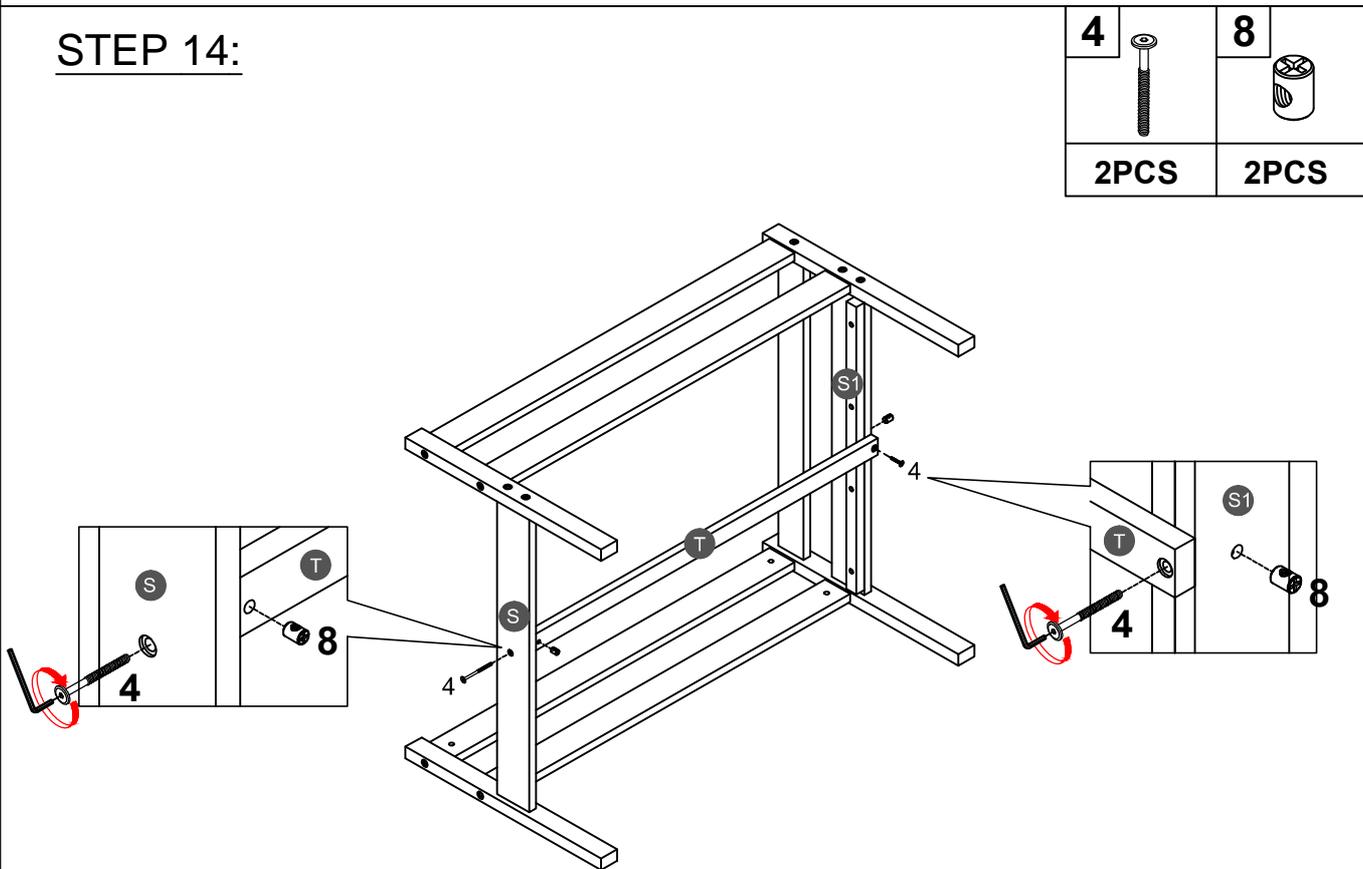


**STEP 15:**

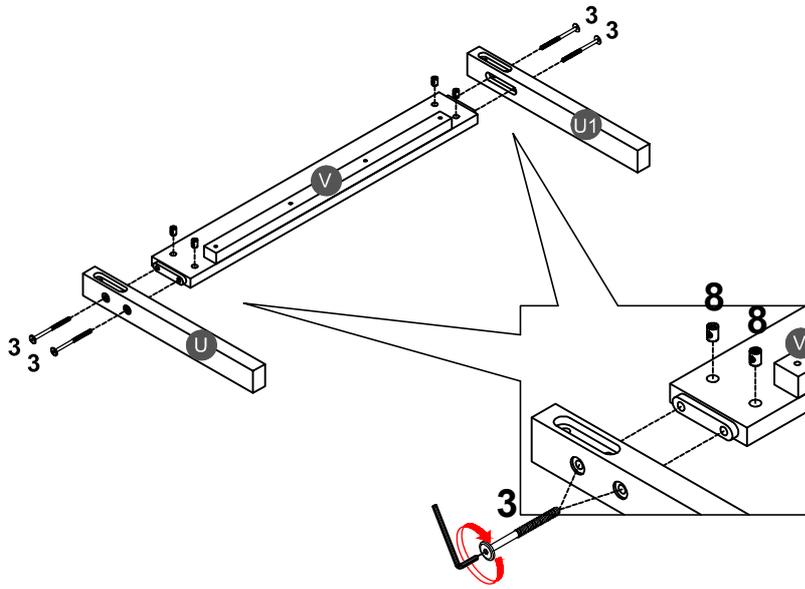


|             |   |             |   |
|-------------|---|-------------|---|
| <b>3</b>    |  | <b>8</b>    |  |
| <b>4PCS</b> |   | <b>4PCS</b> |   |

**STEP 16:**

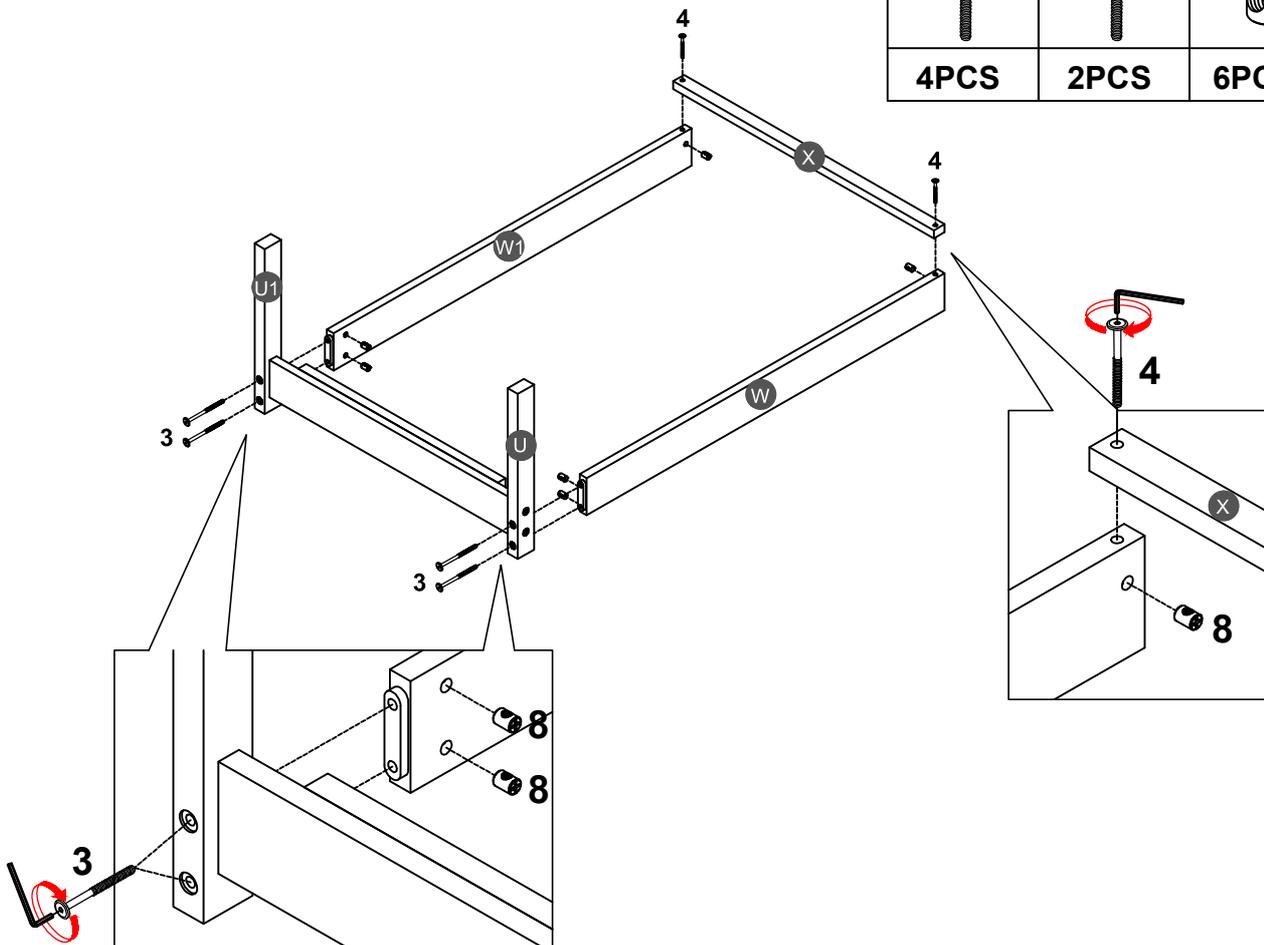


|             |  |             |  |             |   |
|-------------|--|-------------|--|-------------|---|
| <b>3</b>    |  | <b>4</b>    |  | <b>8</b>    |  |
| <b>4PCS</b> |  | <b>2PCS</b> |  | <b>6PCS</b> |   |

### STEP 17:

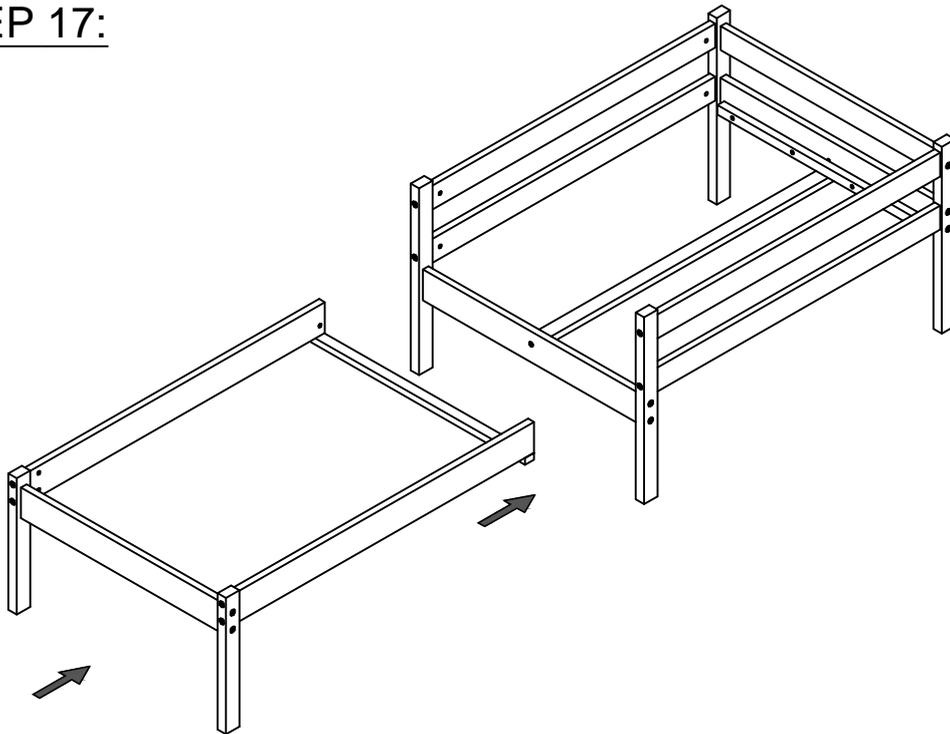


### STEP 18:

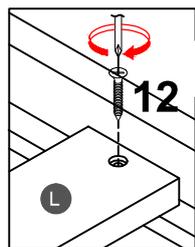


12



12PCS

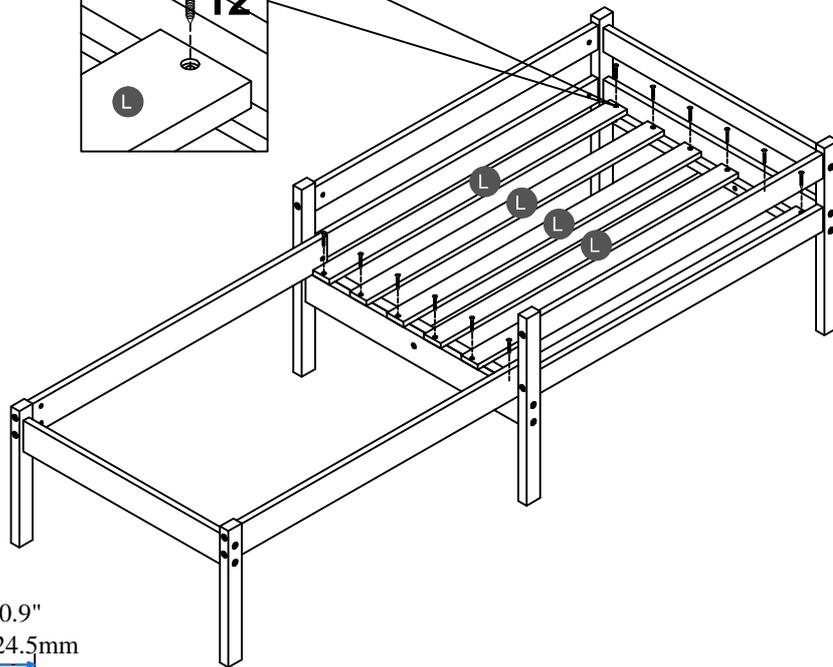

2.7" 69mm    2.7" 69mm    0.9" 24.5mm

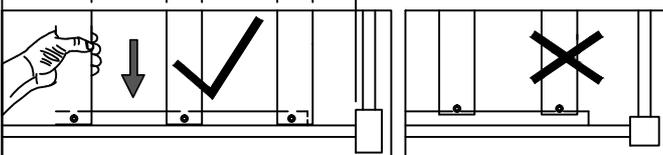




Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break. Do not lock the bed slats on the edge of the wood, please hold firmly before screwing, hold it in place with one hand, then lock the screw.

**STEP 19:**


**12**



**10PCS**

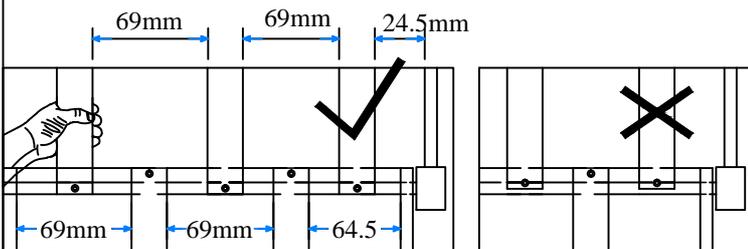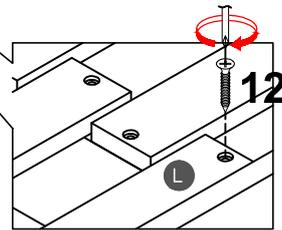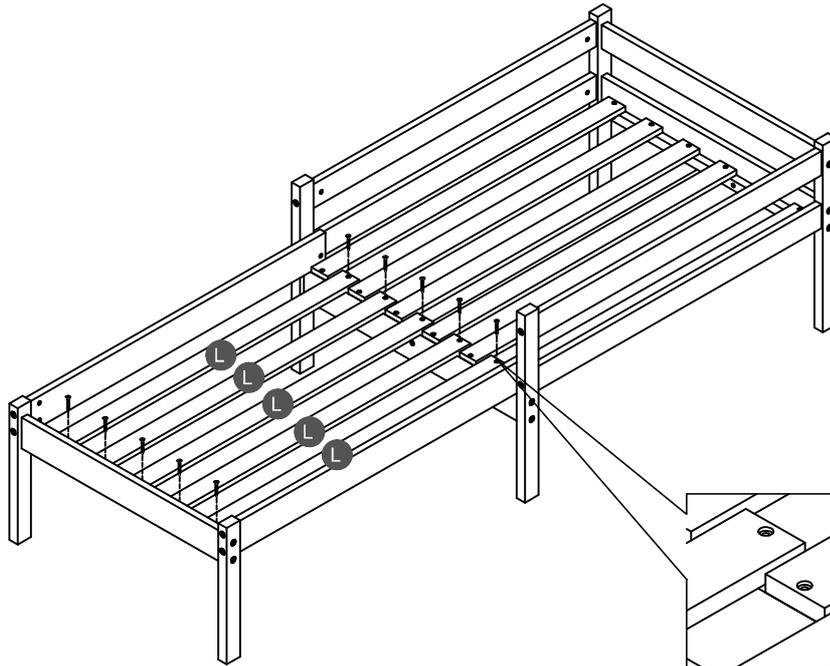

**STEP 20:**

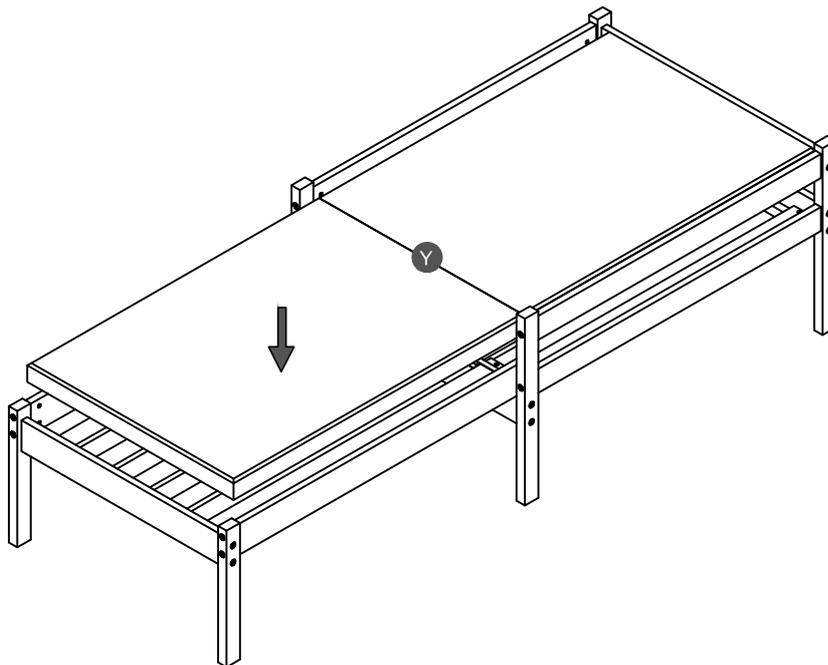

**STEP 21:**

