

EVERBILT™




LEAK TIGHT WASHERS
Arandelas Anti-filtraciones


END OUTLET WASTE

Desagüe de Salida de Extremo

1. Place nuts **(C)** and flanged washers **(A)** onto tailpieces **(B)**. Thread nuts **(C)** onto basket strainers.
2. Place nut **(D)** and 1 1/2 in washer **(E)** onto tailpiece **(B)**, attach to tee **(F)** and tighten nut **(D)**.
3. Measure and cut arm **(G)** to required length.
4. Place nut **(H)** and 1 1/2 in washer **(I)** onto tailpiece **(B)**.
5. Place nut **(J)** and 1 1/2 in washer onto arm **(G)**.
6. Tighten nuts. CHECK for LEAKS.

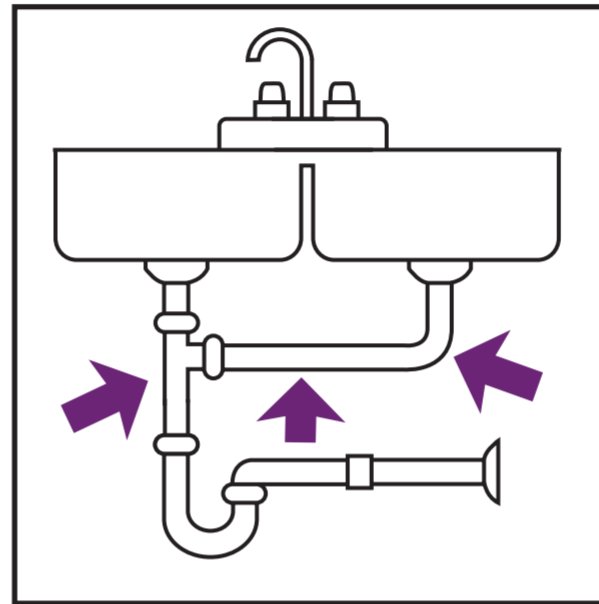

1. Coloca las tuercas **(C)** y las arandelas embridadas **(A)** en los tubos de conexión **(B)**. Enrosca las tuercas **(C)** en los coladeros tipo canasta.
2. Coloca la tuerca **(D)** y la arandela de 1 1/2 plg **(E)** en el tubo de conexión **(B)**, fija al tubo en T **(F)** y ajusta la tuerca **(D)**.
3. Mide y corta el brazo **(G)** al largo requerido.
4. Coloca la tuerca **(H)** y la arandela de 1 1/2 plg **(I)** en el tubo de conexión **(B)**.
5. Coloca la tuerca **(J)** y la arandela de 1 1/2 plg en el brazo **(G)**.
6. Ajusta las tuercas. VERIFICA QUE NO HAYA FILTRACIONES.

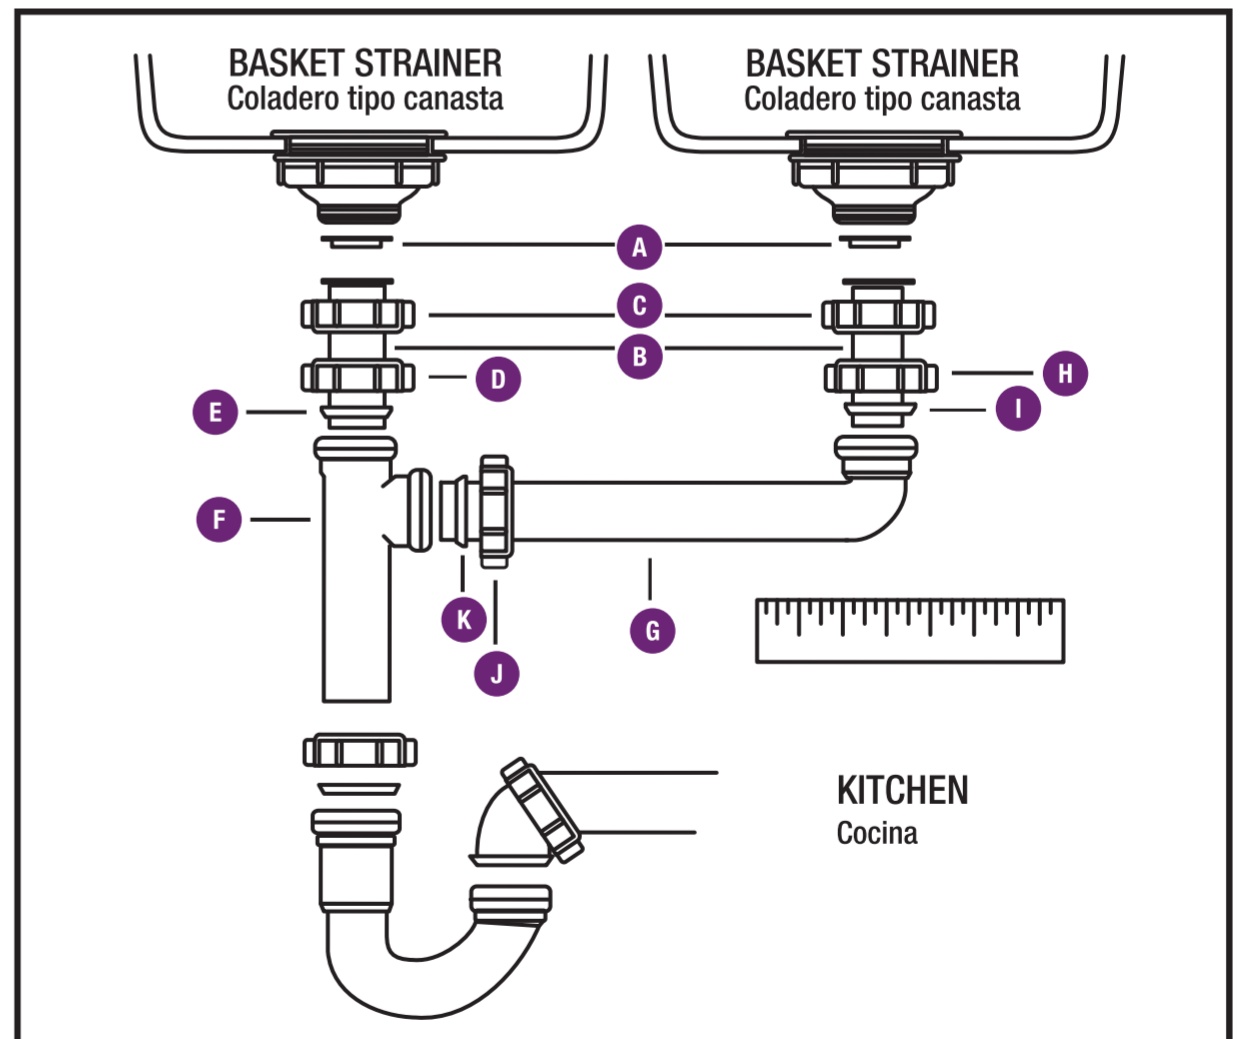

CONTENTS: (1) TEE, (1) 1 1/2in x 15 in WASTE ARM, (2) 1 1/2 in FLANGE TAILPIECES. (5) 1 1/2 in NUTS, (2) 1 1/2 in FLANGE WASHERS, (3) 1 1/2 in WASHERS

Contenido: (1) Tubo en T, (1) Brazo de Desagüe de 1 1/2 plg x 15 plg, (2) Tubos de Conexión Embridados De 1 1/2 plg, (5) Tuercas de 1 1/2 plg, (2) Arandelas Embridadas de 1 1/2 plg, (3) Arandelas de 1 1/2 plg

1000050110