INSTALLATION INSTRUCTIONS
MAGNETIC ROMAN SHADE

GoDear Design

www.godear.com

Share your work and be inspired!

INSTRUCTIONS OF MAGNETIC ROMAN SHADE


Please follow the instructions carefully before handling, assembling, or installing the product.

Installation Video

Package Contents

Before installing your magnetic roman shades, make sure all parts listed below are present.


Please note: The hook and loop tape is divided into hook and loop sides, both of which have been pre-installed on the back top of the magnetic roman shades.

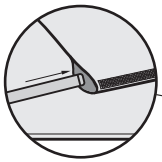

The shade comes with a rod pocket for flexible installation options. ⋆**Rod not included**⋆



Roman Shades and Hook and Loop Tape x1

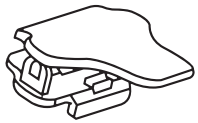

Clip x1
(Optional)


Installation

1.Clean the surface. Make sure it's dry and dust-free.

2.Remove the hook side of the hook and loop tape from the back top of the shades.

3.Apply the adhesive side of the tape with slight pressure. Let it sit for 24 hours ensure the hook is firmly adhered.


4.Align the loop side on the back top of the shades with the previously installed hook side.

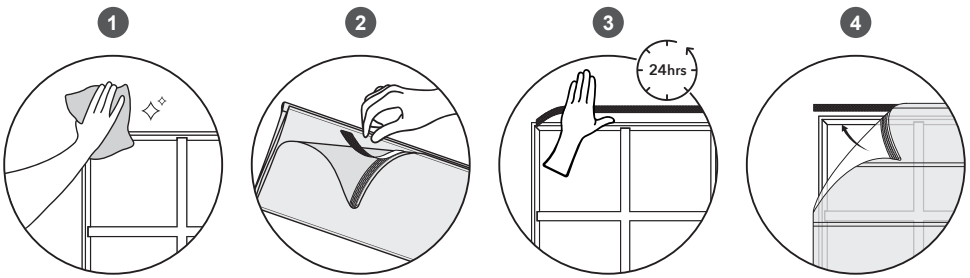


Operation

1. Use your hand(A) or Clip(B) to lift the rod near the bottom.
2. Raise or lower the shades slowly to secure them in place.
3. Simply adjust the shades to your desired height.

A.

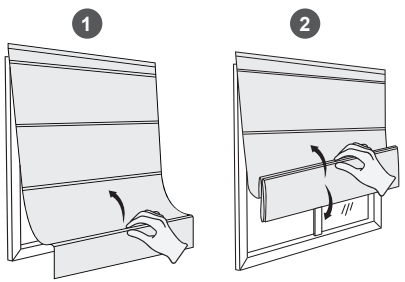

B.

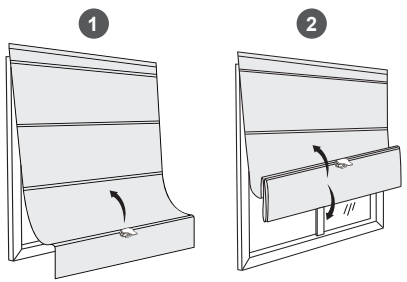

Center the clip properly