CONNECT OPEN CUBE





Included



- 8 Alignment Pins 4 connectors pins
- 2 Vertical zBoards adhesive strips on 2 edges






- 1 Backer Board thin and has no adhesive
- 2 Horizontal zBoards with grooves



Important

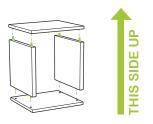

Tip Start assembly from bottom to top.


DO NOT place unit on its side or back as it will compromise its structural integrity.




- Assemble your unit on a flat even surface, carpet not recommended
- Furniture is for indoor use only

- When moving your Way Basics furniture, lift from the bottom
- · Make sure zBoard surfaces are clean and dry




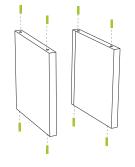

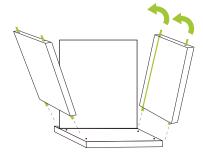


- Carefully remove the 3M protective layer from adhesive.
- Place alignment pins in vertical zBoards.

First fit backer board in groove, then arrange vertical zBoard with grooves facing backer board as shown.

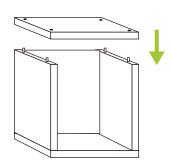






Join other connect cubes with connector pins!
Visit links below for more details. Enjoy
building possibilities!

Note Use included decals to cover the connector holes if not stacking cubes.





IT'S NOT WOOD! Thank you for saving trees

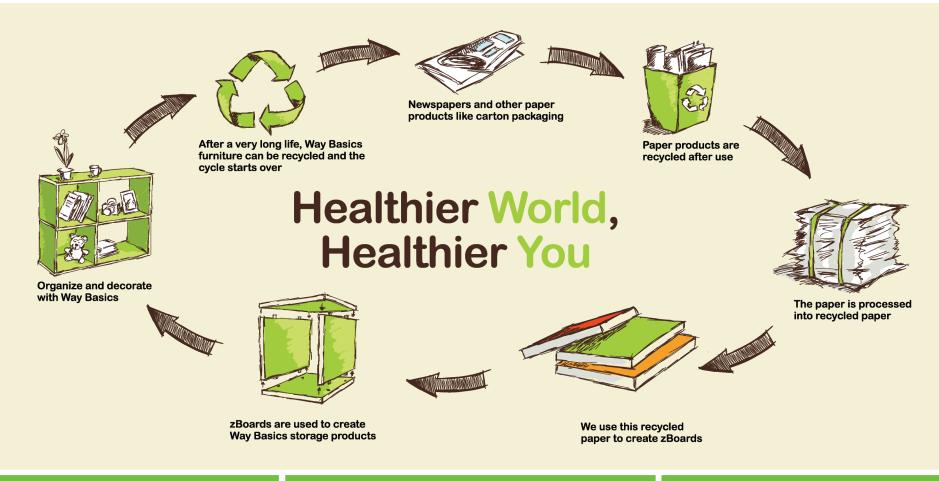





Safe Zero Formaldehyde or VOC Protect your family



Eco **Save Trees** 99% recycled 100% recyclable

QUESTIONS?

Contact our founder Jimmy 949 229 1781 or jimmy@waybasics.com He'll be so happy to hear from you!



HELPFUL TIP

Get familiar with the assembly process by trying to build together your unit without removing the adhesive strips first. For more guidance, assembly videos are available on our website.

Flip over to see assembly guide