

FELT

Nail-On Weatherseal

Installation:





1. Unwind a length of felt.
2. Nail, staple or tack in place at the starting point.
3. Pull taut and continue to nail or staple, spacing about 4 inches apart.
4. Cut to required length.

Windows:

1. Apply to frame above upper window.
2. Apply to sill below lower window.
3. Apply across lock rail.
4. On the sides, apply to frame with felt pressed against window.

Doors:

1. Apply to doorstop moulding across top and down latch side.
2. On hinge side, apply to door frame next to moulding.

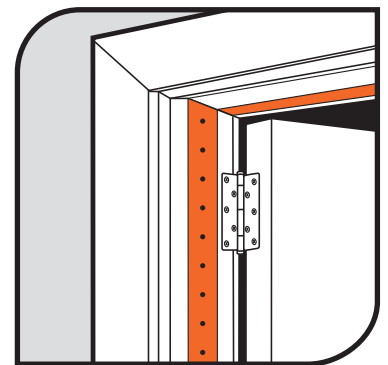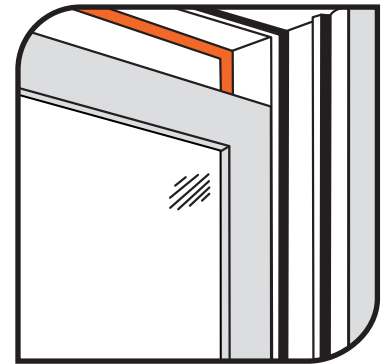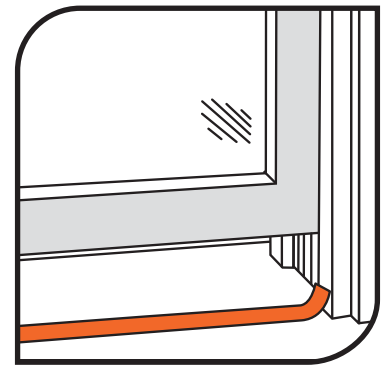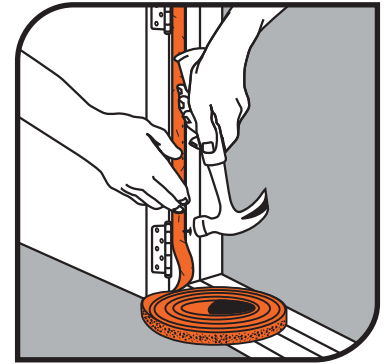

Burlete de FIELTRO

Instala clavando

Instalación:

1. Desenvuelva una tira de fieltro.
2. Clave, grape o tache en su lugar a la punta de partida.
3. Jale tensa y continúe clavando o grapando, separando las tachuelas o clavos aprox. 4 pulgadas.
4. Corte al largo adecuado.

Ventanas:

1. Aplique al marco sobre la ventana superior.
2. Aplique al antepecho bajo la ventana inferior.
3. Aplique a la riel de la ventana superior.
4. En los lados, aplique con el fieltro presionando contra la ventana.

Puertas:

1. Aplique a la moldura superior y el lado de herraje.
2. En el lado de los goznes, póngalo en el marco de la puerta cerca de la moldura.

