



Interlocking Flooring


Ideal for garages, storage areas, home gyms, workshops, and basements





Installation Instructions

- 1. Ensure the floor surface is smooth, level, dry, and clean. Check for cracks, gapped seams, nails, or other damage. Patch or fill any large holes (A).
- 2. Calculate the center of the room by measuring the length and width and divide the dimensions in two. Mark the center of the room. This is the approximate starting point for the installation (B).
- 3. Using a rubber mallet, lay the tiles from the center point of the room in both directions toward the wall to form a cross (C). To assure a symmetrical installation, adjust the center point so the distance between the outermost tiles and the wall is equal.
- 4. Fill in each of the four quadrants. Work in full rows or columns to assure the installation remains squared (D).
- 5. To fit perimeter tiles, measure the distance between the outermost tiles and walls. Cut the perimeter tiles to the appropriate size. To fit tiles around irregular shapes (i.e. door jambs, pipes, etc.), create a pattern using heavy paper or cardboard. Trace the pattern onto the tile and cut accordingly.



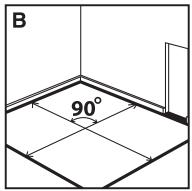

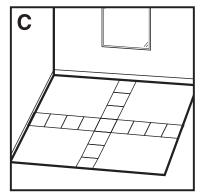

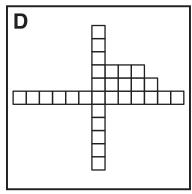

Flooring Calculator

Calculate the number of packs needed

FT	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
1	1	1	1	1	1	1	1	1	1	1	1	1	2	2	2	2	2	2	2	2
2	1	1	1	1	1	1	2	2	2	2	2	2	3	3	3	3	3	3	4	4
3	1	1	1	1	2	2	2	2	3	3	3	3	4	4	4	4	5	5	5	5
4	1	1	1	2	2	2	3	3	3	4	4	4	5	5	5	6	6	6	7	7
5	1	1	2	2	3	3	3	4	4	5	5	5	6	6	7	7	7	8	8	9
6	1	1	2	2	3	3	4	4	5	5	6	6	7	7	8	8	9	9	10	10
7	1	2	2	3	3	4	4	5	6	6	7	7	8	8	9	10	10	11	11	12
8	1	2	2	3	4	4	5	6	6	7	8	8	9	10	10	11	12	12	13	14
9	1	2	3	3	4	5	6	6	7	8	9	9	10	11	11	12	13	14	14	15
10	1	2	3	4	5	5	6	7	8	9	9	10	11	12	13	14	14	15	16	17
11	1	2	3	4	5	6	7	8	9	9	10	11	12	13	14	15	16	17	18	18
12	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
13	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	19	20	21	22
14	2	3	4	5	6	7	8	10	11	12	13	14	15	16	18	19	20	21	22	23
15	2	3	4	5	7	8	9	10	11	13	14	15	16	18	19	20	21	22	24	25
16	2	3	4	6	7	8	10	11	12	14	15	16	17	19	20	21	23	24	25	27
17	2	3	5	6	7	9	10	12	13	14	16	17	19	20	21	23	24	25	27	28
18	2	3	5	6	8	9	11	12	14	15	17	18	20	21	22	24	25	27	28	30
19	2	4	5	7	8	10	11	13	14	16	18	19	21	22	24	25	27	28	30	31
20	2	4	5	7	9	10	12	14	15	17	18	20	22	23	25	27	28	30	31	33

For more selection visit: Homedepot.com/TrafficMASTER Color may vary slightly due to recycled content.

Helpful Tips

- To cut a straight edge or create an area mat, mark a line with a straight edge and trim with heavy duty snips or your preferred cutting tool.
- Always use appropriate safety precautions when cutting and installing tile, which includes wearing protective eyewear and cutting gloves.

Cleaning & Maintenance

- Utility floor can be swept with a vacuum or broom. For heavily soiled areas, use a damp mop and mild detergent. Allow floor to dry thoroughly before walking on tiles.
- In some heavy traffic instances, tiles may shift or tabs may raise slightly. Simply step on the tab or use a rubber mallet to pound the tab back into place.