


WINDOW CURTAIN STYLE GUIDE

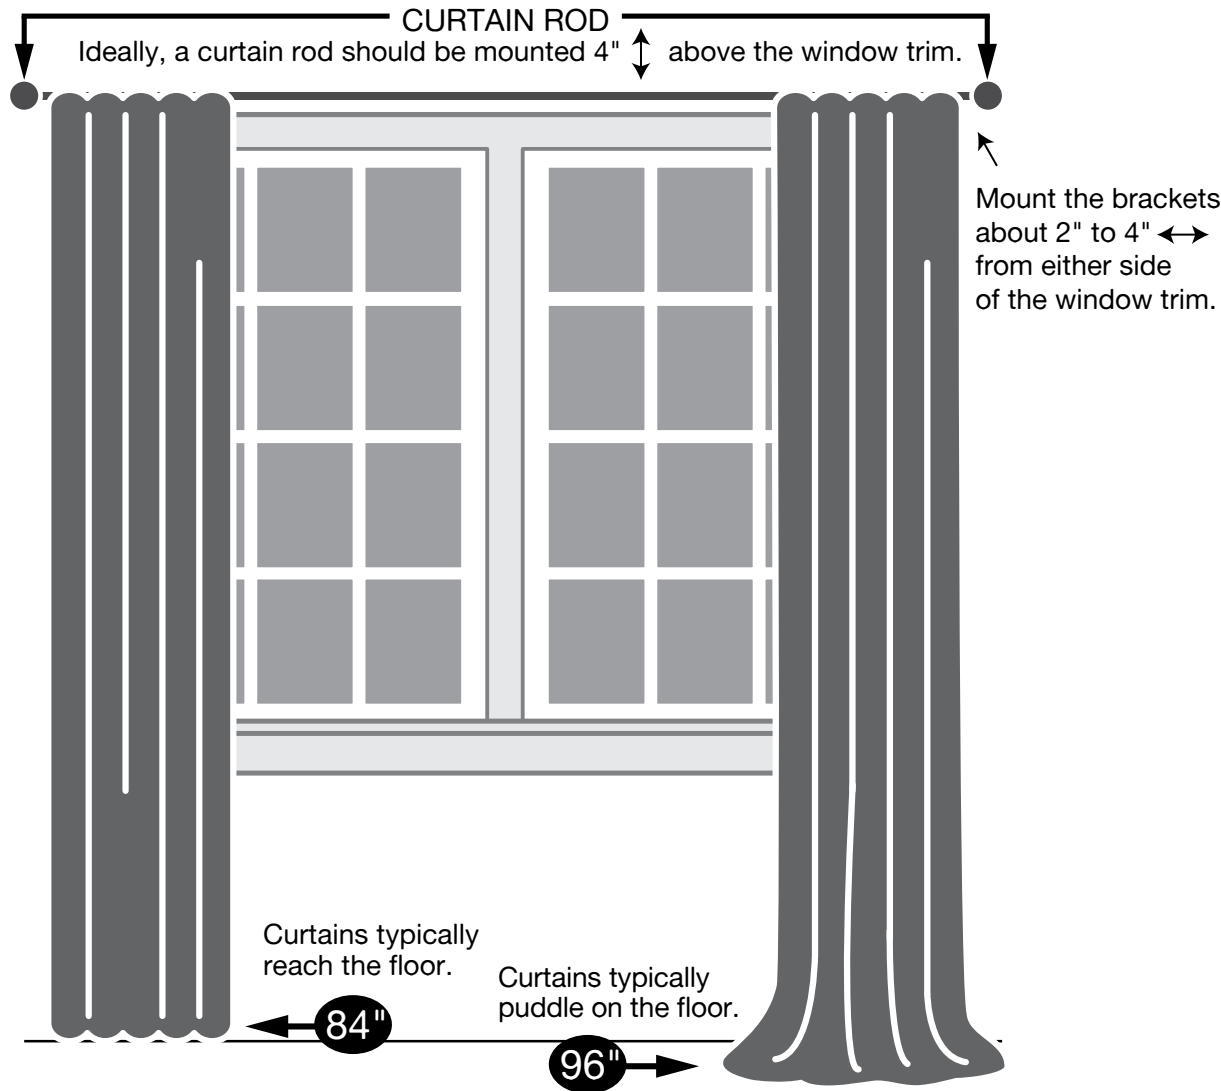

For proper fullness, fabric should measure approximately 2 to 3 times the width of your window.

Additional Styling Tips:

- Thoroughly steam panels to free them from creases.
- Evenly spread the panels out enough to see the texture but not to the extreme that the panels lay flat. Ensure that both panels are spread/gathered evenly to give a symmetrical look on the window.
- Tuck top corner edges of panels in for a polished appearance.
- Double check that rod and curtains hang straight.

