


Installation Instructions

1. Close and lock sliding glass door or window.
2. Close **BanditBar** hinge into locked position and place on door or window to determine the best location (see illustration).
3. Clean selected glass area thoroughly with isopropyl alcohol, dry with another clean soft cloth before alcohol evaporates: buff area briskly with leenex to absorb all moisture.
4. Peel tape backing carefully and fix **BanditBar** to glass.
5. Pull spring-loaded detent pin to unlock hinge and set **BanditBar** flat against glass. Using eraser side of pencil, press taped area firmly against glass to remove all air bubbles. Adhesive will reach 90% bond strength in 72 hours.


Bandit Bar Removal Instructions

1. To remove a Bandit Bar, squeeze a cotton ball which has been saturated with acetone, (or nail-polish remover) on the top of the affixed unit.
2. Use a putty knife on one corner of the unit to pry off the piece gradually from the glass.

#184- Bandit Bar Door and Window Lock

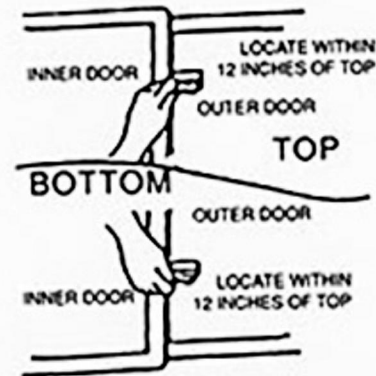

Glass Door Installation
Position both BANDITBARS within 12 inches of top and bottom on outer door flush against inner door frame.

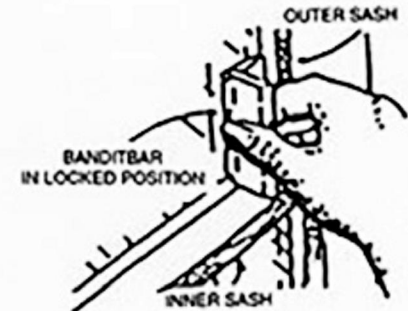

Sash Window Installation
Position on BANDITBAR flush in lower corner of top window.

Barton Kramer Inc.
Miami, Florida

