



# ASSEMBLY INSTRUCTION

## 2 Drawer Bedside Nightstand



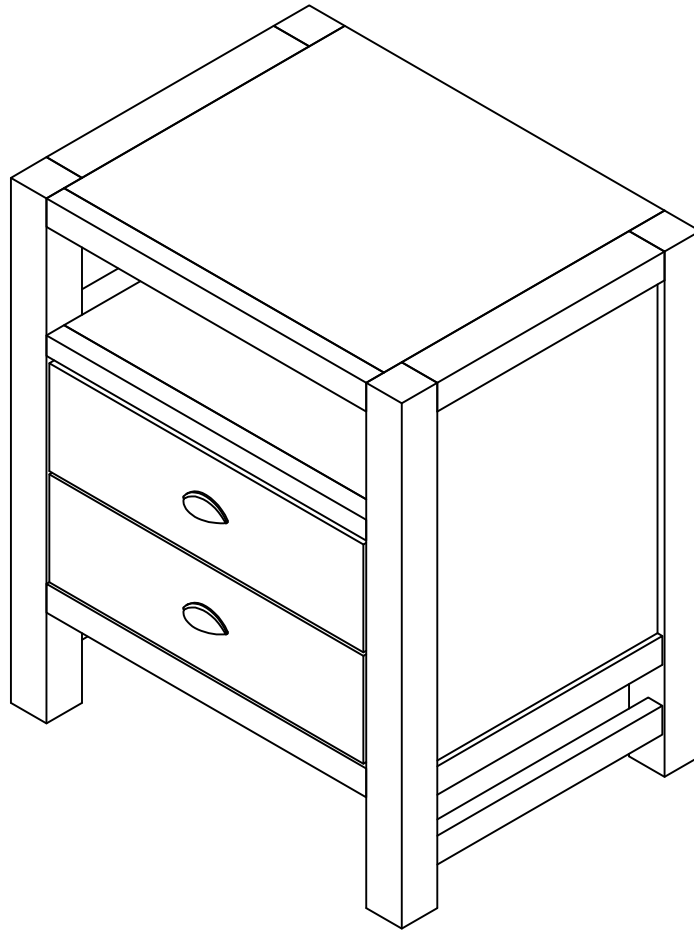


### REPLACEMENT PARTS



Please do not contact the company purchased from as we can help you faster.  
Order replacement parts and hardware at " [www.boltonfurniture.com](http://www.boltonfurniture.com) "

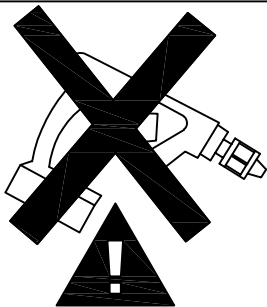

. Use of power tool to assemble this product will invalidate any claim and damage this product making it unsafe !!!  
. Please assemble on a clean soft surface to avoid damage.

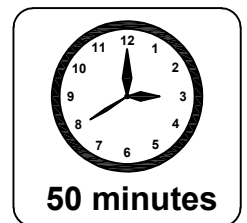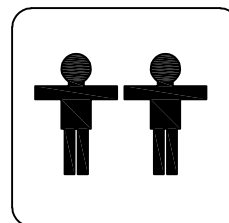


### Tools Required

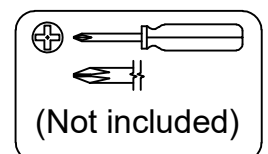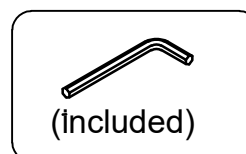

[www.boltonfurniture.com](http://www.boltonfurniture.com)

# Part list - 2 Drawer Bedside Nightstand

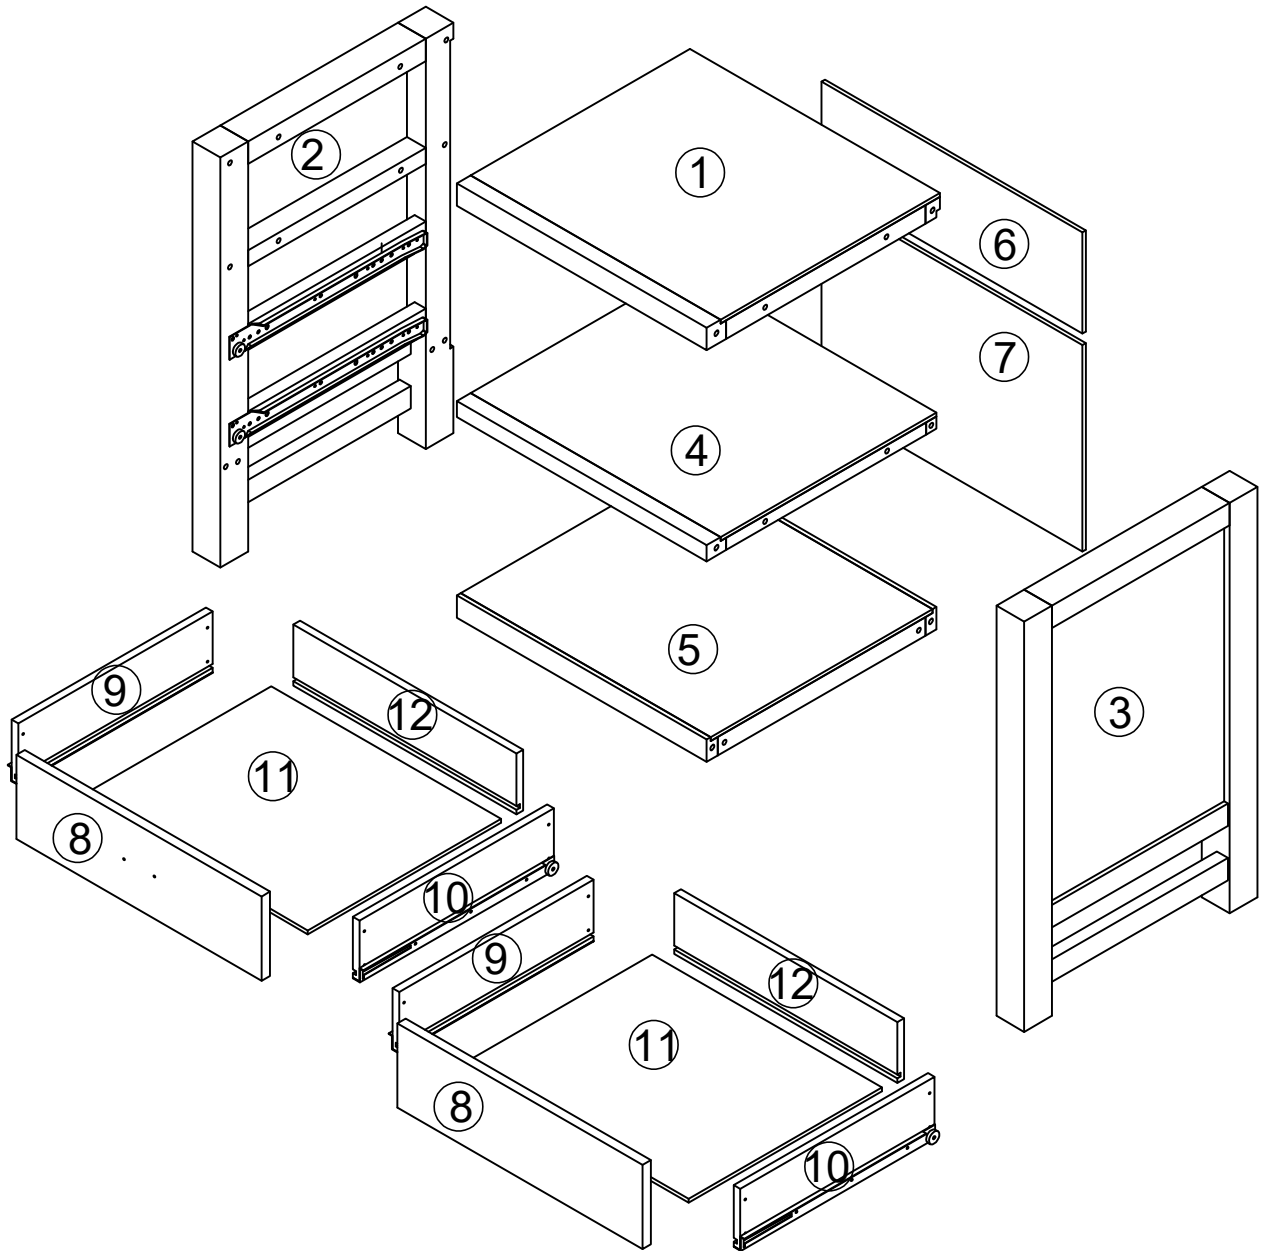

**Identifying the hardware-**Identify the hardware using the illustrations below

**A**



Ø8x35

**12**

**B**



M6x35mm Bolt

**12**

**C**



M4 x 25mm Screw

**16**

**D**



M4 x 13mm Screw

**04**

**E**



**02**

**F**



M3 x 15mm Screw


**18**

**G**



**01**

**H**




ANTI-TIP

**01**


[www.boltonfurniture.com](http://www.boltonfurniture.com)

# Step 01


**A**  **Ø8x35** **12**

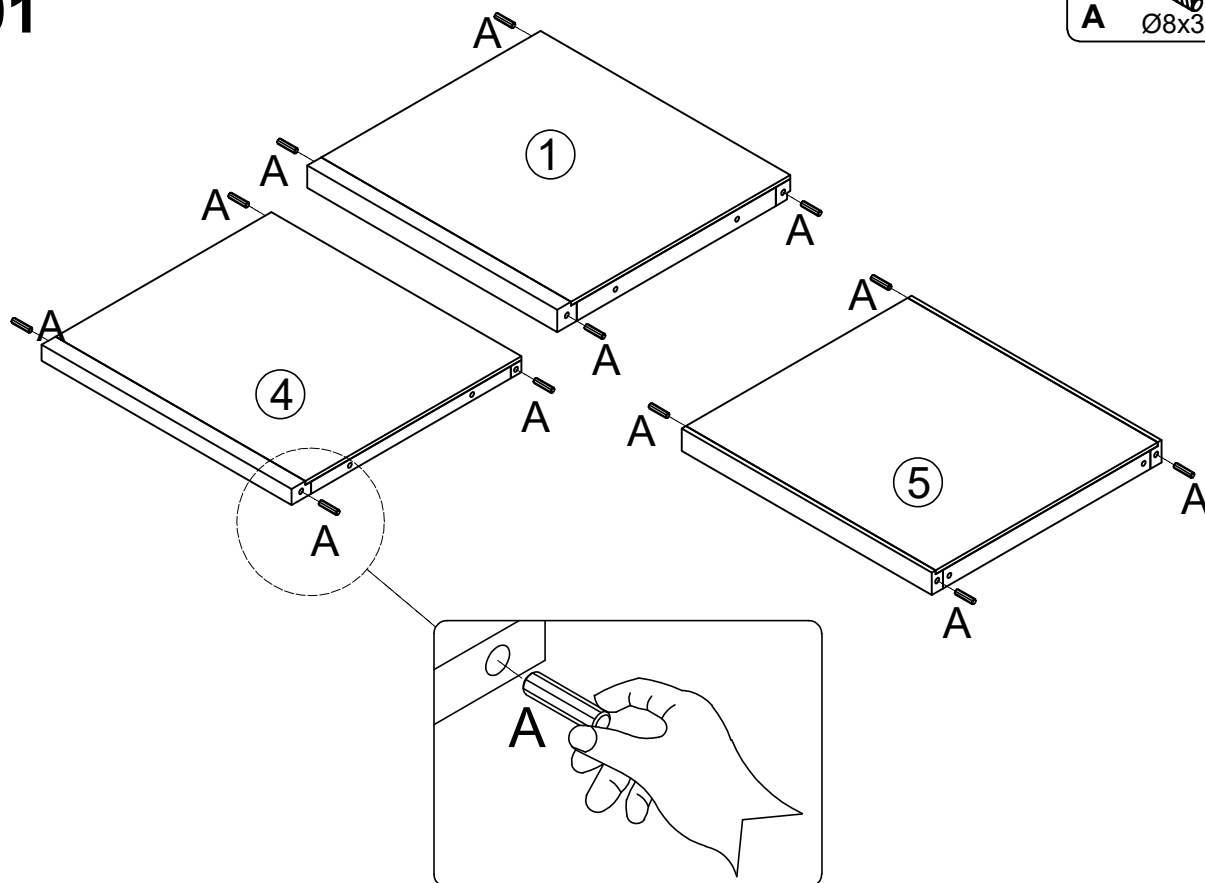


# Step 02

**B**  **M6x35mm Bolt** **06**



**G**  **01**

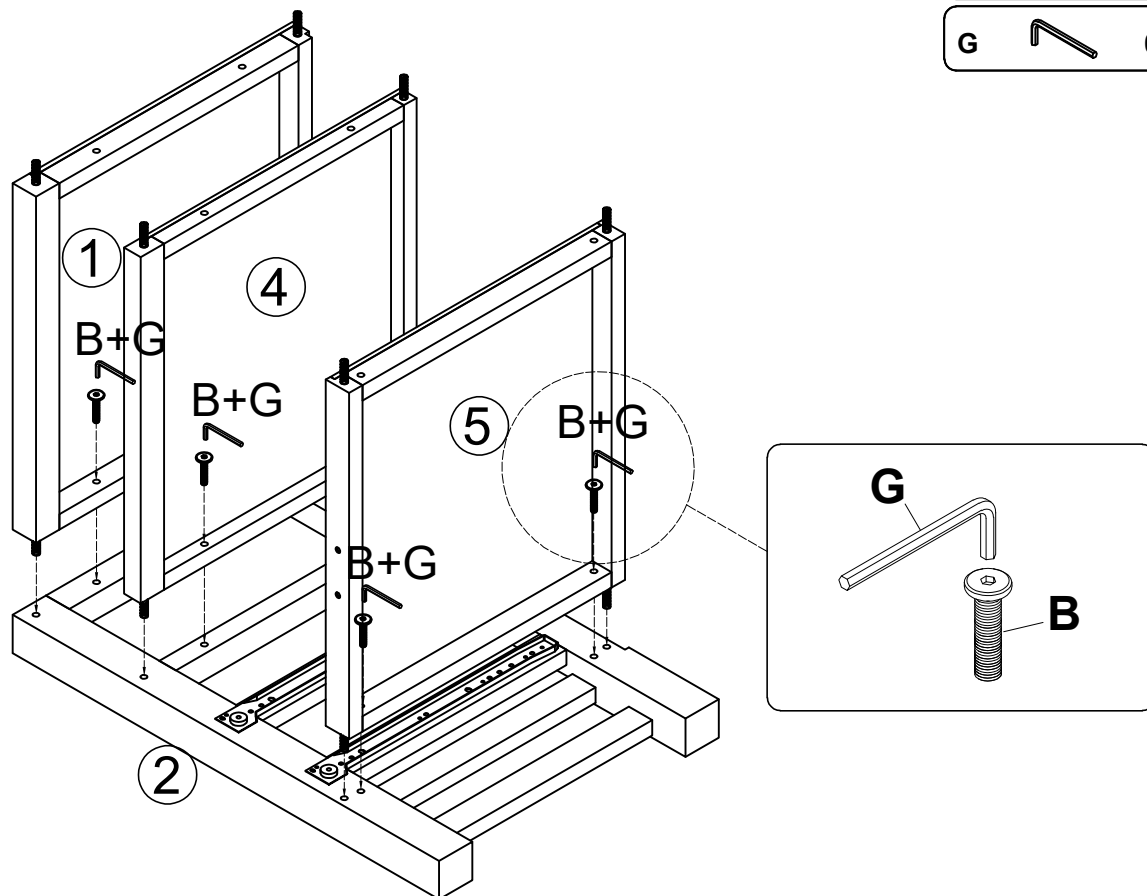

## Step 03

B  06  
M6x35mm Bolt

G  01

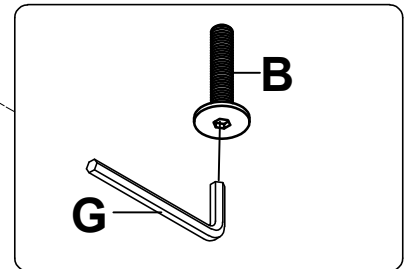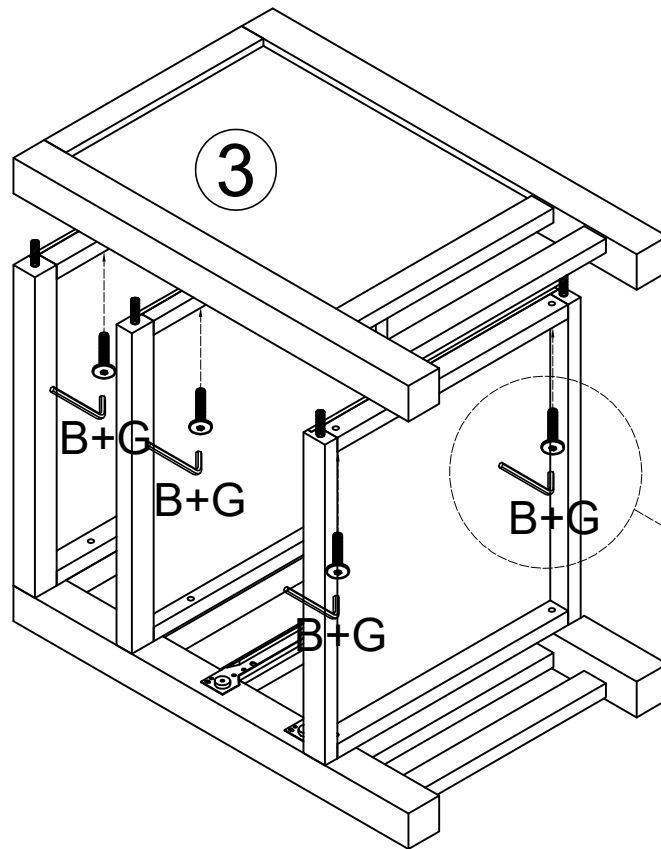



## Step 04

C  16  
M4 x 25mm Screw




D  04  
M4 x 13mm Screw

E  02

 01  
(Not included)

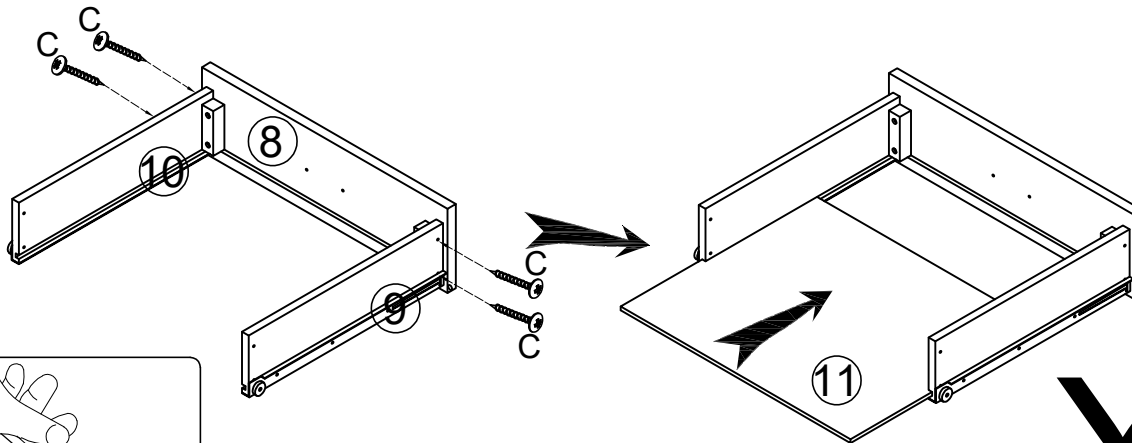


X 2

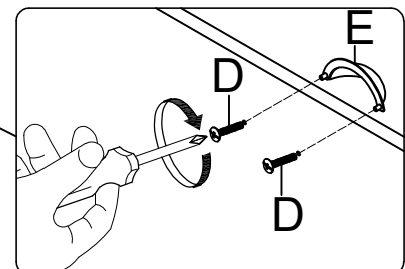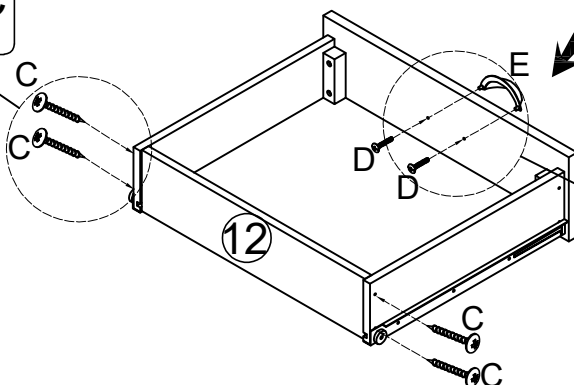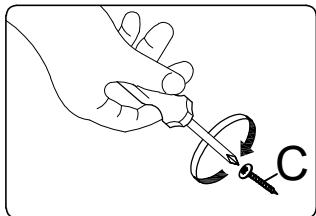



## Step 05

F M3x15mm Screw 18  
01  
(Not included)

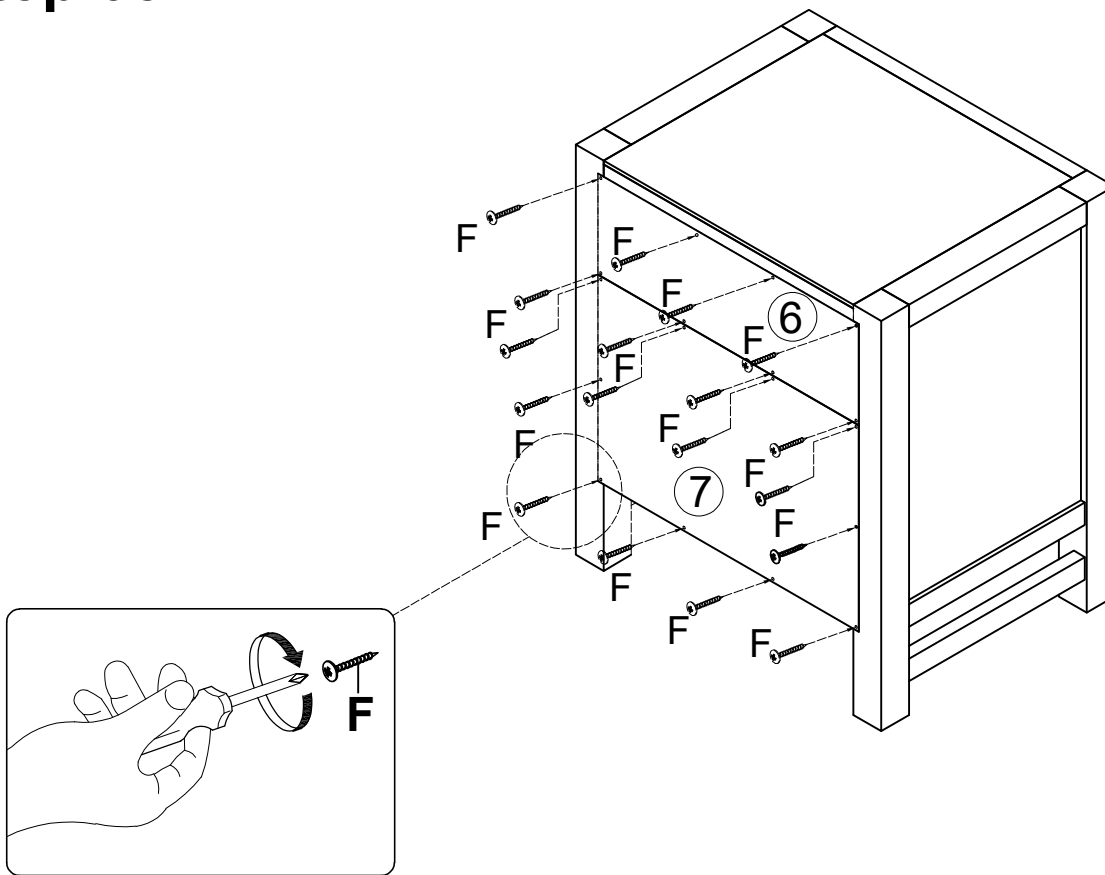


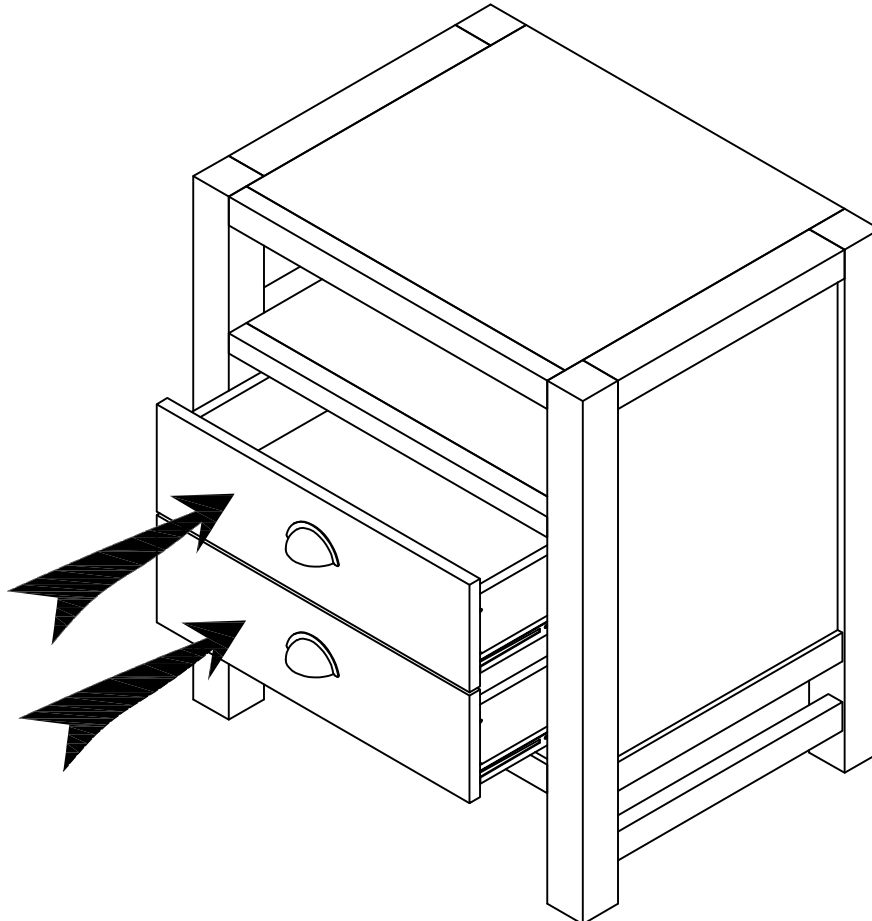


## Step 06

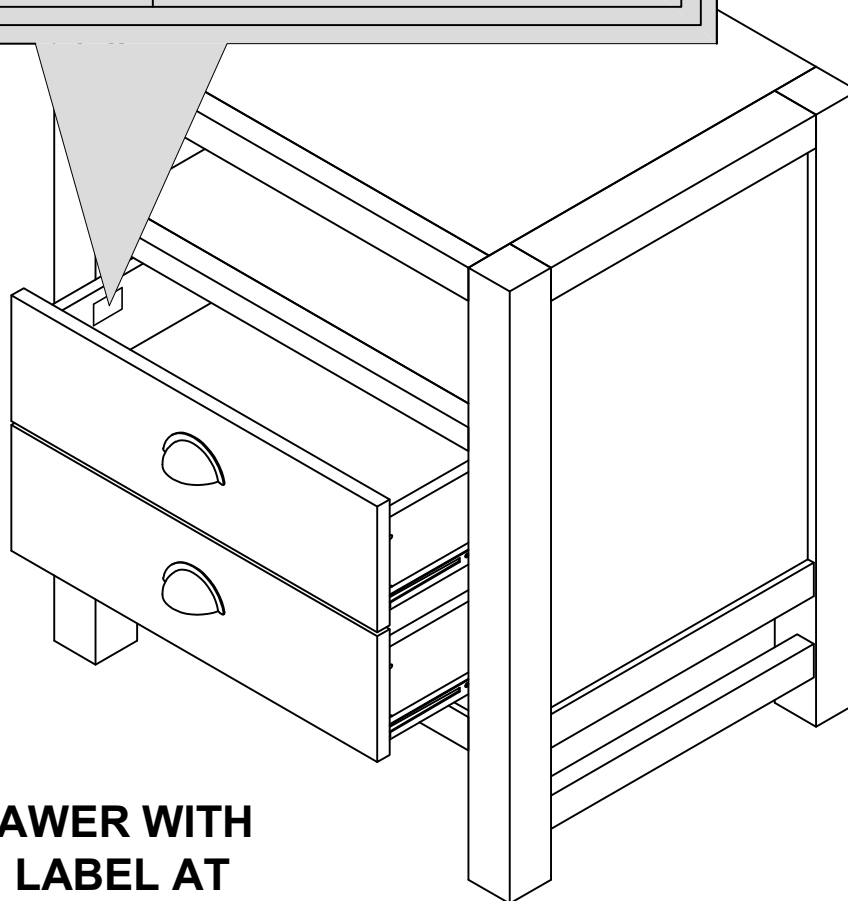








**PLACE DRAWER WITH  
WARNING LABEL AT  
TOP**

"H" Anti-Tip

<b>A</b>	 4x14 Screw	<b>02</b>	<b>C</b>	 Plastic wall bracket	<b>02</b>
<b>B</b>	 4x35 Screw	<b>02</b>	<b>D</b>	 Nylon strap 140mm	<b>01</b>

Secure to Stud behind Wallboard

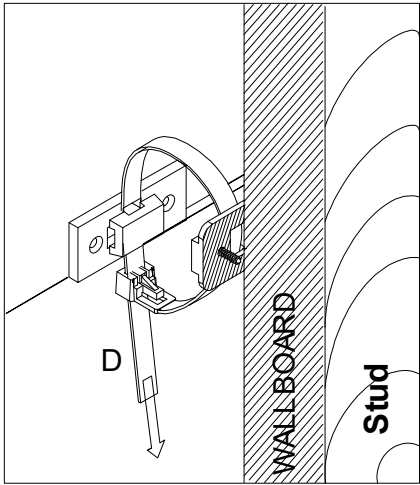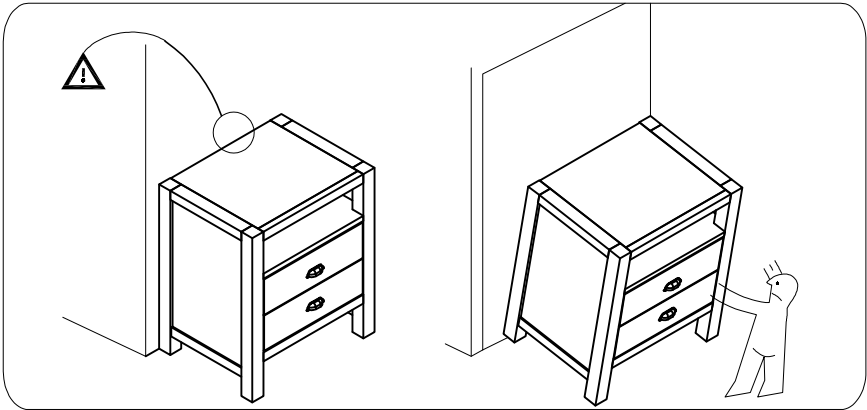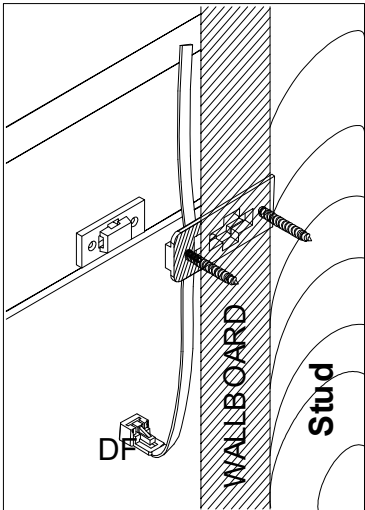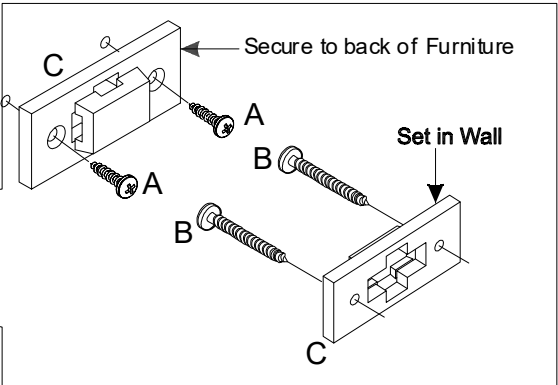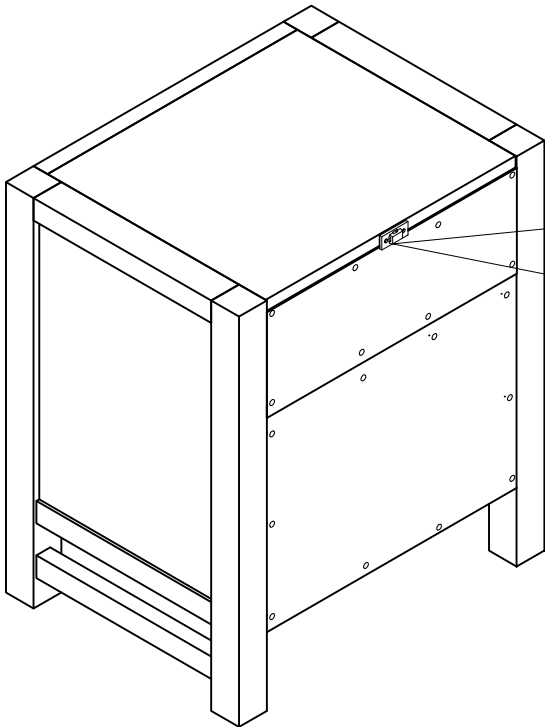

Secure to Stud behind Wallboard!