


43.3" Desk with Drawers

Bestier
ASSEMBLY
INSTRUCTION

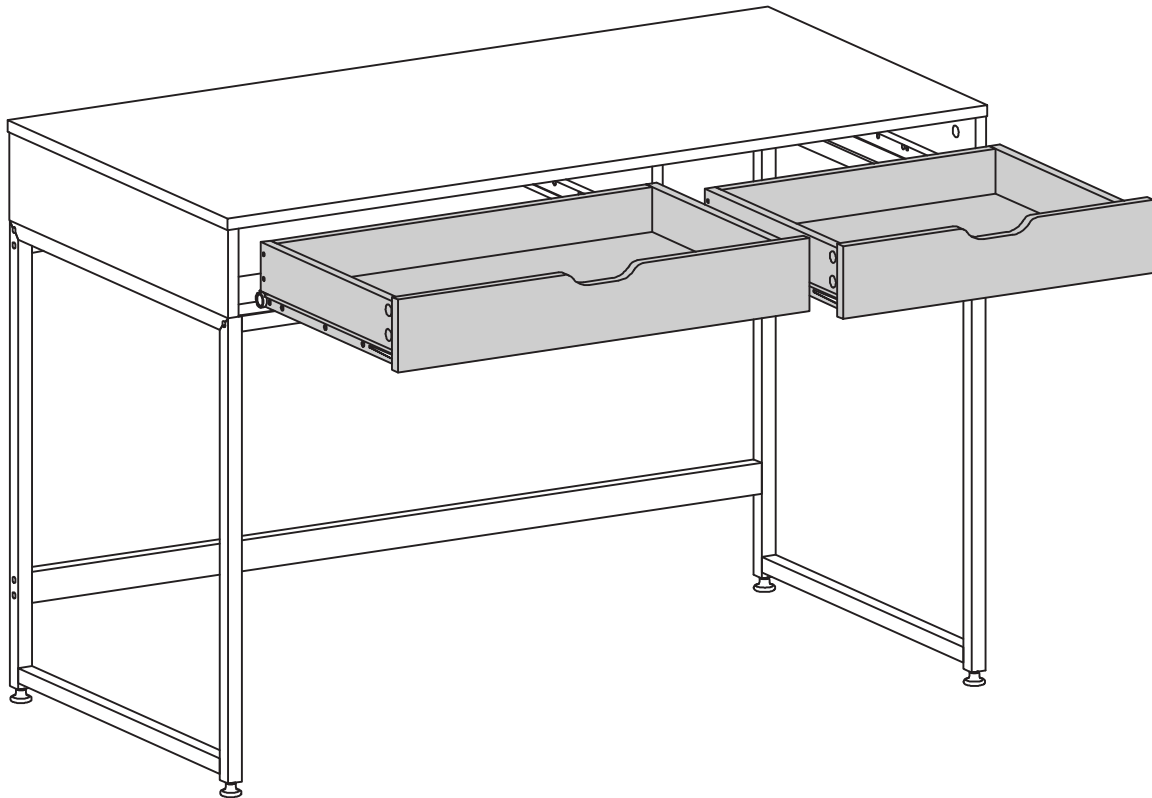

Know more about Bestier from



CUSTOMER SUPPORT

CONTACT US BY:

PHONE: 888-666-1086

EMAIL: Service@bestier.net

Thanks for choosing Bestier!
Feel free to contact us if you need any help.
Please kindly share your shopping experience
with us on the platform if you are satisfied with it.

HELPFUL HINTS

! BEFORE YOU START

- Inspect product packaging to ensure the appearance is good.
- Read the assembly instruction carefully and follow it step by step.
- To avoid any scratching, putting a soft blanket on the floor is suggested.
- Identify, sort and count all the parts with tags.
- Find out installation position according to the drawing and install it in correct steps.

! OTHER


- People needed for assembly: 1-2.
- Estimated assembly time: 0.5-1h.
- An electric drill needed.

! CAUTION












- Be cautious when using a power drill or power screwdriver.
- Please be aware to slow down and stop when screw is nearly tight.
- Do Not use any harsh chemicals or abrasive cleaners for this item.
- Push, pull or drag this item carefully.


DETAILS

UNIT : INCH

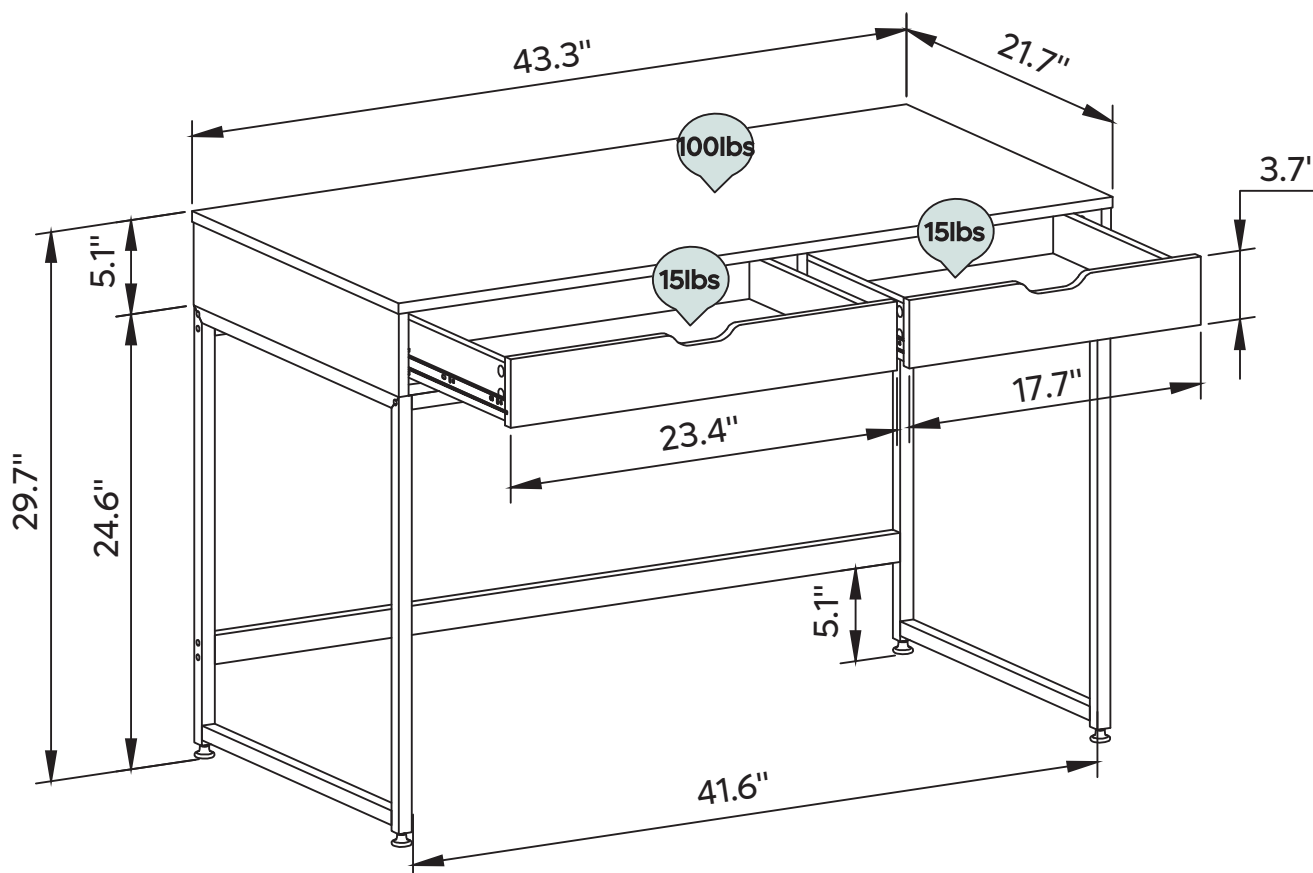


PART LIST

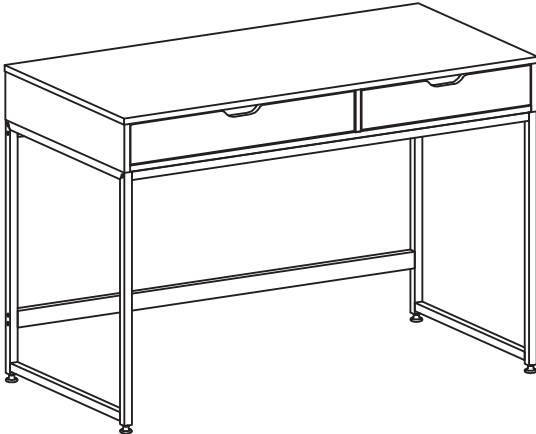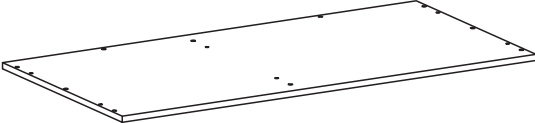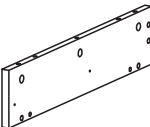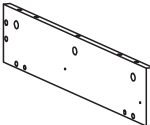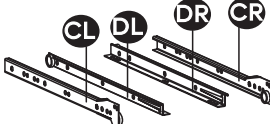	 X2	 X1	
	 X1	 X1	
 X1	 X1	 X1	
 X1	 X1	 X1	 X1
 X2	 X2	 X1	 X1
 X1	 X1	 X1	 X1
 X1	 X2	 X4	

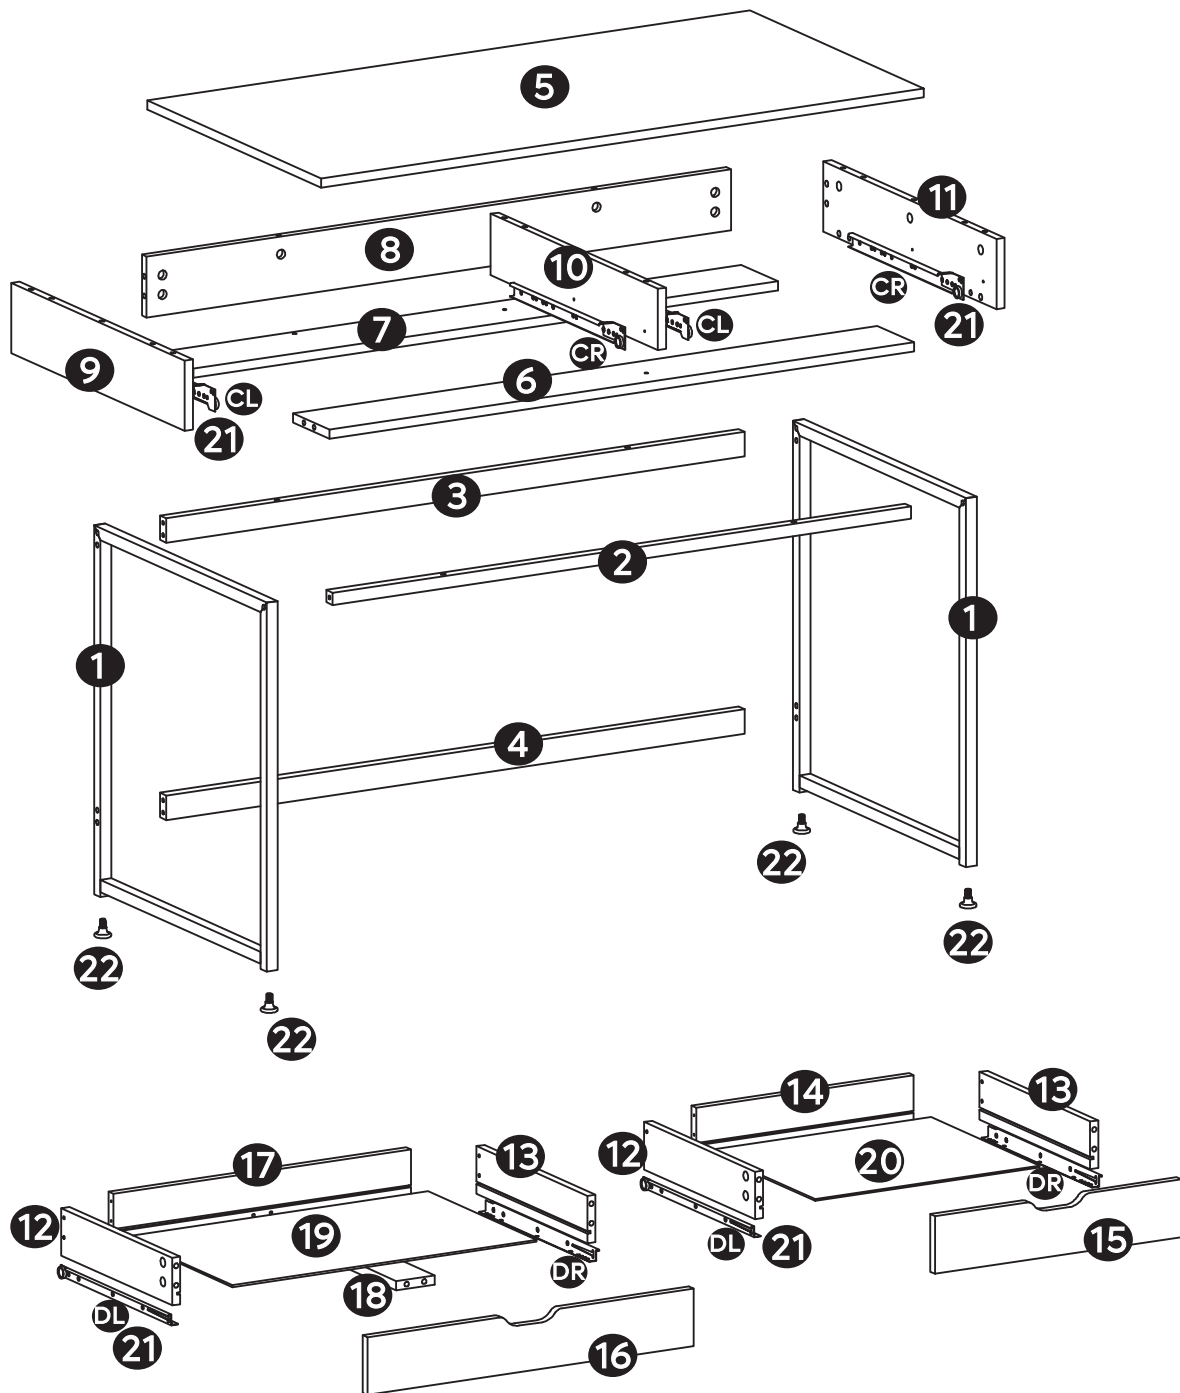


ACCESSORY LIST


No.	PICTURE	SIZE	QTY	No.	PICTURE	SIZE	QTY
A	 A1  A2	M6x35mm	27	F		M6x50mm	2
B		Ø8x30mm	11	G		ST3.5x40mm	10
C		ST5x40mm	4	H		ST3x14mm	16
D		M6x30mm	2				
E		M6x35mm	10				

Detailed Installation for Accessory A


1 Screw cam dowel on the panel.

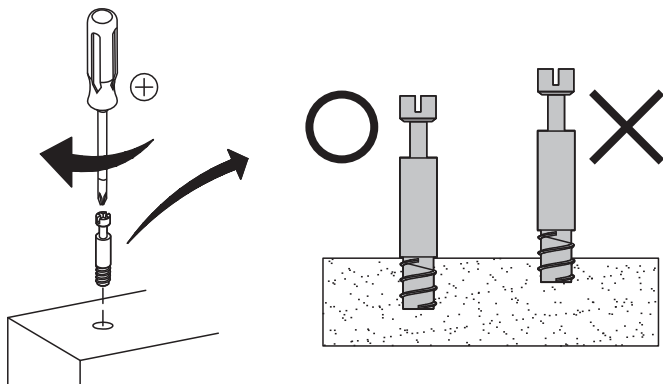


2 Place another panel via the dowel.

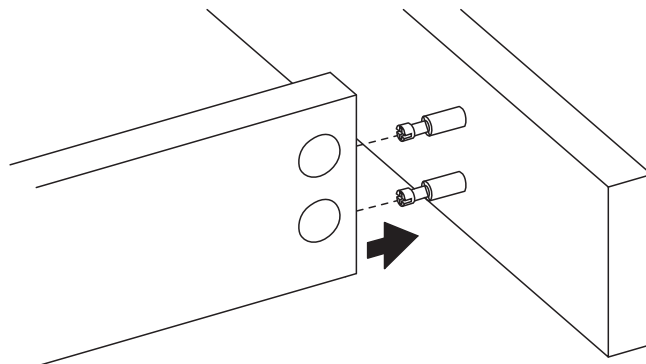



3 Pay attention to the direction of cam lock when putting it into hole.

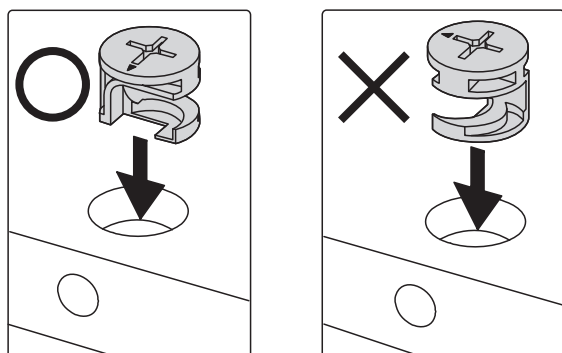

4 Tighten up cam lock clockwise until it stops.

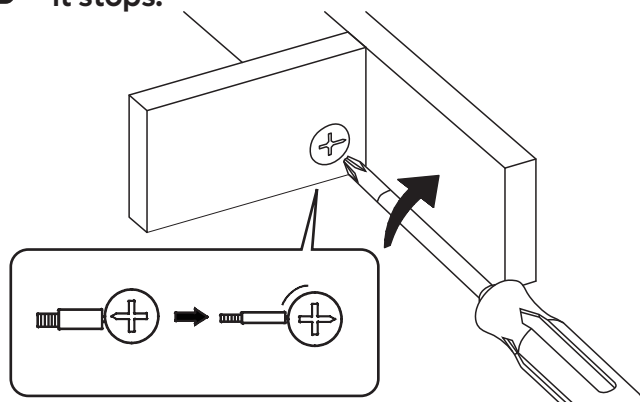

STEP 1

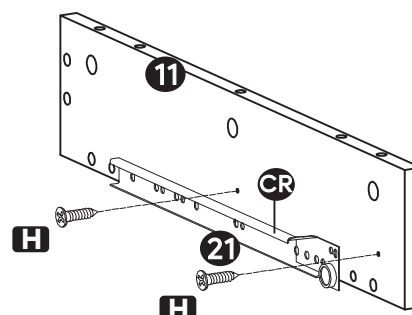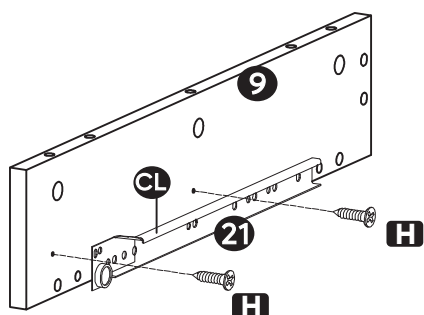


H 

ST3x14mm 4


STEP 2

※Two 21(CR,CL) are needed to be installed at the left and right sides of Part 10.

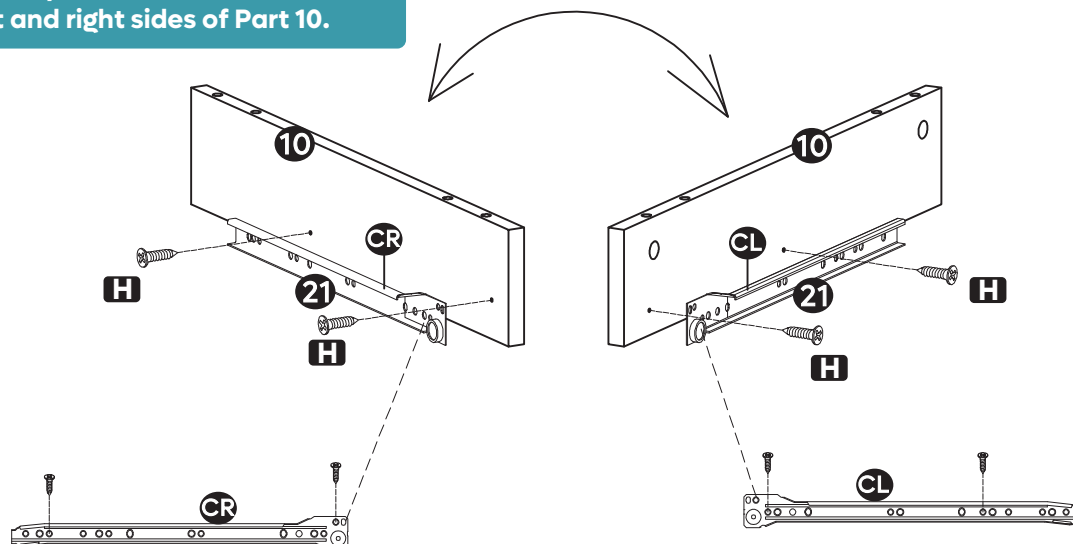


H  ST3x14mm 4


STEP 3

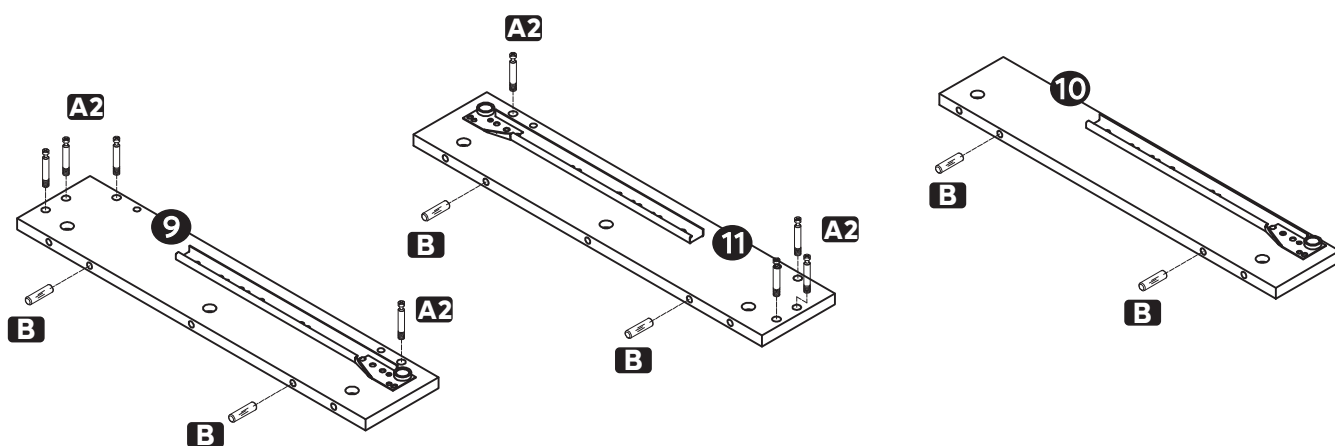


A2  M6x35mm 8

B  Ø8x30mm 6

STEP 4

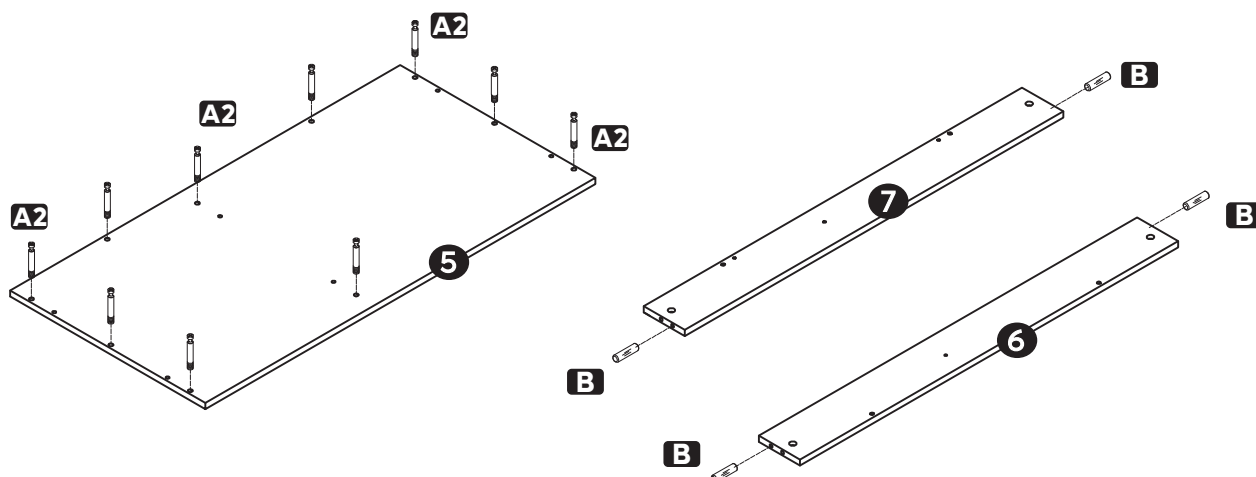


A2  M6x35mm 10

B  Ø8x30mm 4

STEP 5


- ※ Two persons are needed.
- ※ Before tightening screws, make sure Part 7 and Part 8 are well aligned.

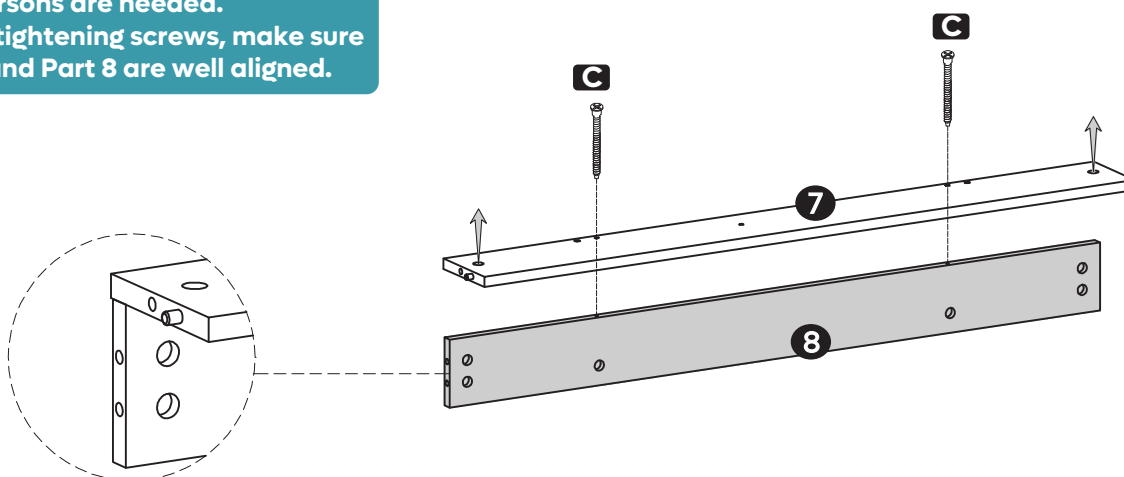

C  ST5x40mm 2


STEP 6

- ※ Two persons are needed. One for holding Part 6 while the other for Part 7.

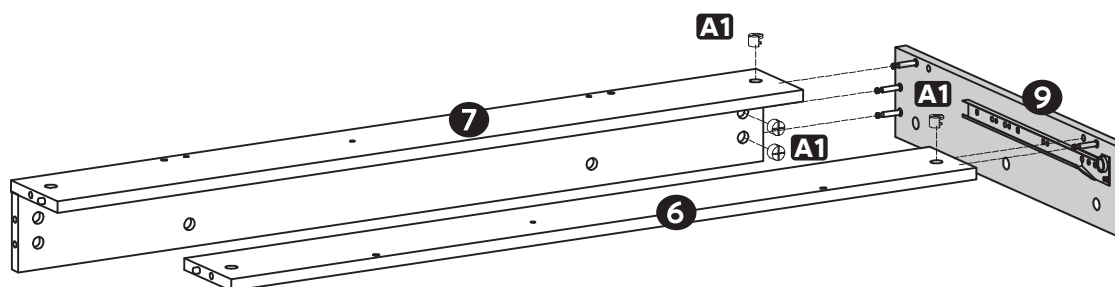


A1  Ø15mm 4

STEP 7

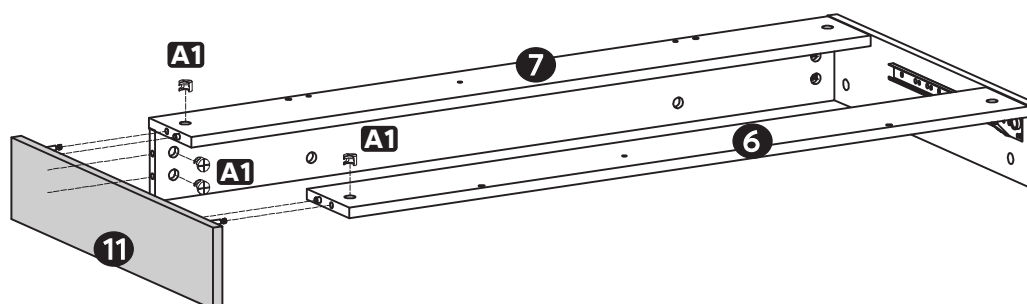

A1  Ø15mm 4

STEP 8

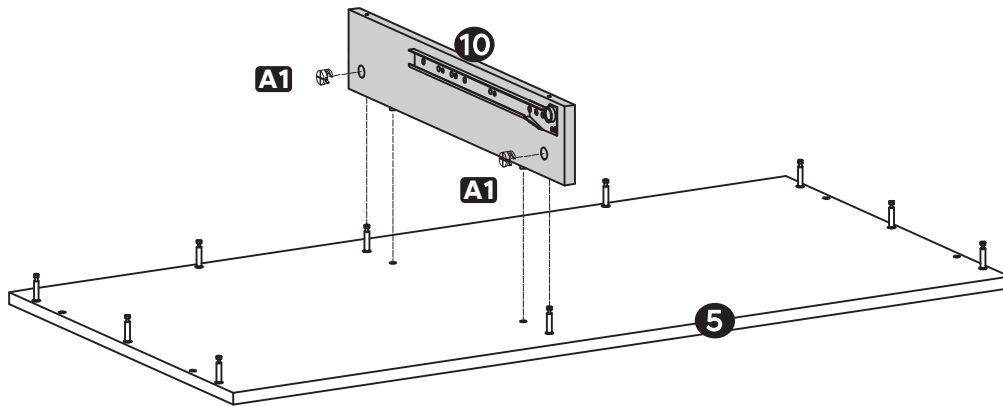


A1



Ø15mm

2

STEP 9

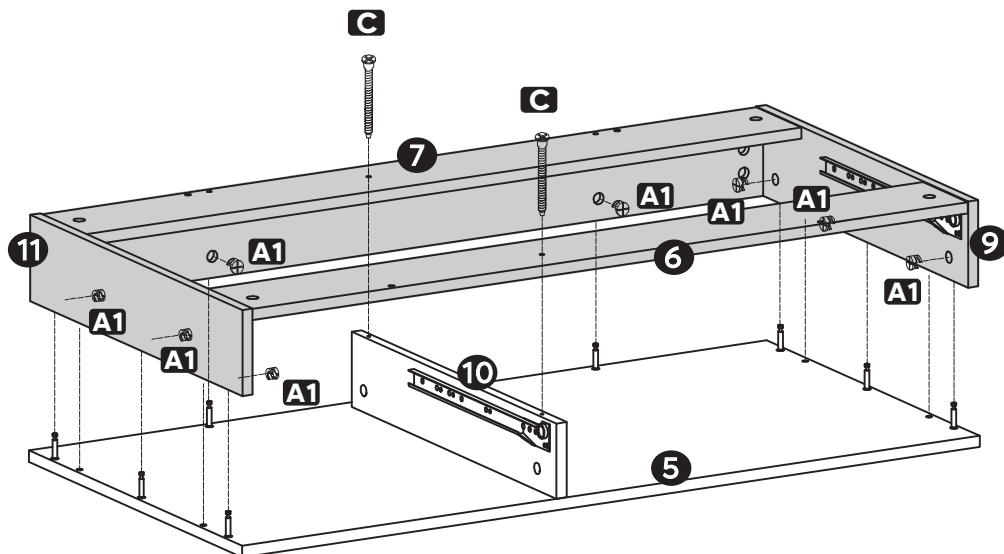

A1



M6x35mm

8

C




ST5x40mm 2

D251Y

08


STEP 10

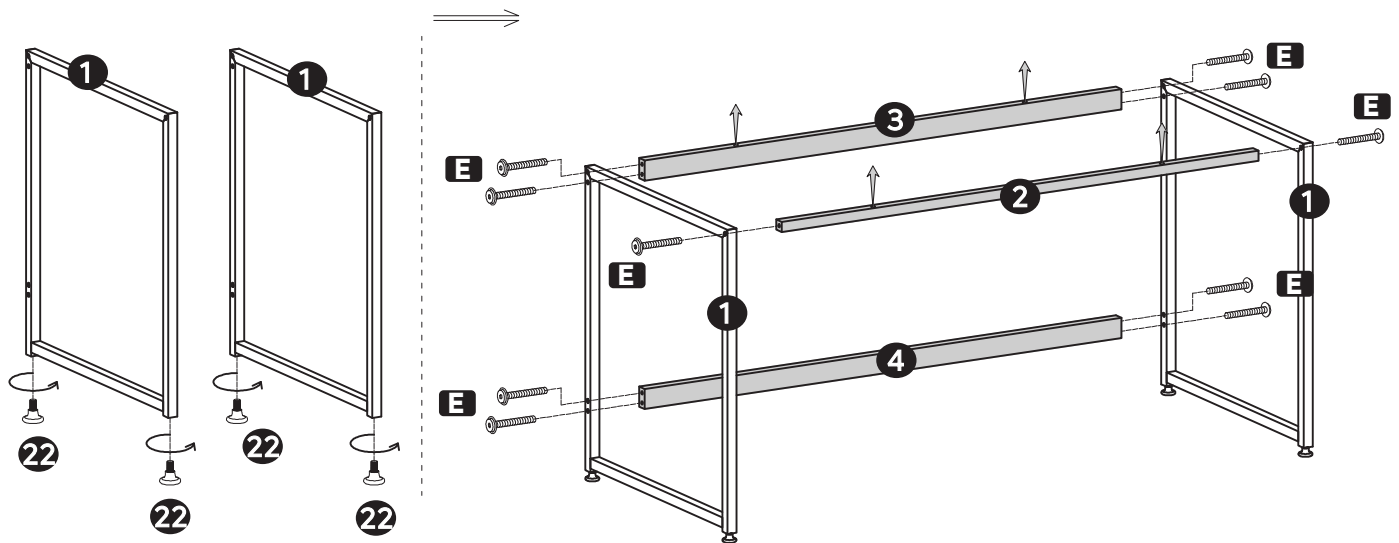

E  M6x35mm 10

STEP 11


※Attention: Board would get damaged if Screw F and Screw D are installed at wrong position.

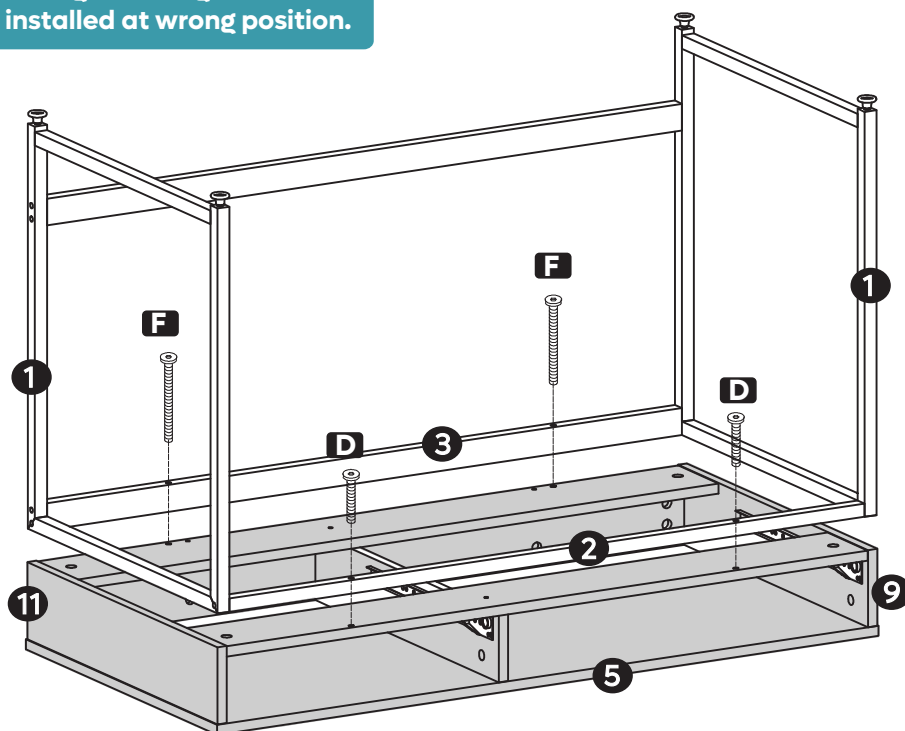

D  M6x30mm 2

F  M6x50mm 2

STEP 12

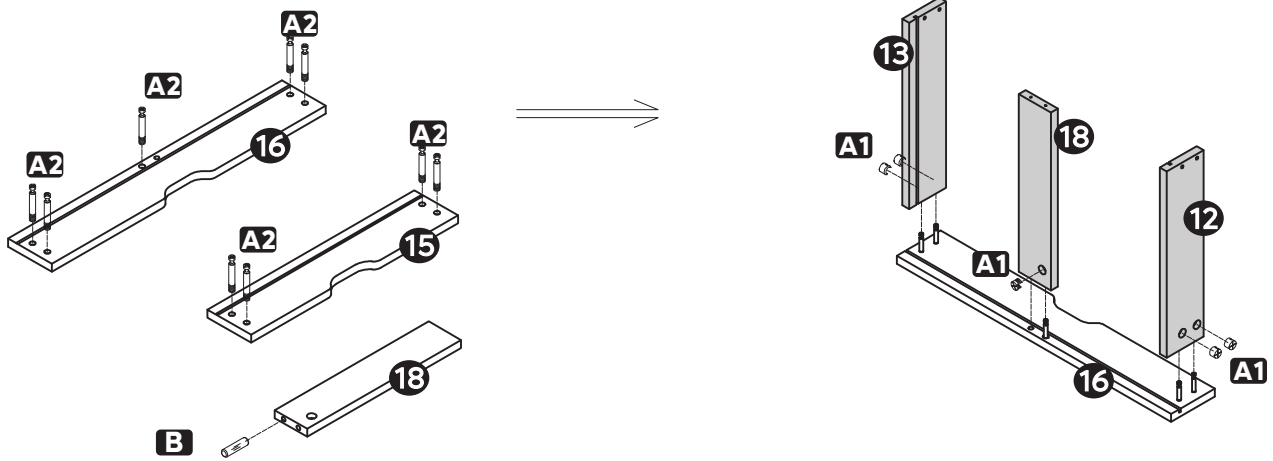


A1  Ø15mm 5

A2  M6x35mm 9


B  Ø8x30mm 1

STEP 13

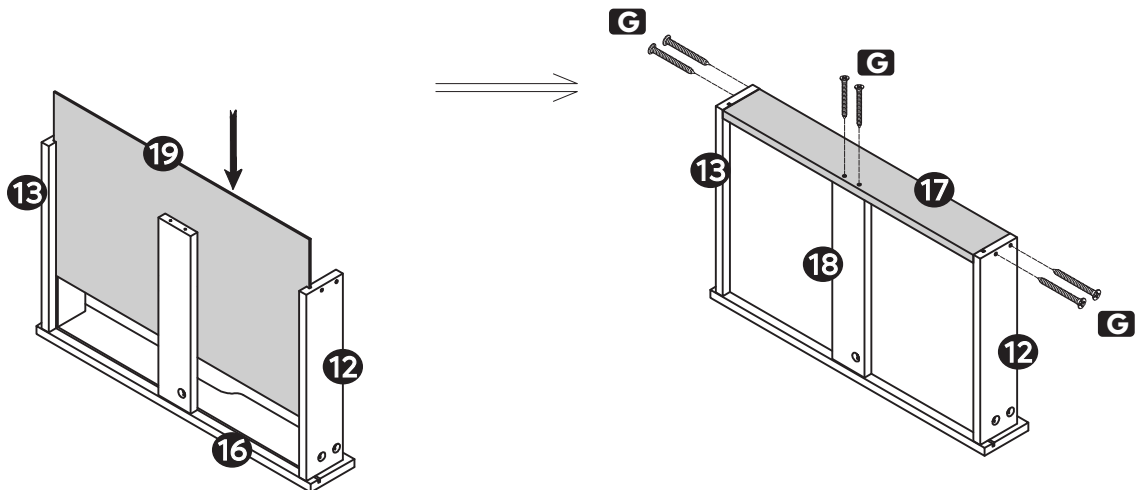

G  ST3.5x40mm 6


STEP 14

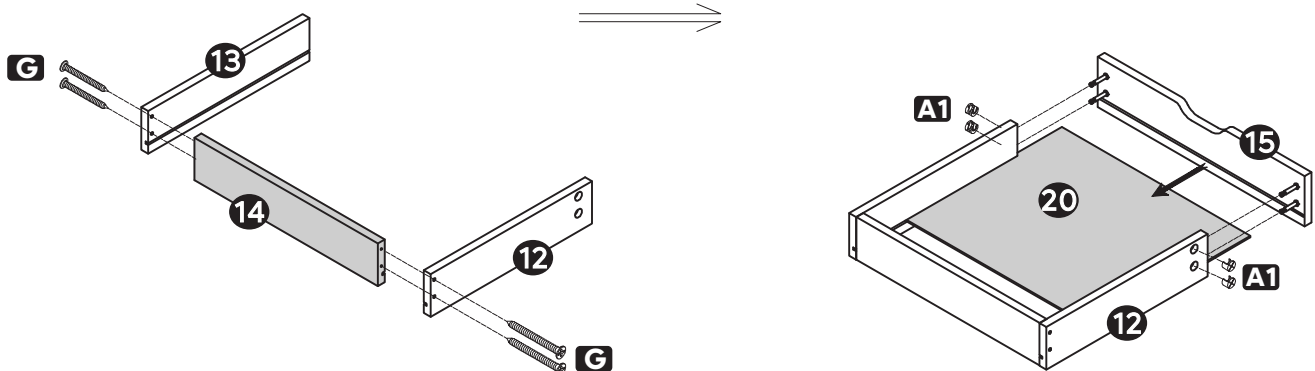

G  ST3.5x40mm 4

A1  Ø15mm 4

STEP 15

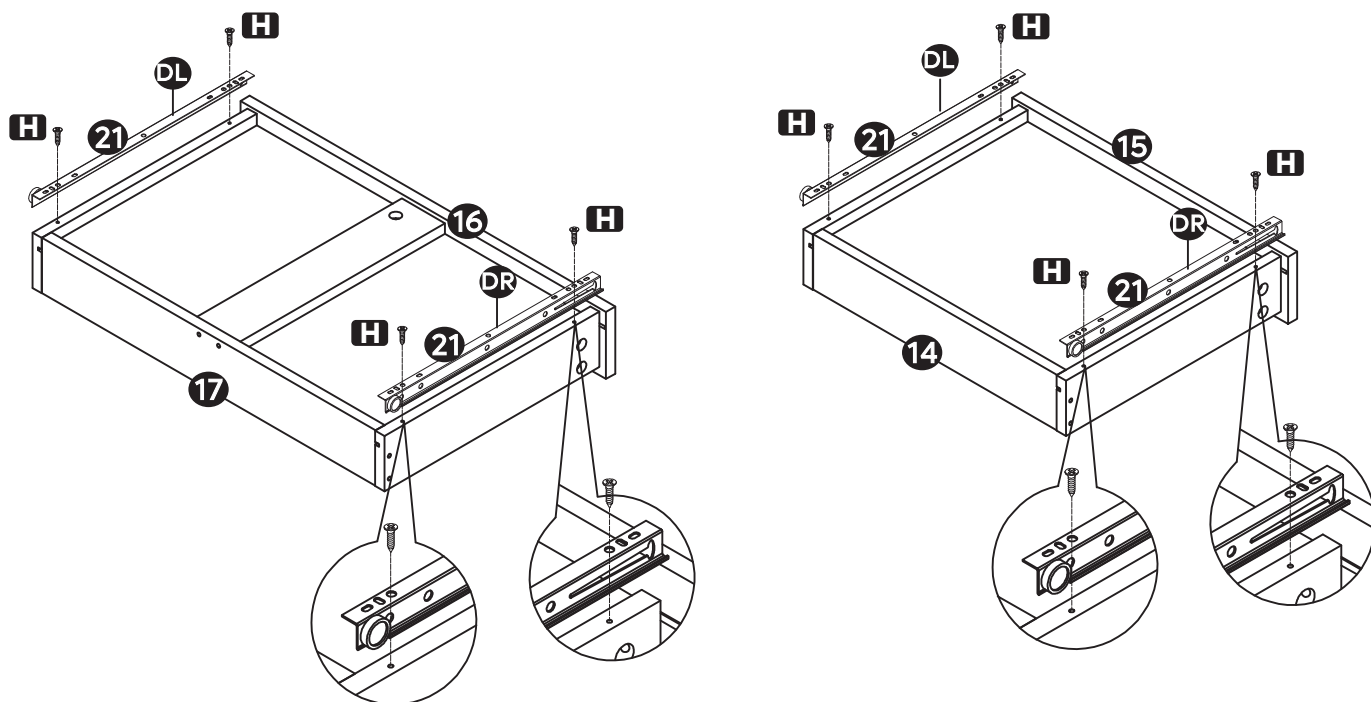

H



ST3x14mm 8

STEP 16

