

IMPORTANT

Read before installing

It is important that the cabinet frame/shell not be distorted by improper installation. Doing so will cause door and drawer faces mis-align, usually protruding on one side. This is not a defect and is not covered by warranty or service.

The key to a good installation of a vanity ensemble is to understand that walls and floors are never exactly level, plumb, or square.

Securing a vanity or ensemble to your walls is important. However, forcing a square cabinet to fit against not-so-square walls will distort the cabinet frame and cause drawer and door hardware to mis-align and bind. While our hardware is fully adjustable to compensate for this visually, the drawers may not open and close smoothly. **Never** close gaps by overly tightening the securing screws. **Always** use shims between the cabinet and wall and floor where gaps exist before tightening securing screws.

Out of alignment faces that can not be corrected via adjustments are the responsibility of the installer and may require removal of the top and proper re-installation.

Please see simplicitybystrasser.com for complete installation instructions. These are an abbreviated version of those available at our web site.

Cleaning

- **Always** use only a damp soft cloth to clean your Bath Cabinets.
- **Never** use abrasive cleansers on any part of your Bath Cabinet.
- **Never** use a scouring sponge.
- **Never** use bleach, solvents (like nail polish remover), or harsh cleaners on your cabinets.
- **Clean mirrors** with a glass cleaner that does **not** contain ammonia or vinegar and use only on glass surfaces.
Never use a glass cleaner on the finished frames of mirrors, medicine cabinet mirror door frames, or any other non-glass surfaces of your Strasser Woodenworks cabinets!
Doing so will, over time, damage the finish.

If you have questions, don't hesitate to call our Customer Service
Toll Free 1-800-445-0494, 7AM-4PM Pacific Coast Time.

Thank you for purchasing Strasser Woodenworks Products for your bath.

Crafted in USA. to Last a Lifetime



CAUTION! Remove Doors and Drawers

Always remove drawers and doors from your cabinets during installation and store them away from the work area. This will make your cabinets lighter, easier to move and position, and safer to handle. Drawers and doors open unexpectedly and unbalance the cabinet while you are moving it, causing personal injury or damage to your cabinet. Plus, drawer and door faces will be protected from damage during installation if stored away from your project.

Damage caused during installation is not covered by warranty.

If you are installing an ensemble of more than one piece, clamp components together making sure that they are accurately mated and the top edges are exactly aligned. Drill pilot holes and screw components together. We recommend four screws per pairing.

Place the vanity or ensemble into it's exact final position and level. Shim underneath where necessary.

We recommend screwing to wall studs in at least two positions along the back and one in the side, if the side is against a wall. Shim where necessary at securing points between wall and cabinet if the wall is not exactly straight or plumb.

Installing Simplicity Vanities

The key to a good installation of a vanity ensemble is to understand that walls and floors are never exactly level, plumb, or square.

Securing a vanity or ensemble to your walls is important. However, forcing a square cabinet to fit against not-so-square walls will distort the cabinet frame and cause drawer and door hardware to mis-align and bind. While our hardware is fully adjustable to compensate for this visually, the drawers may not open and close smoothly. **Never** close gaps by overly tightening the securing screws. **Always** use shims between the cabinet and wall and floor where gaps exist before tightening securing screws.

Place your cabinet into approximate position.

Installing Mirrors


Our Mirror mounting system is easy to use, convenient, and very strong.

1. Determine the desired location of the Mirror and mark the wall, with a pencil, at top center of the mirror.
2. Measure from the top of the mirror to the holes in the wall half of the mounting cleat.
3. Measure down the wall that distance from the mark designating mirror top center. Using a level, mark the positions of the cleat mounting holes.


Screw Cleat wall half to the wall. If you are not familiar with types of screws, load, or how to do this for your specific application; ask at a home center.

Removing and Re-installing Doors with 6-way Adjustable Hinges


To remove doors, push tab

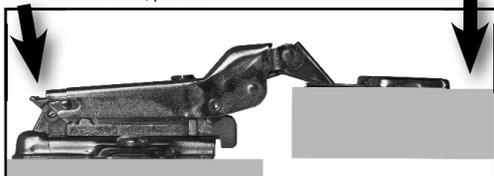

and gently open door beyond natural open position.

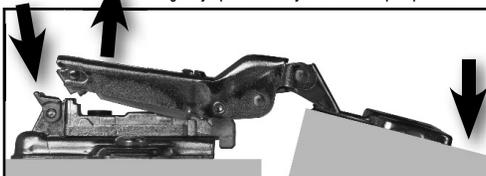


Once both hinges are disengaged, remove the door.

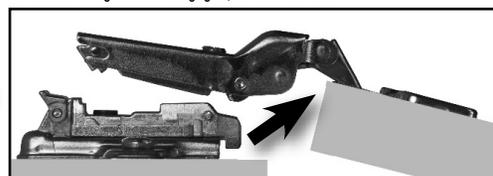




To re-install doors, line up hinges sliding hooks under pins (oval below).



Then push hinges into their receivers until they lock into place.

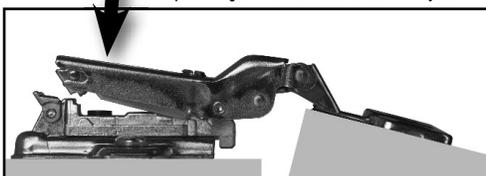

Adjusting Door Face Alignment

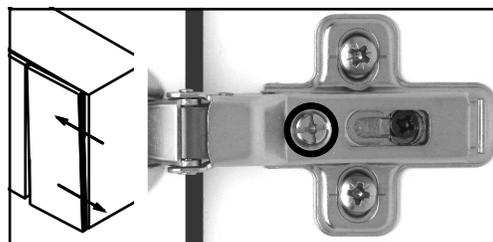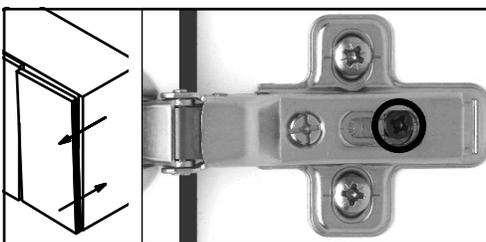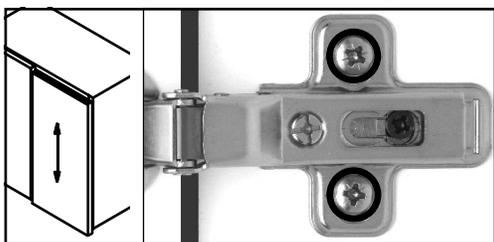

Removing and Re-installing Drawers

To remove a drawer, simply open completely while lifting the drawer box to disengage the drawer box from the cabinet.

To re-install, align the nylon wheels and drawer guides and insert the drawer.

Adjusting Drawer Face Alignment

To adjust drawer face alignment loosen the two indicated screws inside the drawer box slightly and move the face to the desired position. Once you are satisfied, tighten all of these screws on all drawers.

Finally, screw the provided set screws into the small holes beneath the adjusting screws to secure the faces to the drawer boxes.

