




HOW TO LOAD A SUREBONDER STAPLE GUN

STEP #1

Determine length of staples to be used for your project.

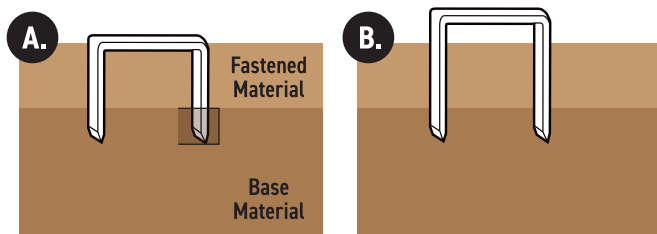

A. The staple should sit flush with your fastened material and sink 3/16" into base material.

B. If staple doesn't sit flush then the staple is too long, try a shorter leg length.

NOTE: Leg length should be 2½ times longer than the thickness of the material being stapled to.

STEP #2

Squeeze the track release and pull out the track.



STEP #3

Load a staple strip into the empty chamber with the points facing up.



STEP #4

Push the track release closed and now you're ready to start your project.

NOTE: If the staples are loaded incorrectly the track will not close.

Push track in until it clicks shut

