




Install Shelving Brackets into Drywall

Tools and Materials

Waddell Brackets, Stud Finder, Pencil, Level, Tape Measure, Drill and Bits, Wood Screws, Mollies, Screwdriver, Safety Goggles, Hammer

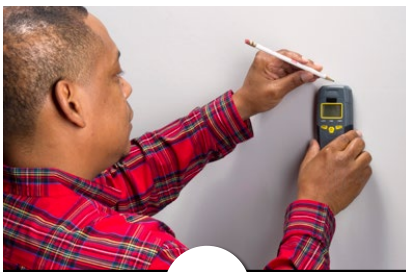


1

Plan shelf placement. Locate and mark wall studs using a pencil.



2

When studs do not align with your desired placement, use a tape measure and a level to mark bracket locations.

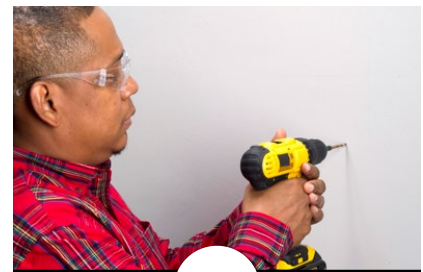


3

Drill pilot holes.




4

Insert molly bolts into pre-drilled holes. Tap mollies into wall using a hammer.

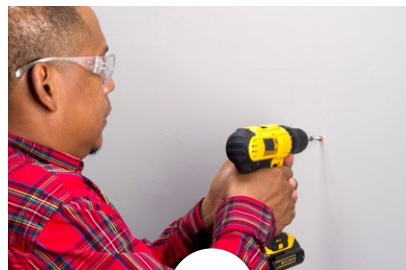


5

Insert screws with drill or screwdriver.

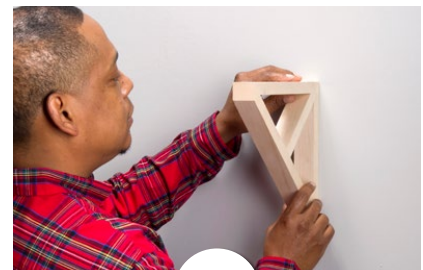


6

Secure Waddell brackets.

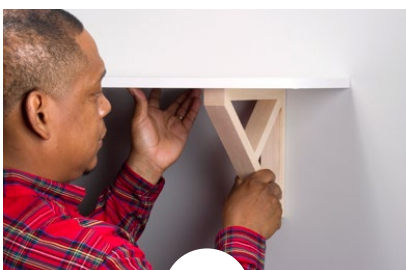

7

Place shelving.

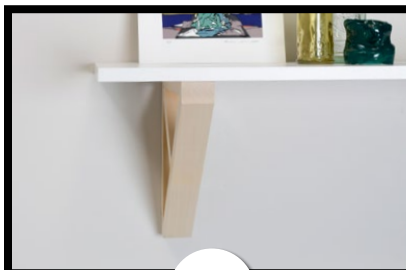

8

Enjoy!

Waddell accepts no liability whatsoever for the safety, reliability, durability, and performance of any of our companies' products when used in a manner exceeding the maximum load guidelines or for the use/misuse of the tools used during installation.