




## Recommended Placement Guide

### 2-Bar & 3-Bar Footing Stands

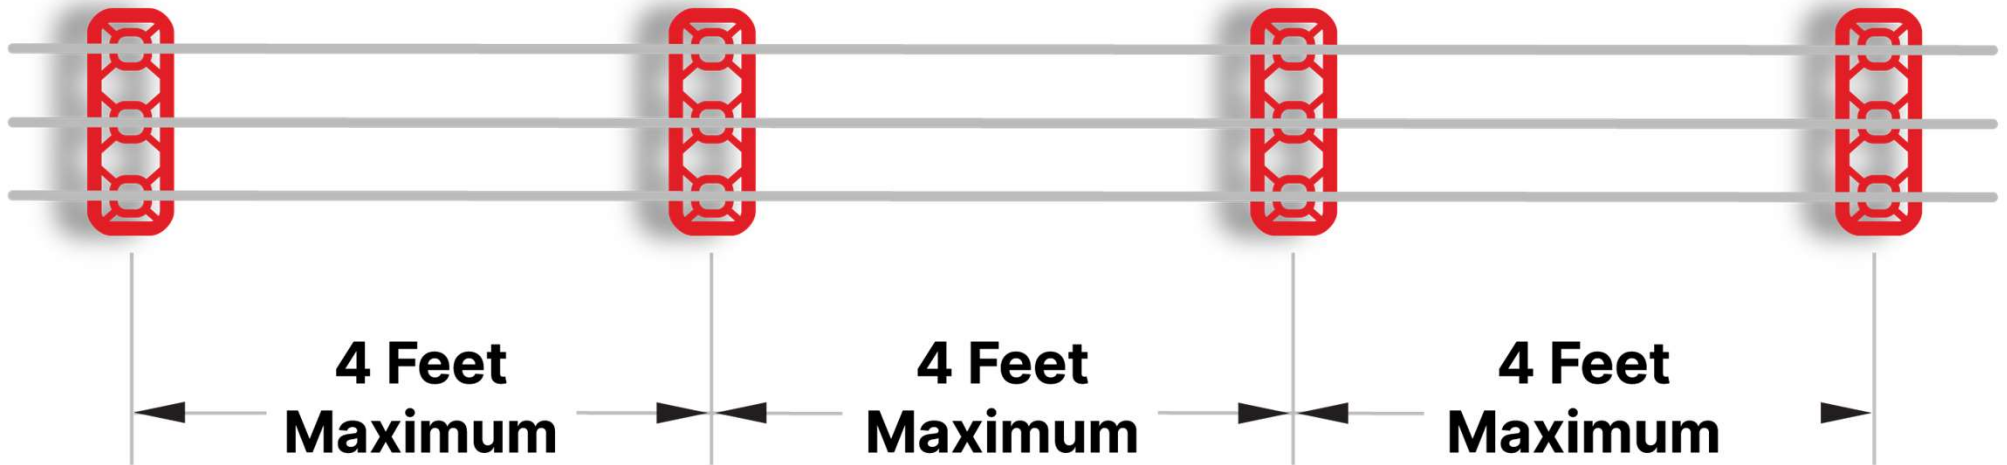

For our 2-Bar and 3-Bar Footing Stands, we recommend placing a stand every 4 feet. Simply snap the reinforcement into the clips, and you are finished. No wire tying needed. Our footing stands ensure the reinforcement stays in the right place before, during, and after the concrete pour.

