


Stud Solver Installation

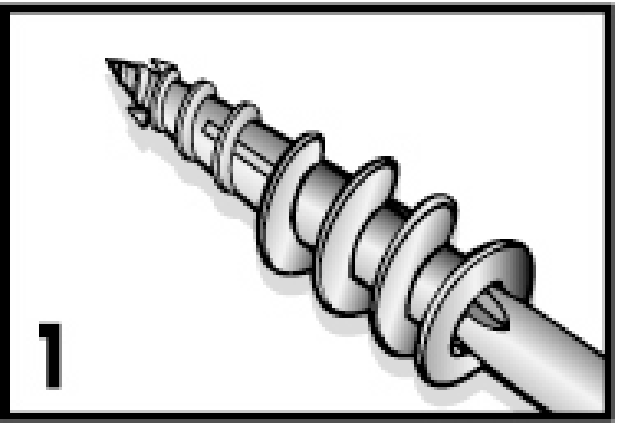

Using #2 Phillips, press tip of E-Z Ancor® into drywall.

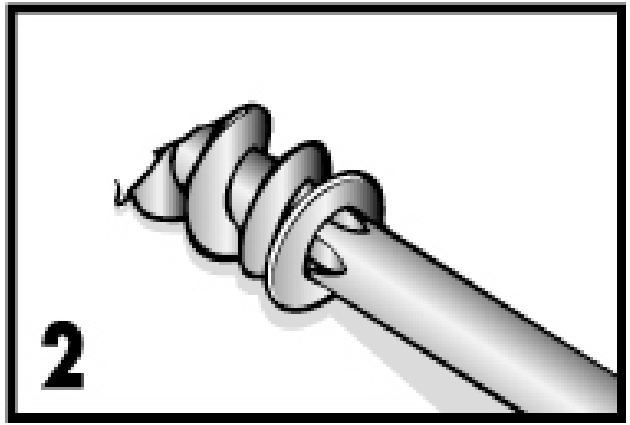

Press firmly and turn clockwise until seated flush. If resistance is felt due to stud, increase pressure and continue turning.

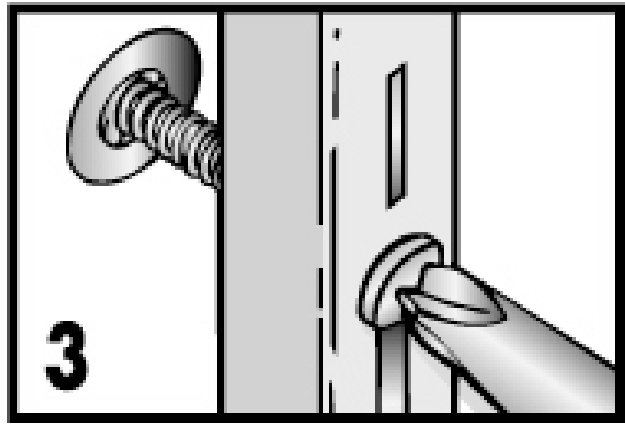

Place fixture (max. 3/4" thick) over E-Z Ancor®, insert screw and fasten.