



WALL REGISTER

MEASURING
TIP:

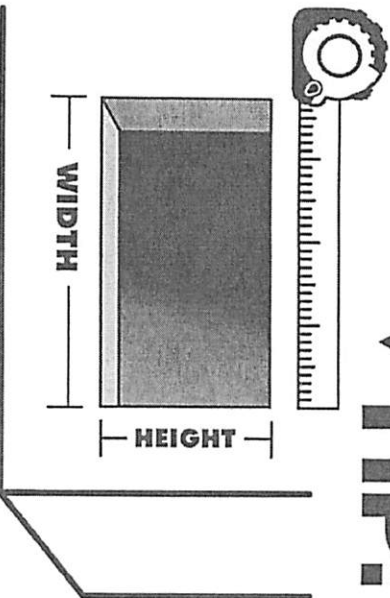


1 MEASURE WALL DUCT OPENING FIRST.
(WIDTH X HEIGHT)

NOTE: DO NOT MEASURE THE FRONT SIDE OF REGISTER.

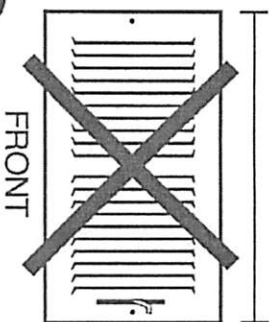

2 REVERSE SIDE OF WALL REGISTER FITS ±1/2"

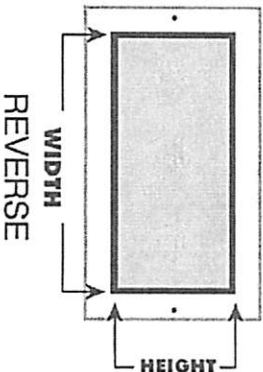


IF DUCT OPENING MEASURES:

WIDTH: 9 1/2"

HEIGHT: 5 1/2"

THEN SELECT: 10" X 06"

3 INSTALL NEW REGISTER INTO WALL OPENING

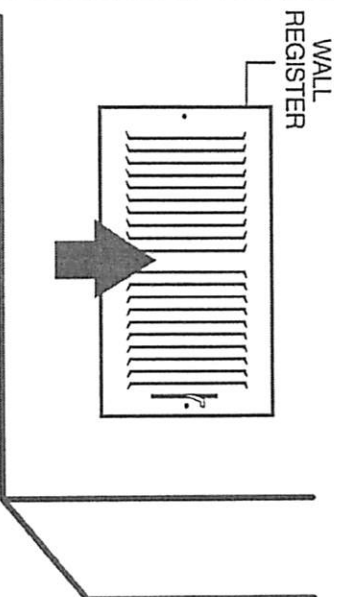

**YOU'RE DONE.
GREAT JOB!**

SCAN CODE FOR VIDEOS & TIPS

