



# EASY STEPS

## HOW TO ADD COUNTERWEIGHT TO YOUR URNS

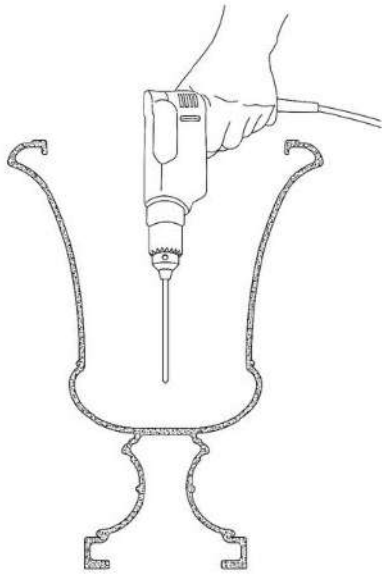


**1** DRILL APPROXIMATE 1/2 INCH DIA HOLE IN THE BOTTOM OF CONTAINER WHEN USING OUTDOORS

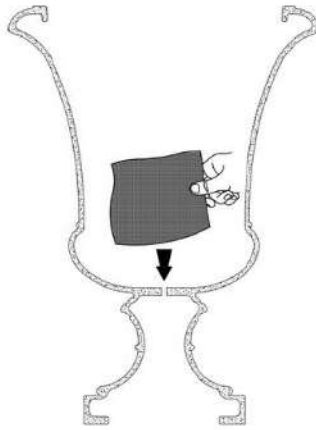

**2** COVER BOTTOM OF CONTAINER WITH LANDSCAPE FABRIC




**3** SPREAD APPROXIMATELY 18.15 LBS OF ROCK, AROUND 2 INCH DEEP ON TOP OF THE LANDSCAPE FABRIC

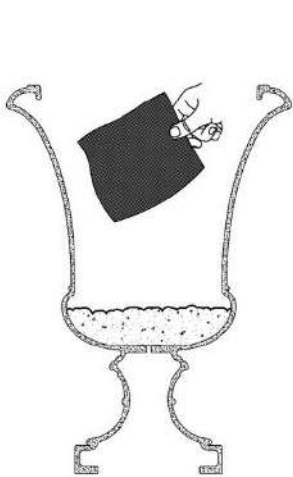

**4** FULLY COVER ROCK WITH 2ND LAYER OF LANDSCAPE FABRIC



**5** FILL THE CONTAINER WITH SOIL, OCCUPYING ABOUT 2/3 OF THE REMAINING SPACE

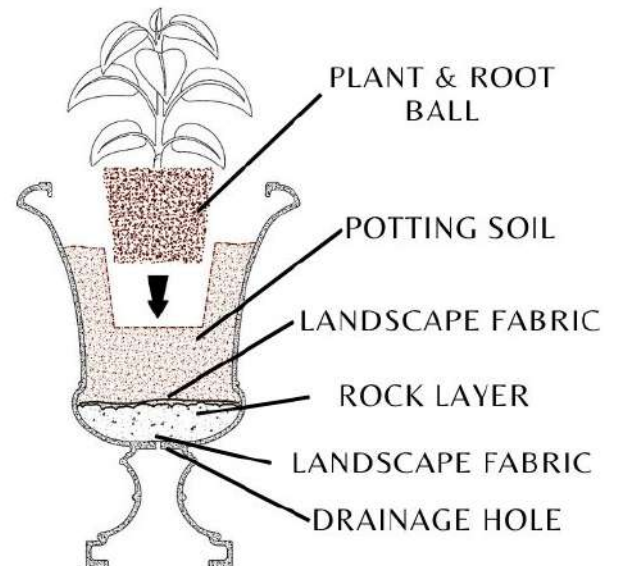

**6** AFTER MAKING ROOM IN THE CENTER OF THE CONTAINER AND POTTING SOIL FOR THE ROOT BALL, REMOVE THE PLANT FROM ITS ORIGINAL CONTAINER AND PLACE IN THE CENTER OF THE SOIL. FILL THE CONTAINER WITH POTTING SOIL AND GENTLY COMPACT SOIL AROUND THE ROOT BALL. WATER THOROUGHLY AND ENJOY YOUR NEW PLANT!