

# Wire Shelving – 9500 / 9600 Series

## Stationary and Mobile

### Assembly Instructions

Thank you for selecting 9500-S / 9600-S (Stationary) or 9500-M / 9600-M (Mobile) wire shelving from Salsbury Industries. We are confident that the quality and construction of the wire shelving will prove to be a good investment. These instructions are to assist you in assembling the wire shelving.

#### Preliminary Notes

Please read the complete assembly instructions before attempting to assemble the wire shelving. Check the parts to be sure that they are correct for the job and that there is no damage. First review all illustrations to identify part names.

Each wire shelving unit includes

1. Four (4) posts with adjustable feet
2. Four (4) adjustable shelves with sixteen (16) shelf clips
3. Four (4) locking casters (if Mobile wire shelving ordered)

#### Assembly




**Note:** The top end of a post is identified by the first groove being about 1/2" from the end. The bottom end of the post is identified by the first groove being about 2-1/2" from the end. Ensure that all four (4) posts are positioned in the same direction when installing the shelf clips for the bottom shelf.

1. Install both halves of one shelf clip at the lowest desired shelf position on the bottom end of one of the posts. The tabs and notches on each half should mate securely, holding the clip in position. **Note that there are ridges inside the clips that lock into grooves on the post.** There are alignment marks on the outside of the clips to facilitate positioning the clips such that the interior ridges mate with the post grooves. Install the clips in the exact same position on the other three (3) posts.

2. Identify the bottom versus the top of a shelf by noting that the top of the shelf has the large wire grid and that the markings on the collars on the corners of the shelf read upright. Slide a post up through the bottom end of the collar on one of the corners of a shelf until the shelf clip is inside the collar except for about 1/8" of the shelf clip still visible. Repeat for the other three (3) posts, installing each in another corner of the shelf. Stand the unit upright with the bottom ends of the posts on the floor.

3. Install the remaining three (3) shelves up from the bottom at the desired positions, repeating Steps 1 and 2.

4. Turn the unit on its side and install the adjustable feet (Stationary) or casters (Mobile), as desired. If casters are being installed, the adjustable feet that are in the box with the posts will not be used. The assembly is now complete.

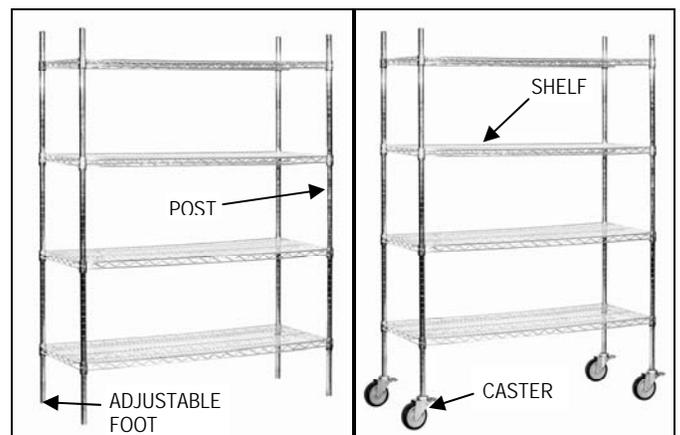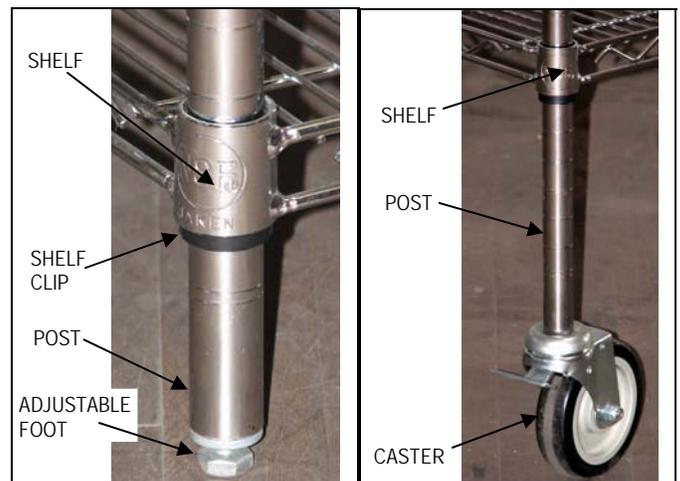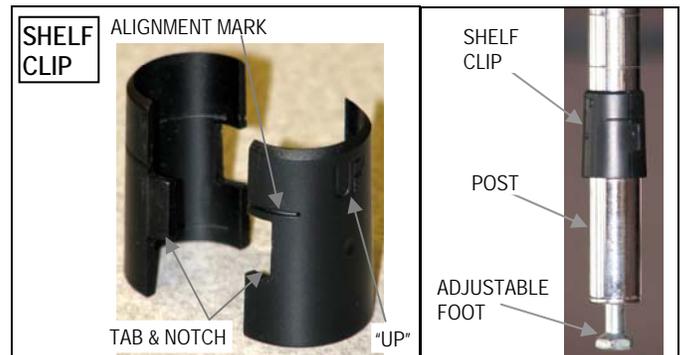

#### SALSBUURY INDUSTRIES

1010 East 62<sup>nd</sup> Street, Los Angeles, CA 90001-1598  
 Phone: 1-800-562-5377 Int'l Phone: 323-846-6700  
 Fax: 1-800-562-5399 Int'l Fax: 323-846-6800