
TIPS:

In order to keep the standstable
2 screws must be installed on
the 2 black marked holesthis
needs to be removed first.





Determine the desired height and position and mark it.

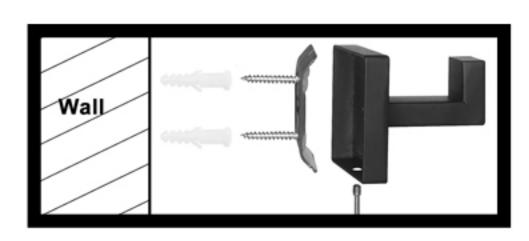

Use the supplied to mark the location of the installation holes.




Drill screw mounting holes on thewall.



Using a hammer to hit the anchor into the holes.



Fix the gasket of the product on the wall with phillips screwdriver.

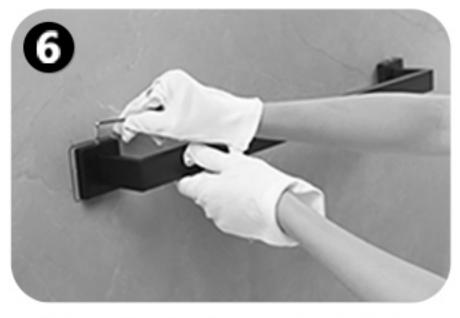

Using the "L" tool to install the other parts of the products.