

installation instructions:

WOOD FRETWORK CEILING PANELS

SAFETY INSTRUCTIONS

Make sure to use the correct tools recommended.

Wear safety goggles.

Follow fixture, power tools, and paint manufacturers' instructions and users manuals.

Use common sense and follow good construction practices.

TOOL & MATERIAL CHECKLIST

- Standard power grab adhesive
- Circular Saw or Table Saw
- Paint or quality wood stain
- Power drill, brad nailer or hammer
- Fine sandpaper
- Small brad nails
- Chalk line and measuring tape

IMPORTANT INFO

- It is highly recommended that you paint or stain the panels before installation.
- It is recommended for finishing to use quality paint for MDF panels and stain for all other wood species.
- Make sure the surface and the back of the panel are completely dry before installation.
- Before installing, acclimate the wood panels in the room where you will be installing them.
- In most applications you will have to trim some panels. Cut them with a standard table saw or power tool. Sand cut edge to remove debris.
- Depending on your installation method, use standard power grip adhesive and small brad nails.


INSTALL INSTRUCTIONS:

GENERAL INSTALLATION

1. Smooth installation surface with sandpaper by removing excessive bumps or texture. Wipe wall clean to clear debris.
2. We recommend finding the center of your ceiling and marking it horizontally and vertically using a chalk line or straight edge. *Shown in diagram with dotted line.*
3. Depending on how many pieces your Fretwork Panel is, will determine how it will get centered. In this diagram, you will angle your piece 90° in each corner of the center
4. Apply a small amount of adhesive to the back of the panel and secure with small brad nails.
5. Apply a small amount of adhesive to the back of the panel and secure with small brad nails. *(Follow adhesive manufacturer's instructions for proper application.)*



EXAMPLE DIAGRAM:

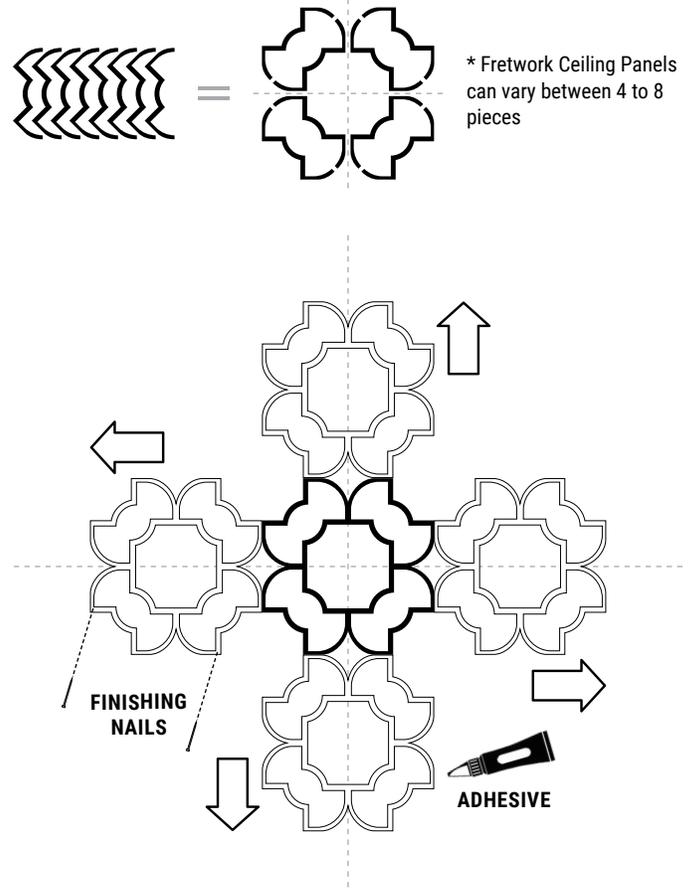

Industry leading manufacturer of urethane, PVC, wood, rustic, and metal millwork

We Can Help. Call (866) 607-0453

www.ekenamillwork.com