

Pictorial Guide for Shower Room S-3460 Front Frame Installation

This is a picture guide to go along with the video instruction



In this presentation
you will learn how
to install the S-
3460 Front Frame

- **Components Page 3-10**
- **Stile and Panel Characters Pages 11-19**
- **Stile and Panel Installation Page 20-26**
- **Track to Panel Installation Page 27-44**
- **Door Stopper Installation Page 45-47**
- **2nd Track to Panel Installation Page 48-57**
- **Assembled Front Frame Page 58-59**

Please call 317-802-9363 (Toll-free 1-877-358-7458 if you have any questions. Thank you for purchasing our product, and good luck!

S-3460 Front Frame Components

2 angled corners

2 tracks

2 front glass panels with stiles attached


8 7/8" screws

Top Track


Bottom Track

Cross sections of tracks



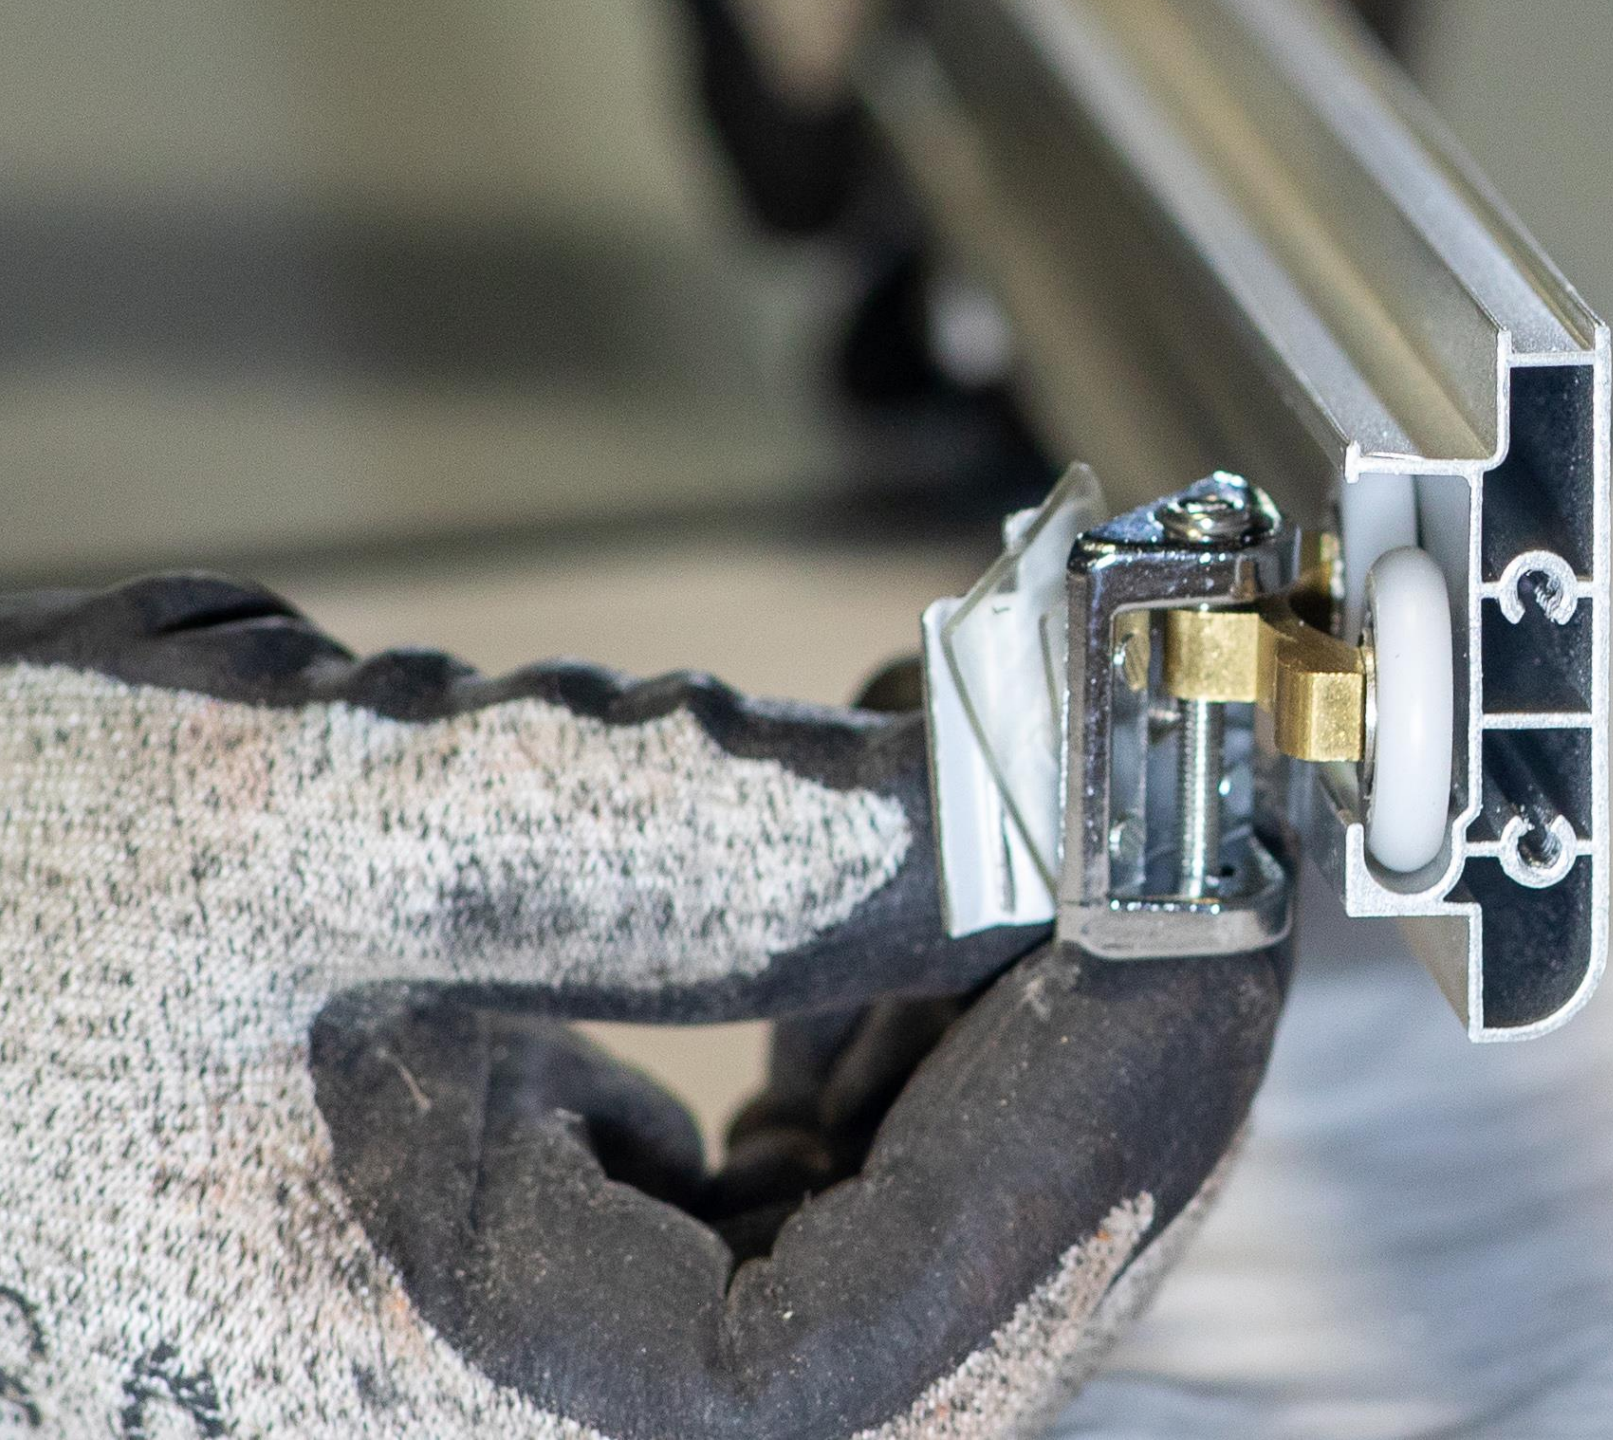

*Top track use
rollers with
screw
adjustments*

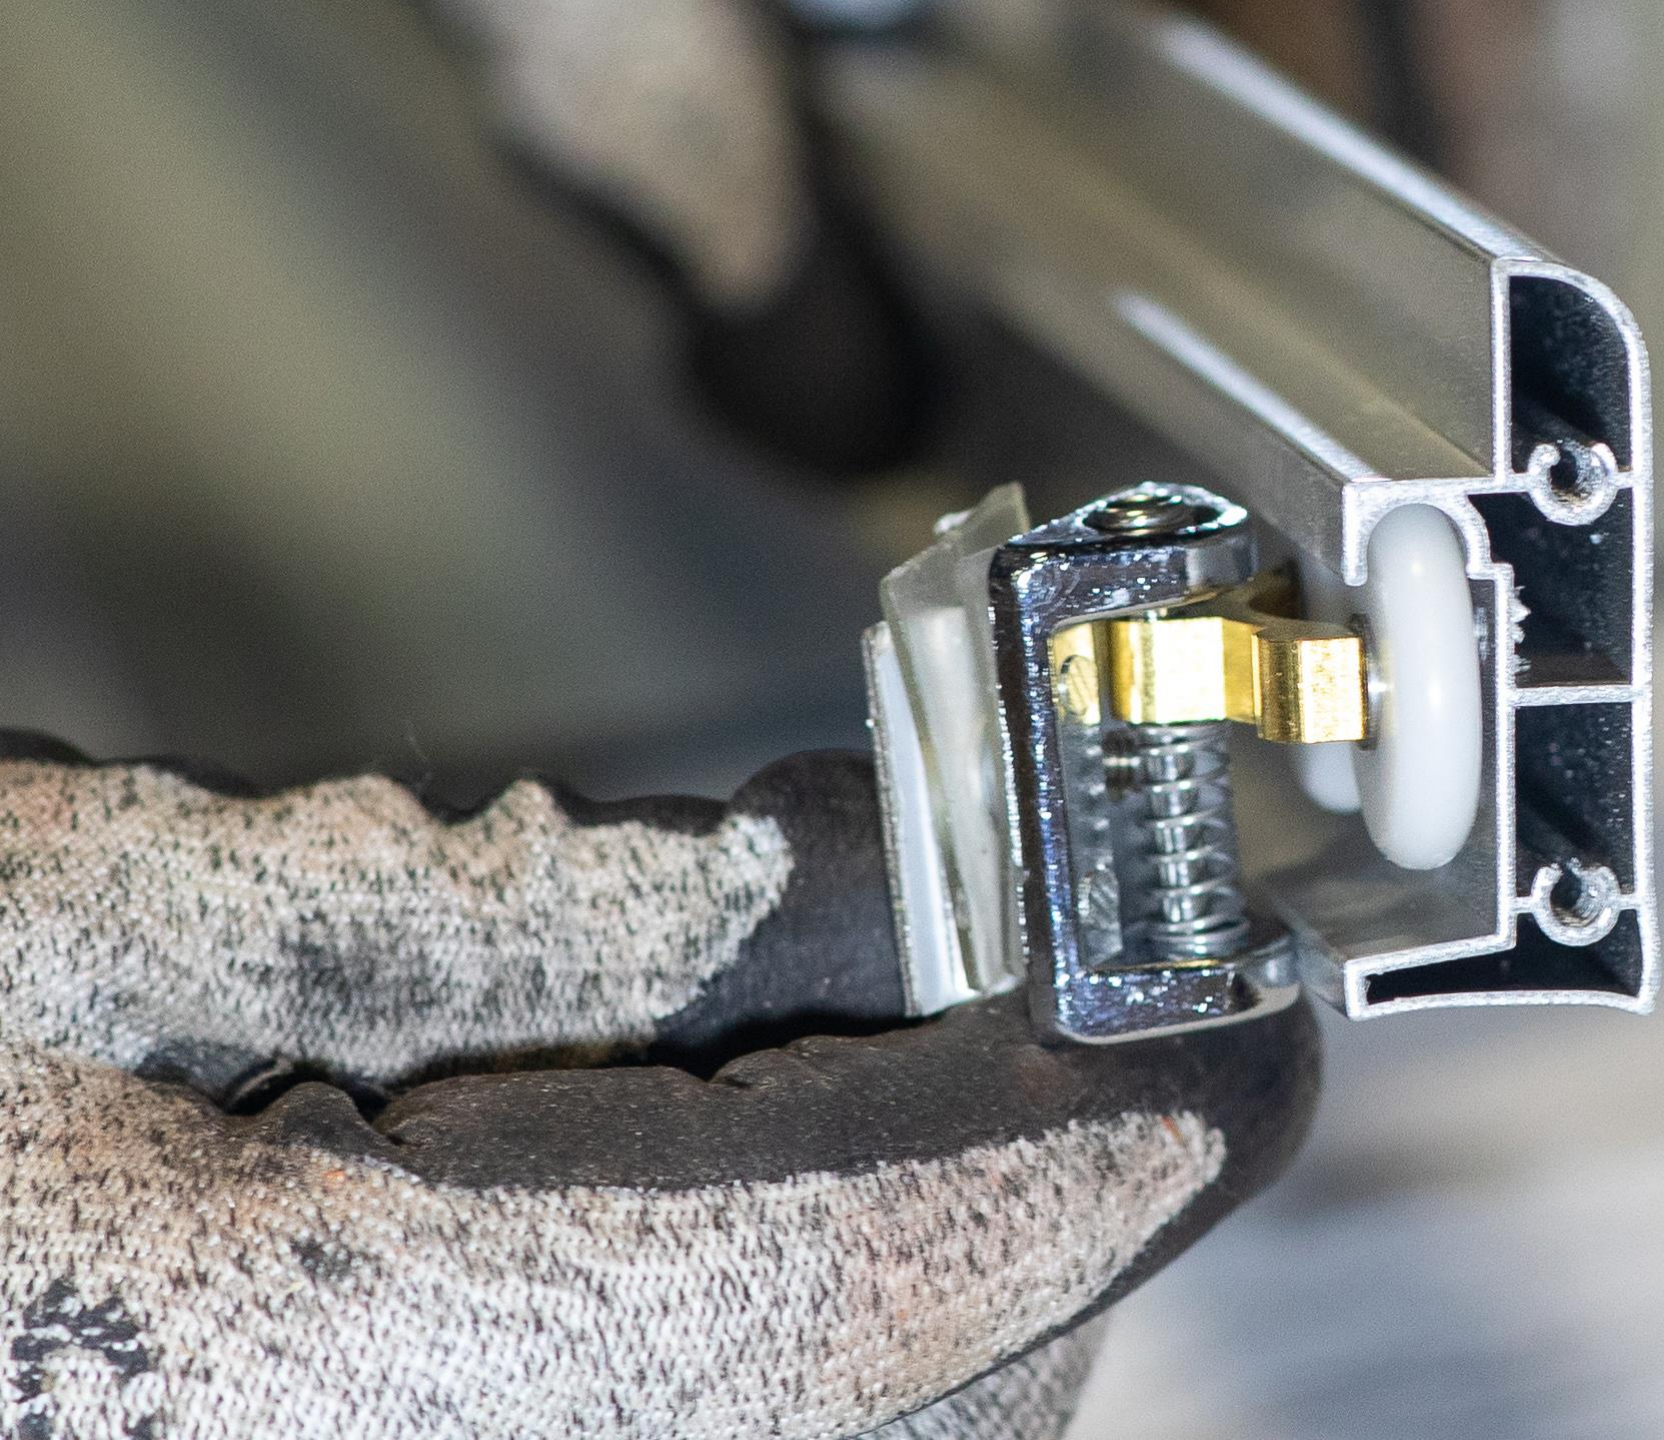


*Bottom track
uses rollers with
springs. Springs
push rollers
upwards*

Screw Holes



Bottom track has doors stoppers installed already

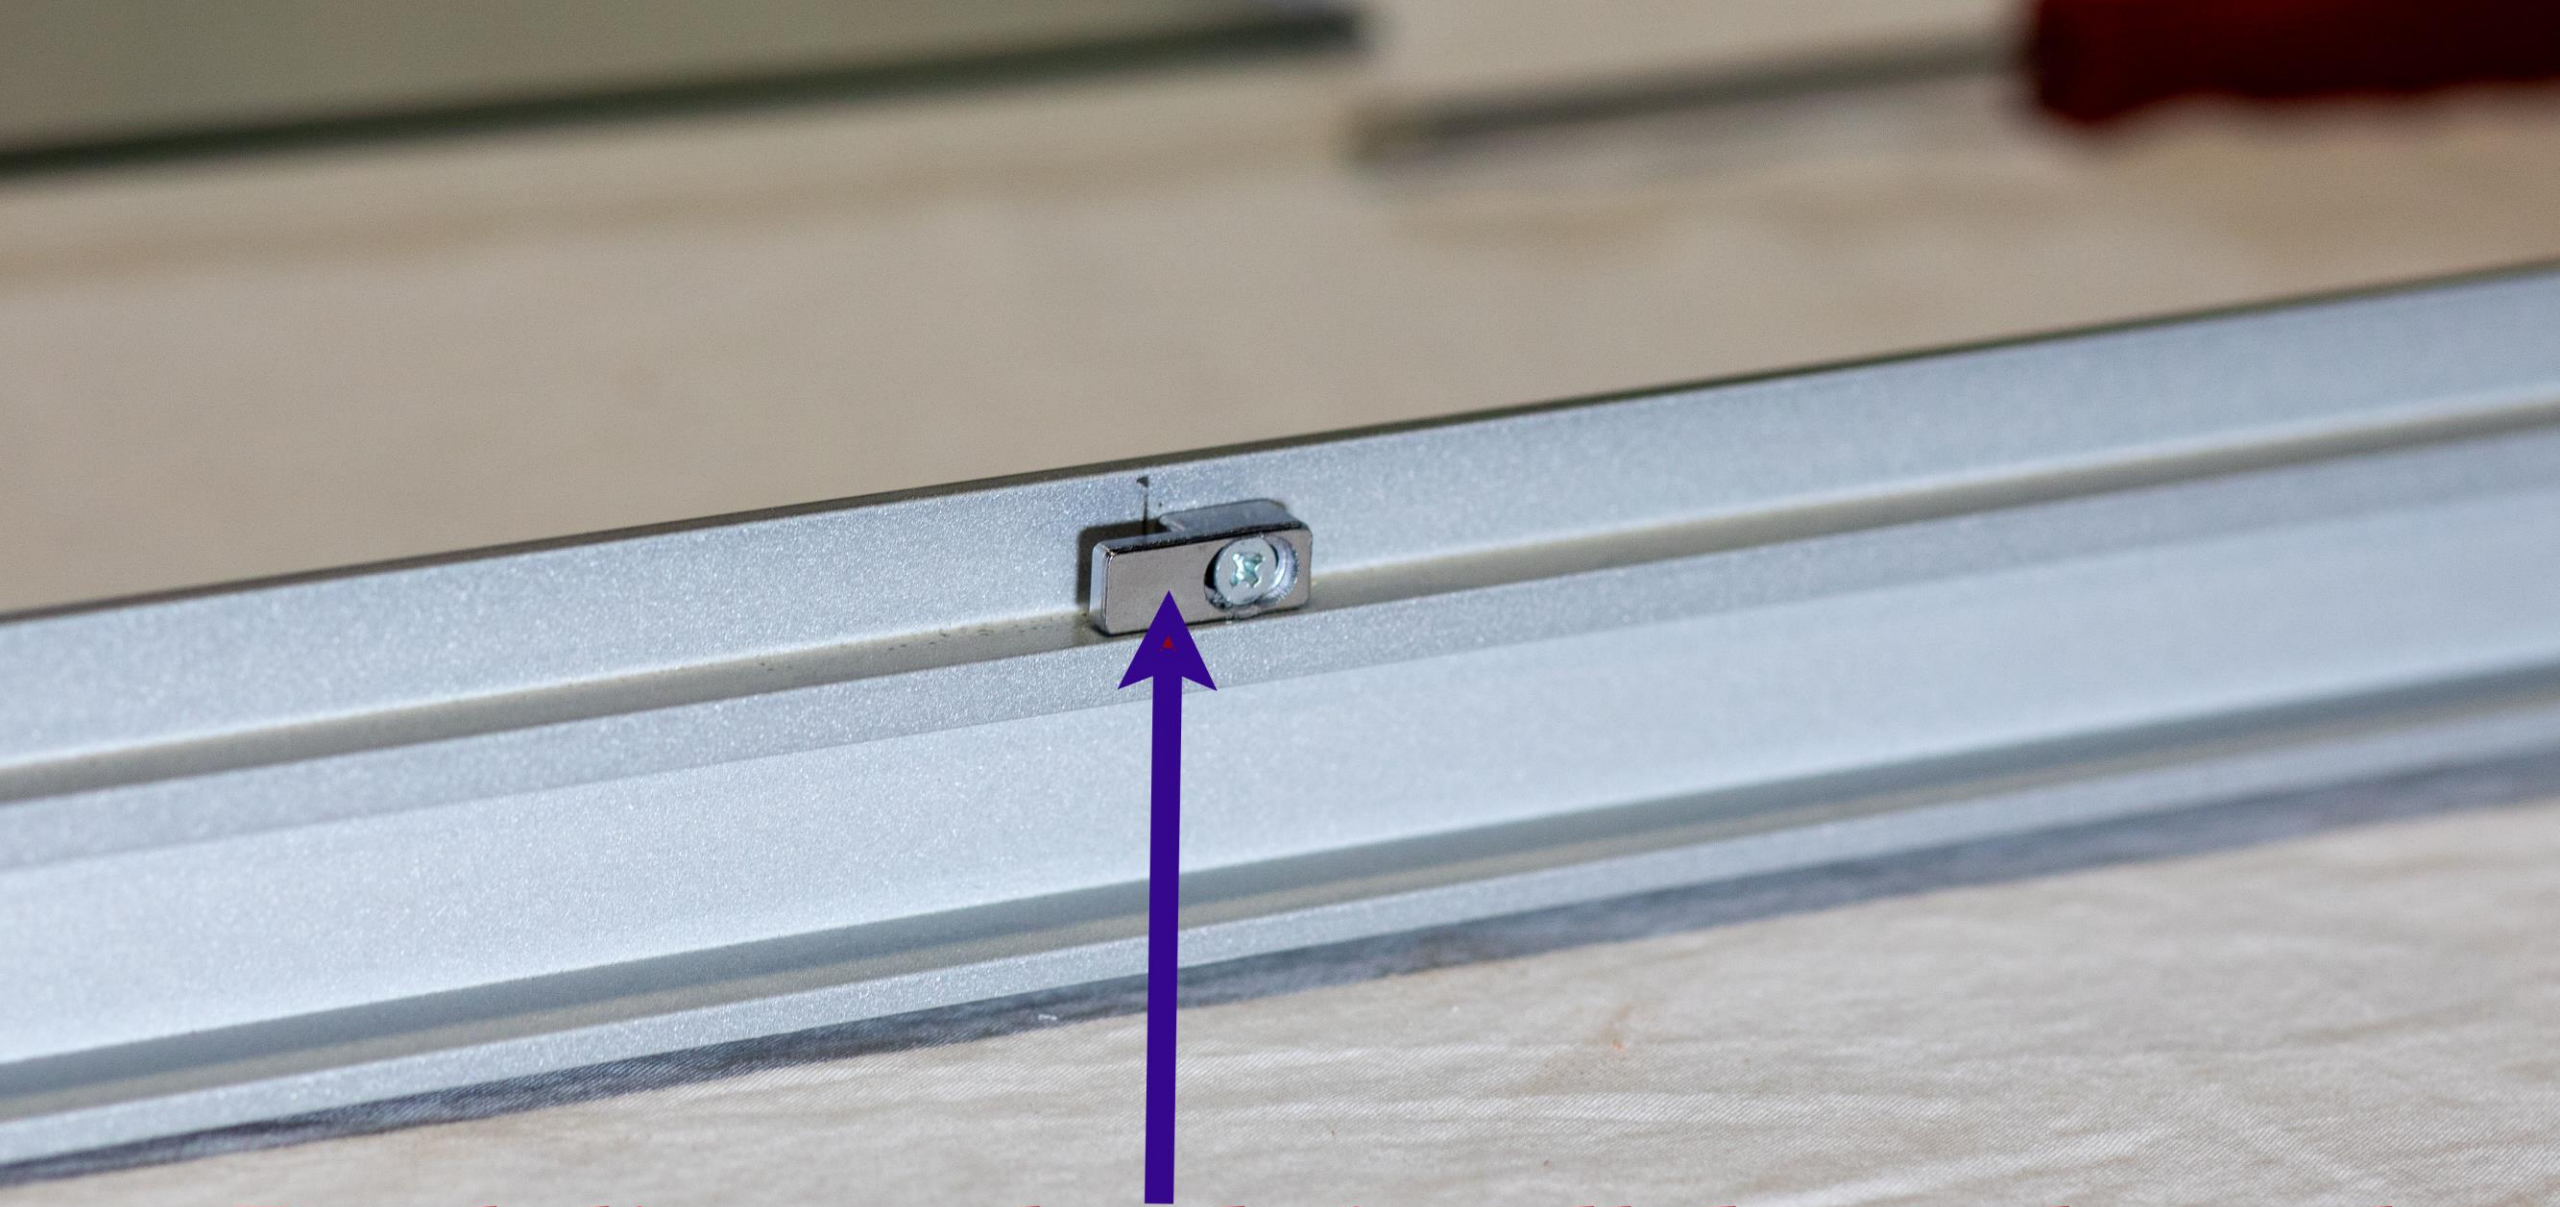

Panel clips are already installed onto the tracks



Door stoppers in the middle of the tracks



Both panels have seals, stiles, and edge guard strips pre-installed already


Put glass panel
on the ledge of
the track




Track




Stile

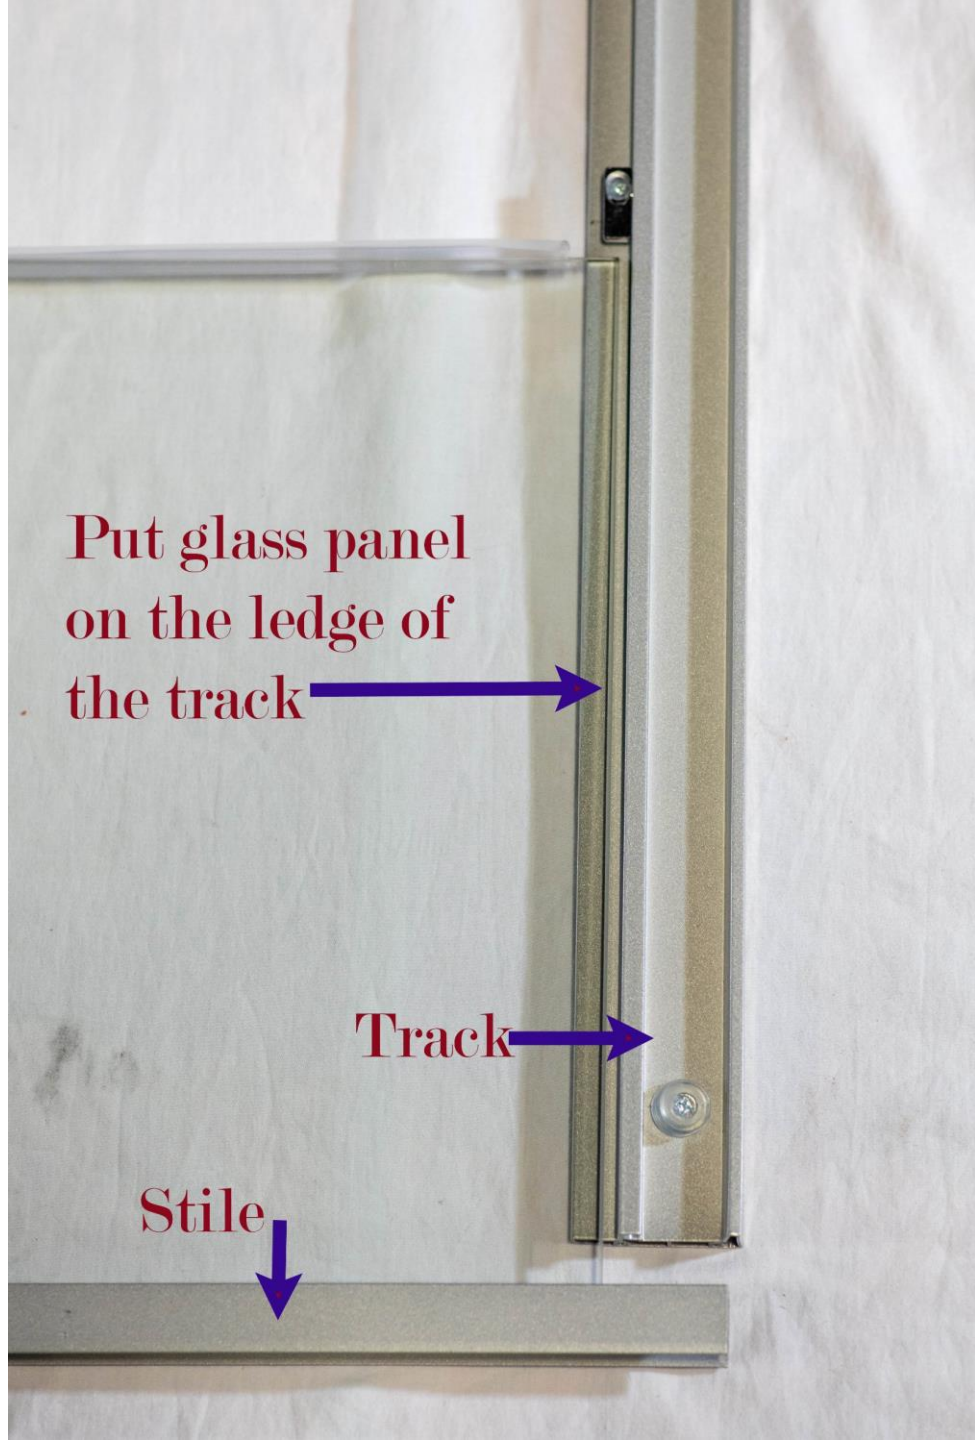

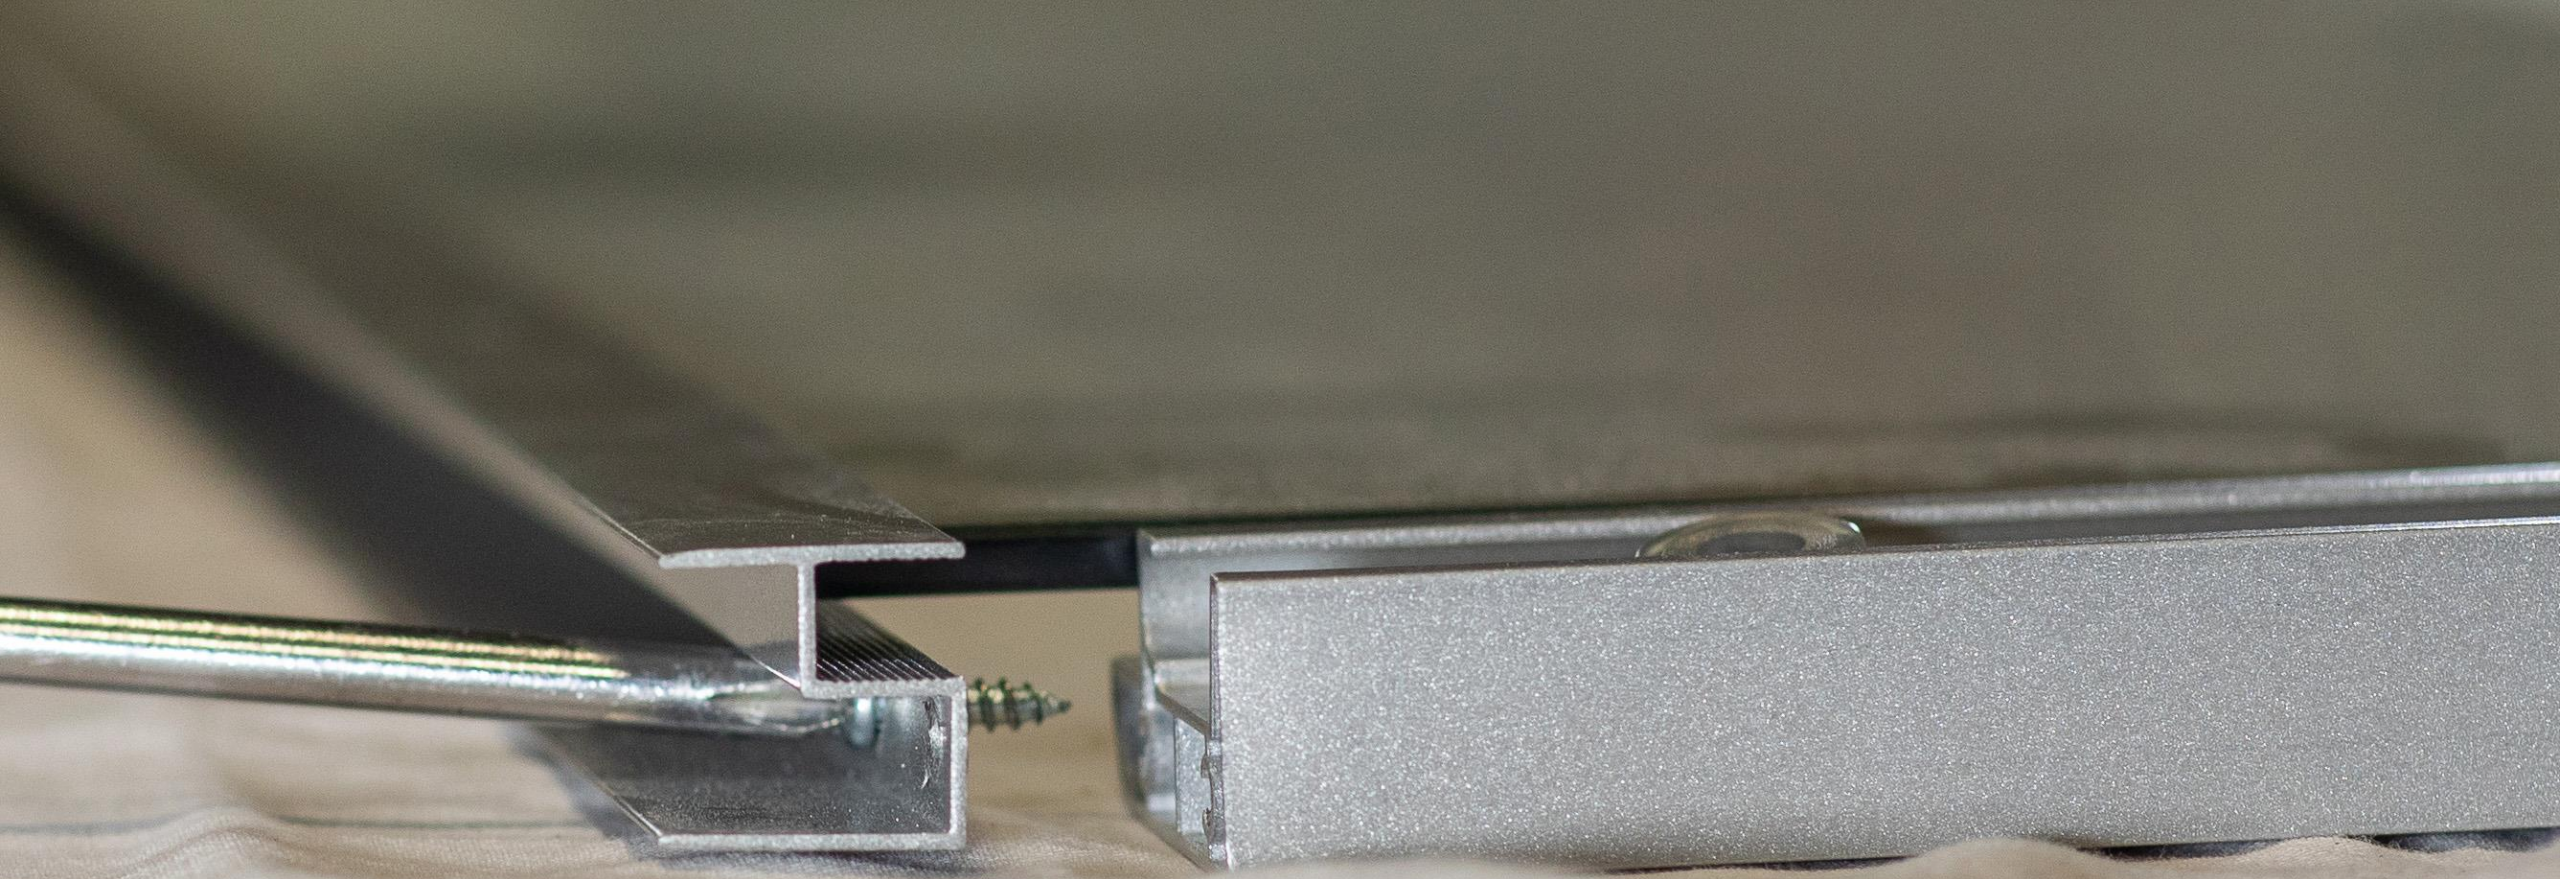

Put screw through pre-drilled hole on stile and go into screw hole in track

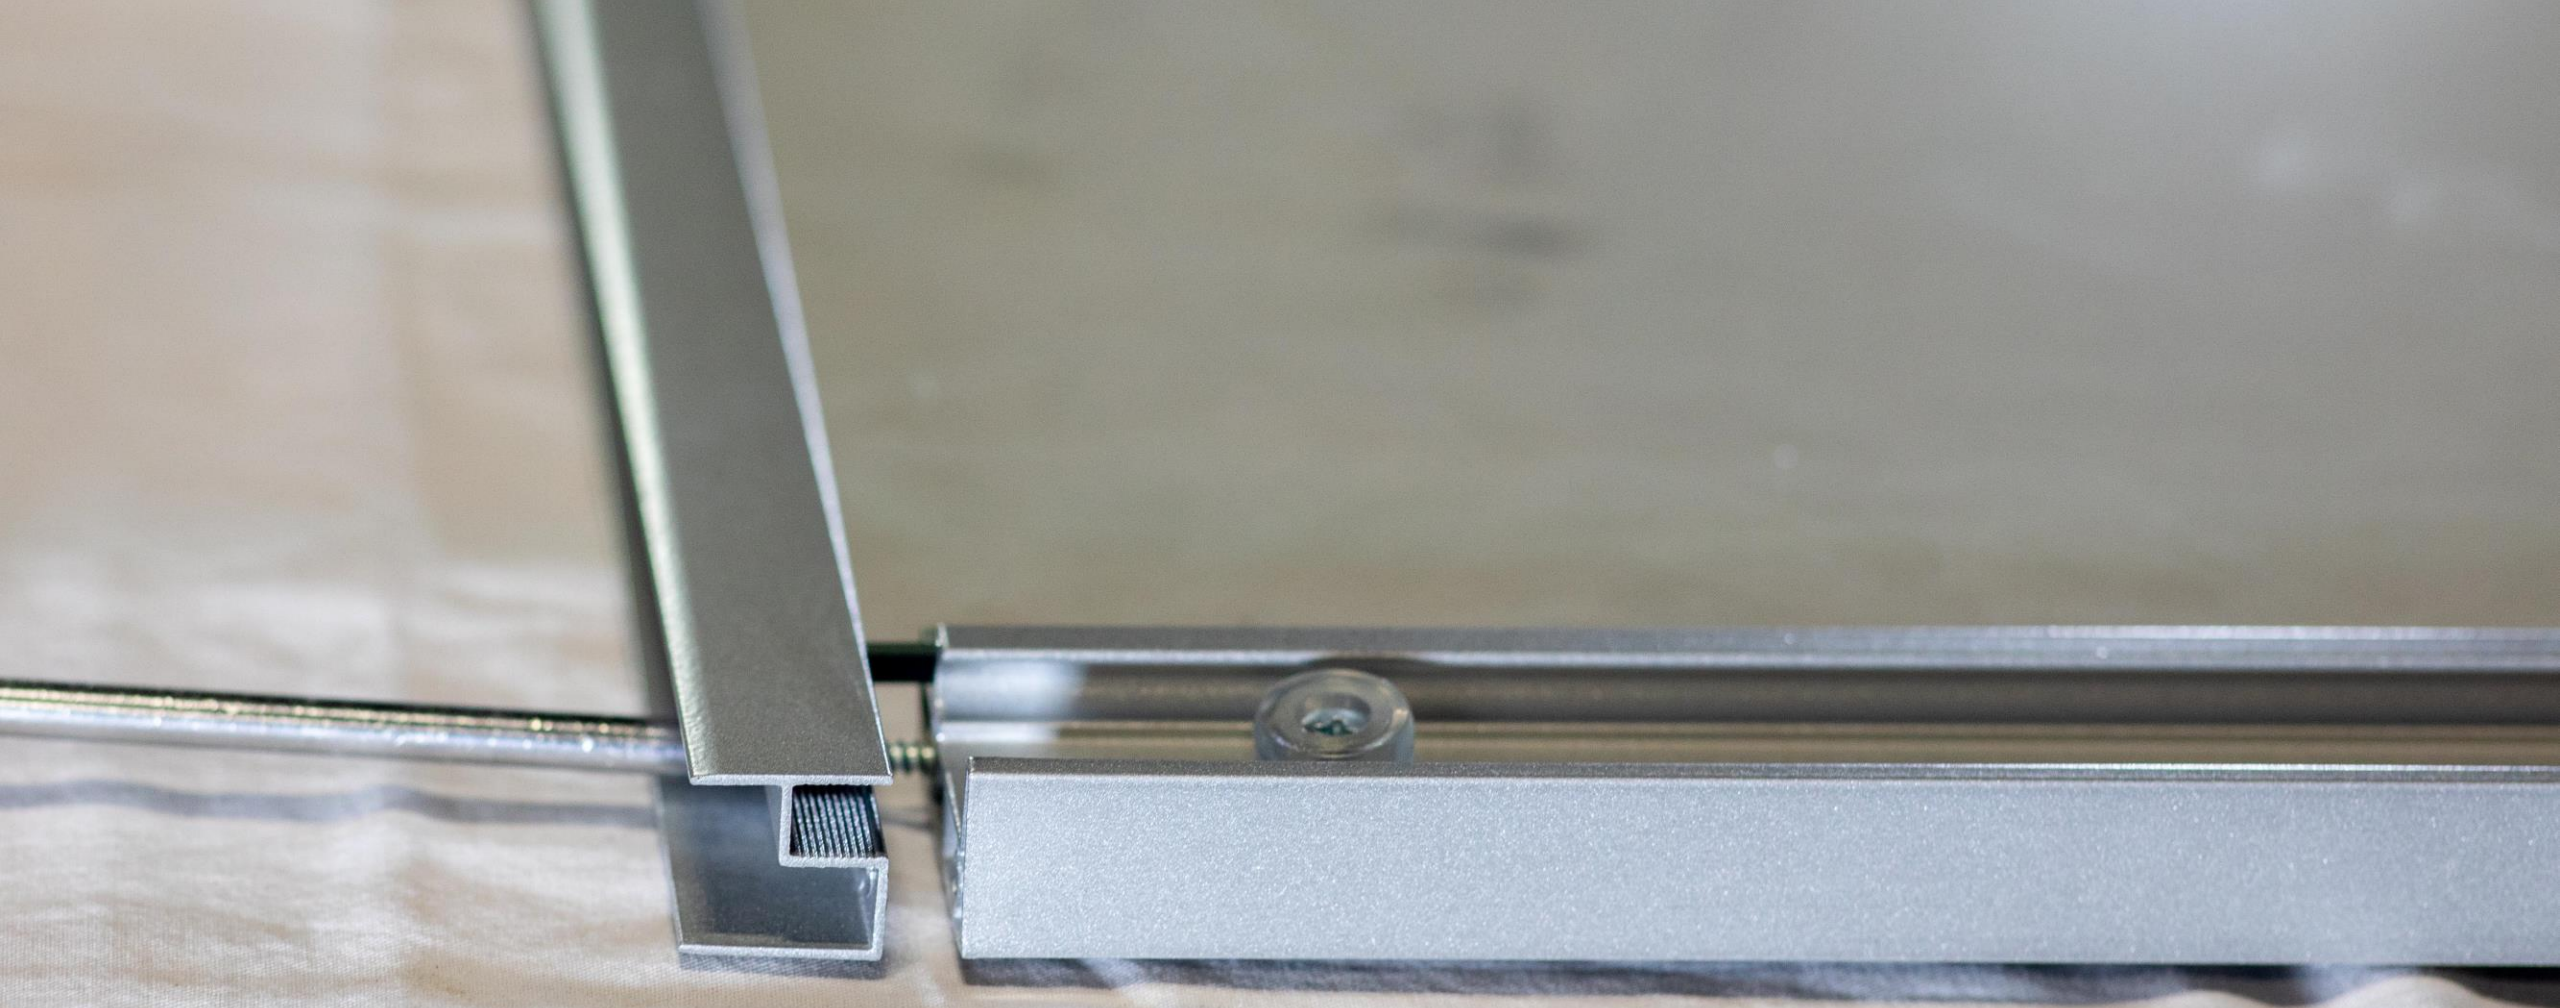

Make a couple of turn to set the screw in place



Set the 2nd screw in place

A close-up photograph of a metal hinge assembly. The assembly consists of a vertical metal plate on the left and a horizontal metal plate on the right. A cylindrical roller is visible between the two plates. Two screws are visible, one on the left side of the vertical plate and one on the right side of the horizontal plate, both appearing to be in place but not yet tightened. The background is a light-colored, textured surface.

*The screws are in place
ready for tightening*



**Tighten the screws with hand or
power driver**



Tighten the 2nd screw



Make sure the connection is tight

Now let's install
the top track to
the panel

Top Track




Glass panel set
on track's ledge

Screw
Holes



Stile

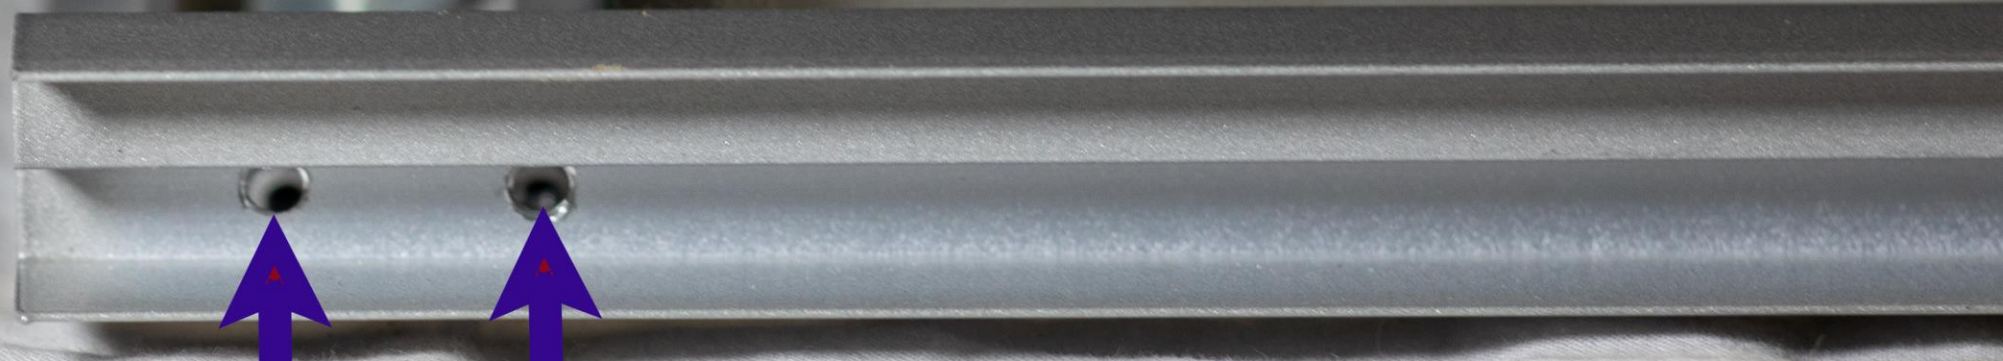

Pre-drilled holes on stile for the screws




Screws are set and ready for tightening

Top track is attached to 1st panel



Repeat the same procedure to
Install the 2nd panel.

Top Track

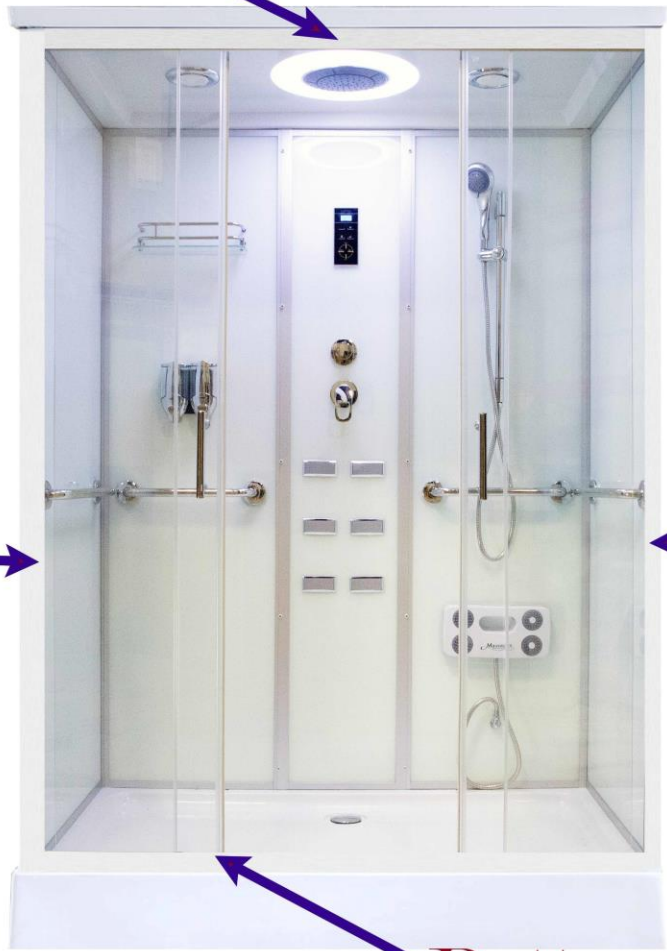

Stile

Stile

Bottom Track