

GLITTER CENTERPIECES

DESIGN A BEAUTIFUL CENTERPIECE FOR YOUR SPECIAL EVENT!



Transform an ordinary assortment of glass jars into a beautiful centerpiece. Create stunning centerpieces, vases, and more with Rust-Oleum Glitter paint and Rust-Oleum Stops Rust flat paint.

ITEMS

- Drop Cloth
- Painter's Tape
- Paper
- Clean Lint Free Rags
- Glass Jars
- Rust-Oleum Glitter spray paint
- Rust-Oleum Stops Rust Flat spray paint

STEPS

- 1. PREPARE:** Always work in a well ventilated area. Cover nearby items with a drop cloth to protect them from paint splatters. Clean all surfaces thoroughly with lint free cloth.
- 2. PAINT:** Shake can of Stops Rust spray paint for 1 minute after the mixing ball begins to rattle. Hold the paint can 10-16" from the surface. Spray in a steady back-and-forth motion, slightly overlapping each stroke. Apply 1-2 light coats a few minutes apart. Allow paint to dry approximately 2-4 hours. Once dry, tape off the bottom half of your glass jar with painter's tape and paper. Shake can of Rust-Oleum Glitter spray paint for 1 minute after the mixing ball begins to rattle. Hold the paint can 12-14" from the surface. Spray in a steady back-and-forth motion, slightly overlapping each stroke. Apply 2 or more light coats a few minutes apart.
- 3. FINISH:** Allow your paint to dry for approximately 24 hours. Stage the finished product for your special event and enjoy.

Always thoroughly review directions on the package before using any product.



As shown Stops Rust Flat Black, Glitter Gold



 **RUST-OLEUM®**

Visit www.homedepot.com/rustoleum for other great ideas, products and inspiration.

REFINISHED TOOLBOX

MAKE A RUSTY OLD TOOLBOX LOOK GOOD AS NEW

BEFORE



AFTER



Transform a rusted piece into a treasured tool. Rust-Oleum® Stops Rust® Rusty Metal Primer adheres directly to rust and instantly covers imperfections. Add Stops Rust modern finishes to make something old look new again.


ITEMS

- Toolbox
- Drop Cloth
- Painter's Tape
- Wire Brush
- Sandpaper (fine/medium)
- Lint Free Rags
- Rust-Oleum Stops Rust Rusty Metal Primer
- Rust-Oleum Stops Rust

STEPS

- 1. PREPARE:** Always work in a well ventilated area. Cover nearby items with a drop cloth to protect from overspray. For rusted areas, scrub with wire brush to remove. Clean all surfaces thoroughly with lint free rag. Gently sand the entire toolbox and tray. Once sanded, clean the toolbox with soap and water, rinse, and let dry. Tape off any hardware or areas you do not want to paint.
- 2. PAINT: Toolbox:** Shake can of Rust-Oleum Stops Rust Rusty Metal Primer spray paint for 1 minute after the mixing ball begins to rattle. Hold the paint can 12-14" from the toolbox. Spray in a steady back-and-forth motion, slightly overlapping each stroke. Apply 2 or more light coats a few minutes apart. Allow 15 minutes to dry. Shake can of Rust-Oleum Stops Rust Hammered spray paint for 1 minute after the mixing ball begins to rattle. Hold the paint can 12-14" from the toolbox. Apply 1-2 light coats. Spray in a steady back-and-forth motion, slightly overlapping each stroke. Allow 15 minutes to dry between coats.
Tray: Shake can of Rust-Oleum Stops Rust Metallic spray paint for 1 minute after the mixing ball begins to rattle. Hold the paint can 12-14" from the tray. Apply 1-2 light coats. Spray in a steady back-and-forth motion, slightly overlapping each stroke. Allow 15 minutes to dry between coats.
- 3. FINISH:** Allow toolbox to dry for approximately 24 hours.

Always thoroughly review directions on the package before using any product.

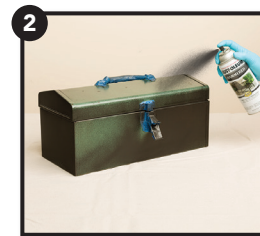

As shown Stops Rust Rusty Metal Primer, Stops Rust Hammered Black, Stops Rust Metallic Silver

RUST-OLEUM®

Visit www.homedepot.com/rustoleum for other great ideas, products and inspiration.