

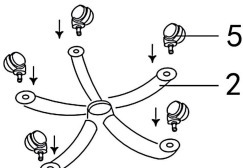
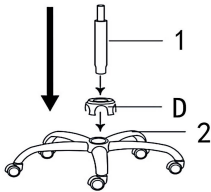



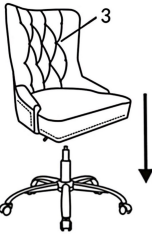



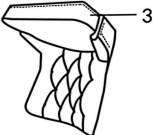





ASSEMBLY INSTRUCTOIN

Item No:OFMYN0145

<p>1</p>  <p>1 PC</p>	<p>A</p>  <p>6*16mm</p> <p>4 PCS</p>	<p>STEP 1</p> <p>Insert casters 5 to bottom of the spider base 2.</p> 	<p>STEP 2</p> <p>Attach the metal cover D on top of the spider base 2 then insert the gas lift 1 to the center hole of the base 2.</p> 
<p>2</p>  <p>1 PC</p>	<p>B</p>  <p>1 PC</p>	<p>STEP 3</p> <p>Use bolt A and allen key B to attach mechanism 4 to bottom of the seat cushion 3, make sure the holes on under seat align with metal plate, then fasten bolts to secure.</p> 	<p>STEP 4</p>  <p>Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment.</p> 
<p>3</p>  <p>1 PC</p>	<p>C</p> <p>EXTRA PARTS</p>  <p>6*16mm</p> <p>1 PC</p>		
<p>4</p>  <p>1 PC</p>	<p>D</p>  <p>1 PC</p>		
<p>5</p>  <p>5 PCS</p>			