INSTALLATION SHEET

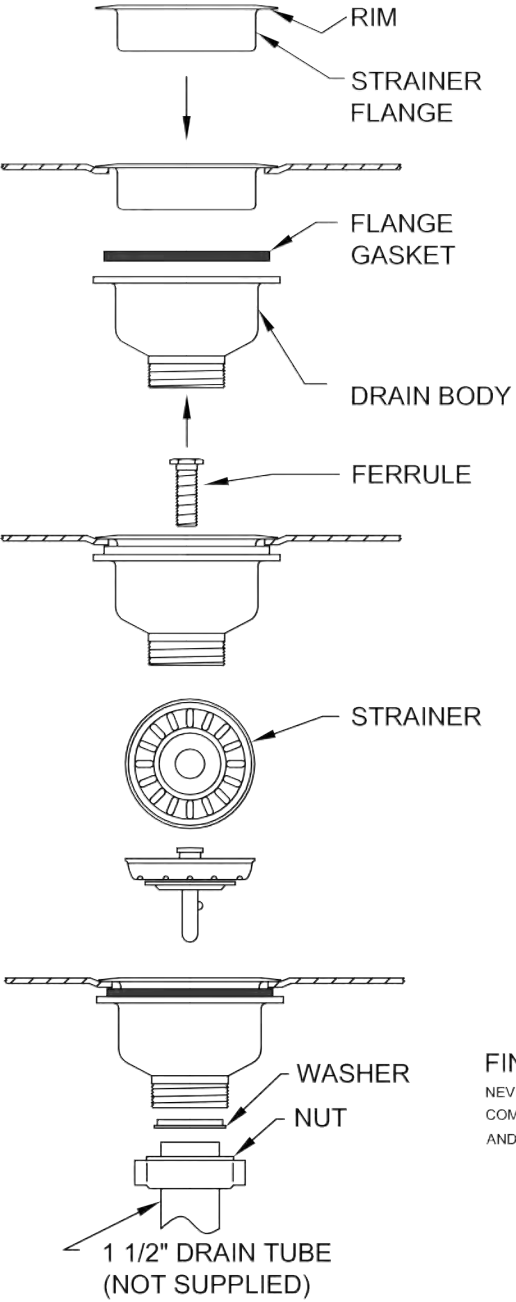

1. APPLY A SMALL AMOUNT OF NON-ACID SILICONE UNDER THE RIM OF STRAINER FLANGE AND PUSH DOWN INTO SINK

2. LUBRICATE FLANGE GASKET WITH WATER, PLACE INTO LIP OF DRAIN BODY AND POSITION DRAIN BODY ON THE SINK BOTTOM

3. LINE UP RIBS IN DRAIN BODY AND STRAINER FLANGE THEN SCREW IN FERRULE. **CAUTION**: HAND TIGHTEN THEN 1/4 TURN WITH SMALL SCREW DRIVER. DO NOT OVER TIGHTEN

4. PUSH STRAINER INTO FERRULE IN DRAIN BODY

5. MAKE SURE WASHER IS IN POSITION, SLIDE NUT ON 1 1/2" DRAIN TUBE. PUSH TUBE INTO DRAIN BODY AND **HAND** TIGHTEN THE NUT. TEST FOR LEAKS

FINISH CARE & MAINTENANCE

NEVER USE ANY ABRASIVE CLEANERS SUCH AS SOFT SCRUB OR COMET TO CLEAN. USE ONLY A SOFT CLOTH AND WIPE WITH WATER AND MILD SOAP. DO NOT TOO WIPE HARD TO REMOVE STAINS .