

KINGSTON BRASS
THE TRADITION OF FINE BRASS


INSTALLATION INSTRUCTIONS
For Use With KB's Basin Faucet

Need Tools:


Basin Wrench


Adjustable Wrench


Teflon Tape



Silicone Sealant


Screwdriver

BEFORE BEGINNING INSTALLATION


1. Flush plumbing lines to clear any debris.
2. Shut off both supply lines after flushing.

1

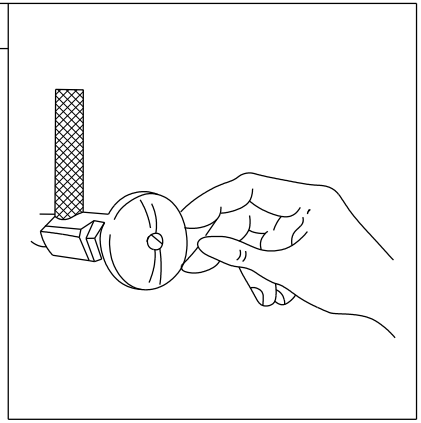


1. Shut off hot and cold water supply under sink. Plug sink drain with cloth to avoid losing small parts. Remove old faucet.

2

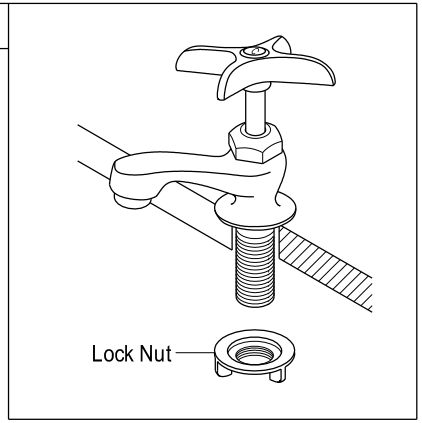


2. Insert the inlet shanks through the sink holes, and press down. Assemble the washers and locknuts on the inlet shanks, and then tighten the nuts by hand.

3

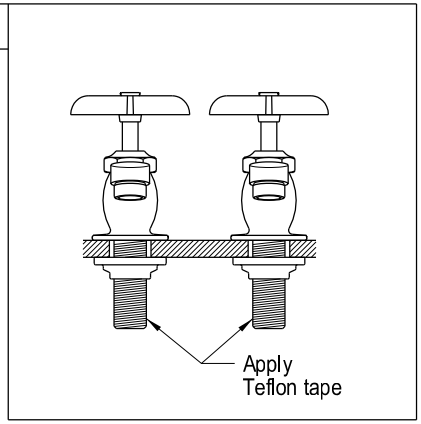


3. Apply Teflon tape to inlet shanks and connect supply lines.

4

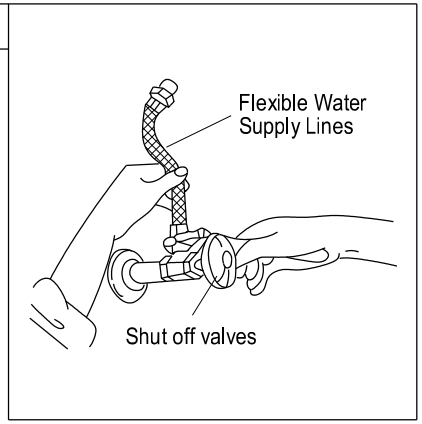


4. Apply Teflon tape to threads on faucet shank and shut off valves, connect water supply line.

5

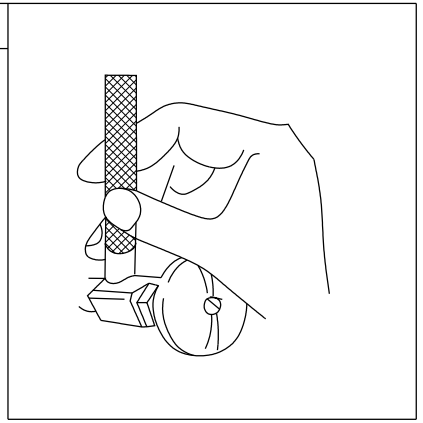

5. Turn on water supply valves and check for leaks, especially all supply line connections.

6

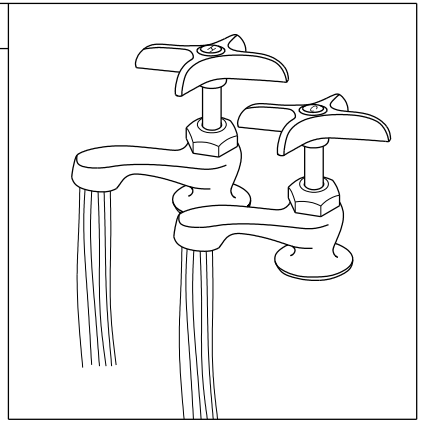

6. Remove aerator and turn on both hot and cold valves, let water run for at least one minute, this will clear any debris left in the line, reinstall aerator.

©2012-08-LK KingstonBrass