
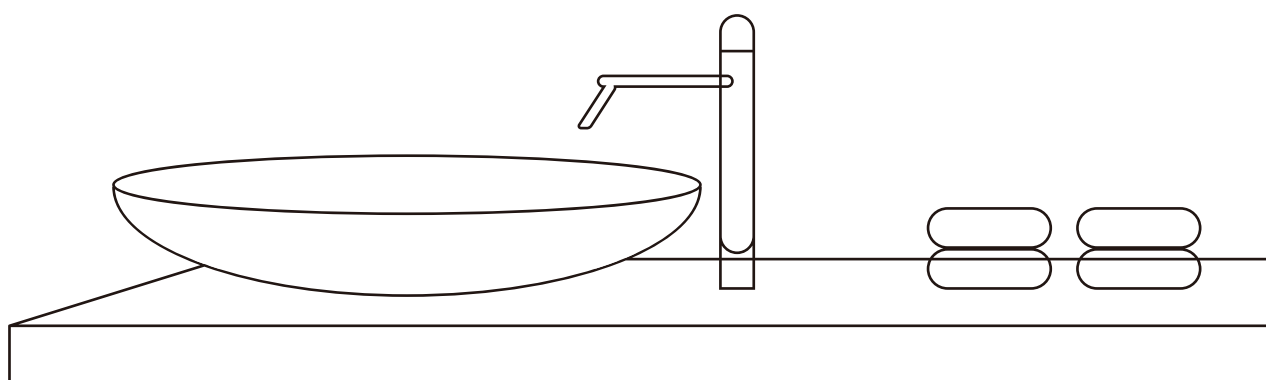


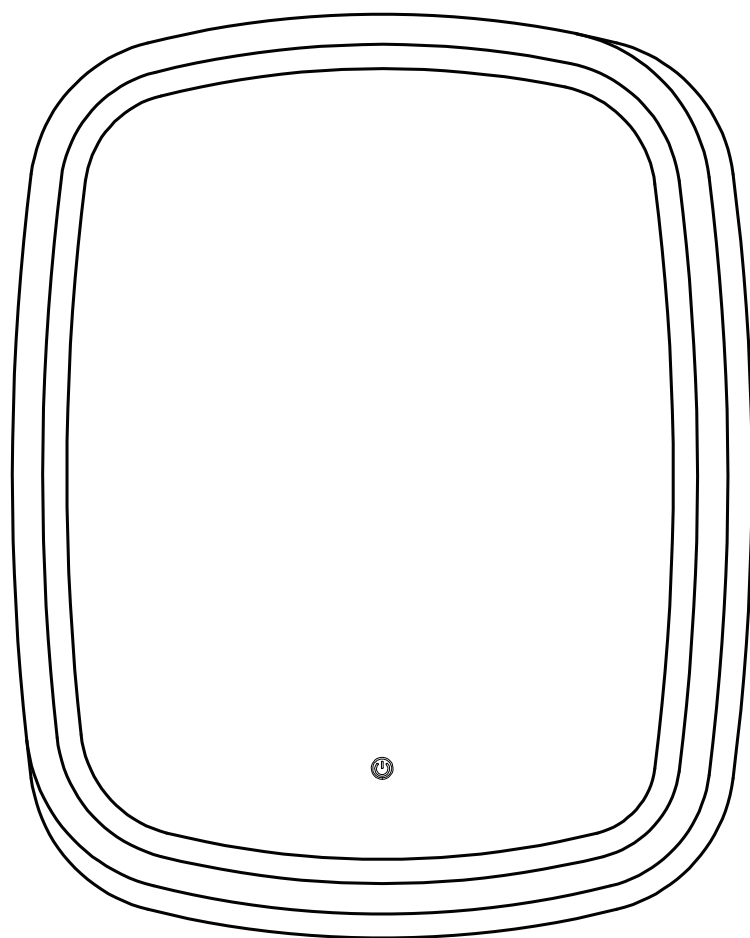

INSTALLATION MANUAL

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical furnishing, basic precautions should always be followed ,including the following:

⚠ WARNING: To reduce the risk of burns, fire, electric shock or injury to persons. Use this furnishing only for its intended use as described in these instructions. Do not use attachments not recommended by the manufacturer. Never drop or insert any object into any opening. Do not use outdoors.

⚠ WARNING: Risk of electric shock. Connect this furnishing to a properly grounded circuit only. See grounding instructions.

ELECTRIC CONNECTIONS

ALL WIRING SHOULD BE DONE BY A QUALIFIED LICENCED ELECTRICIAN.

⚠ WARNING: Shut off power before wiring.
Requires 120 VAC 20 Amp GFI protected Circuit.

GROUNDING INSTRUCTIONS:


⚠ CAUTION: This product must be connected to a grounded metal permanent wiring system or an equipment-grounding conductor must be run with the circuit conductors and connected to the equipment grounding terminal or lead on the product.

⚠ WARNING: An Electrical option mirror must be wired to a 20 Amp GFI (Ground Fault Interrupter) protected circuit when used in bathrooms and all other locations required by the National Electric Code.


HOW TO CONNECTIONS

Make connection with
Junction box

Neutral to white.
Line to black.
Ground to green.

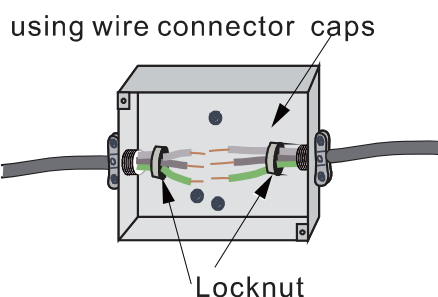


★ junction box is not included ★

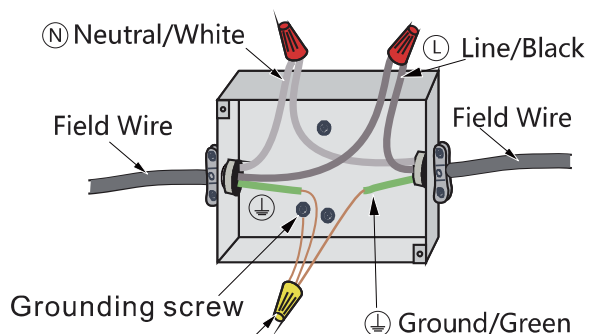

wire connector caps
★ (not included) ★

HARDWARE AND TOOLS (Tools not included)

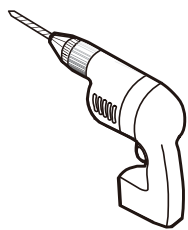


Power Drill



Mallet



Tape Measure

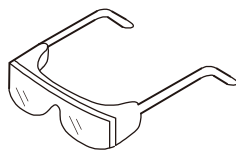

Safety Goggles



1/4" & 1/8" Drill Bits



Pencil



Level

HARDWARE LISTS

ITEM	IMAGE	NAME
1		Mounting Screw
2		Wall Anchor
3		Shelf Clamp
4		Glass Shelf

INSTALLATIONINSTRUCTIONS

Please read carefully and save these instructions

Don't discard any of the packaging until you are sure that you have all of the parts and the fittings
Make sure power to the junction box is off before commencing installation.

IMPORTANT

1. Unpack LED cabinet. DO NOT lay cabinet on tiled or concrete surface prior to installation
Cabinet must be on protected surface to prevent chipping of the corners
2. Care must be taken before drilling pilot holes to avoid any existing wiring or pipe work that may be concealed.
3. A certified electrician must perform all work. The mirror must be connected to a GFI

MAINTENANCE


Wipe clean with a soft damp cloth. Apply glass cleaner to cloth and do not apply directly to mirror
Never use abrasive cleaners as these could damage the finish or exposed LEDstrip 2

INSTALLATION

Please refer to below surface mount or recess mount method.

SURFACE MOUNT INSTRUCTION


Step 1

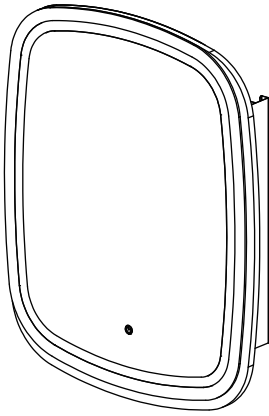

Unpack the LED medicine mirror and prepare tools needed.

Step 2


Measure and mark the back mounting holes on the wall.

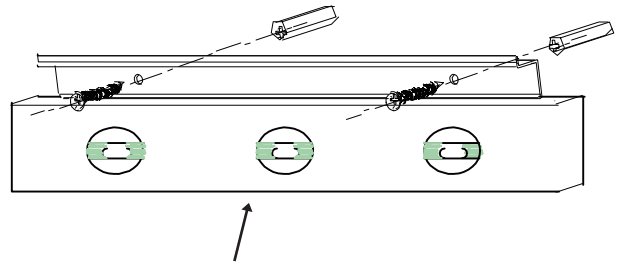

Draw horizontal line connecting the marked location. The line should be level. Adjust to level if necessary.



Step 3

Drill holes, and put in the plastic expansion bolt.

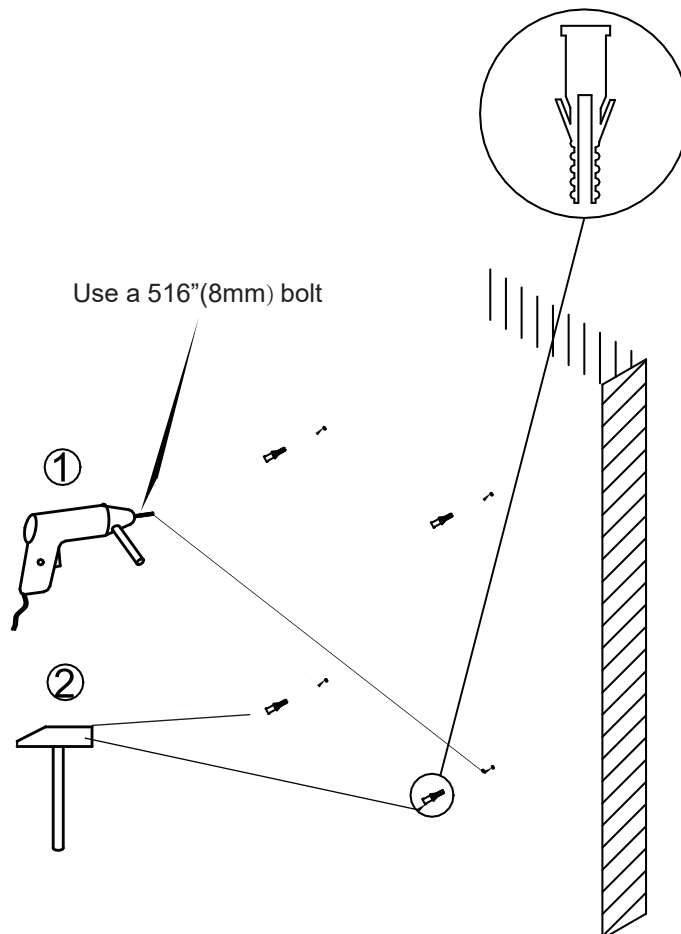

Step 4


Connect hardwire to power line.
Make sure the power off(Voltage:AC110-12V,50/60Hz)

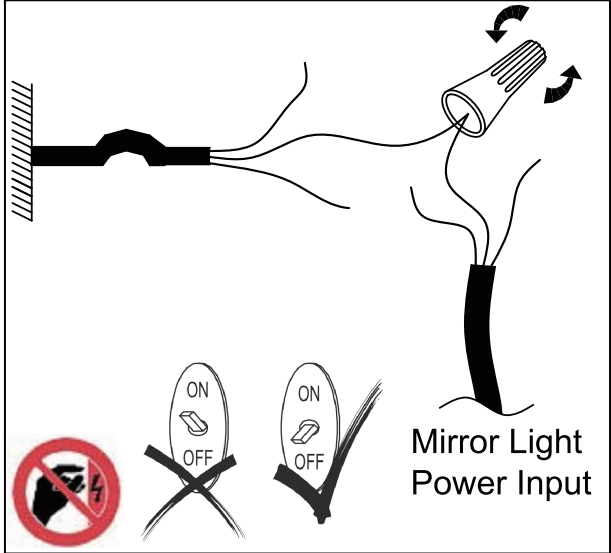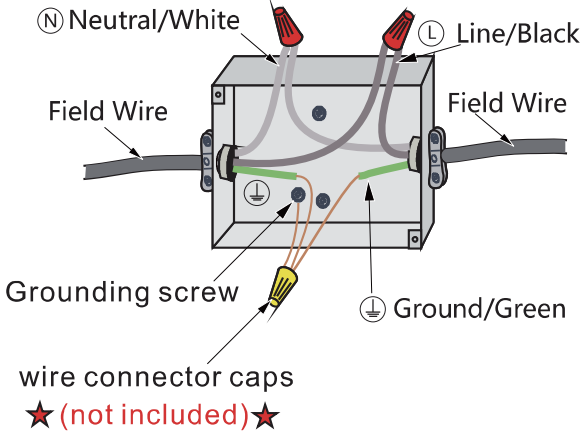

Note: This step requires professional electrician operation.




Step 5

Attach the cabinet to the wall with mountin screws from the hardware pack.

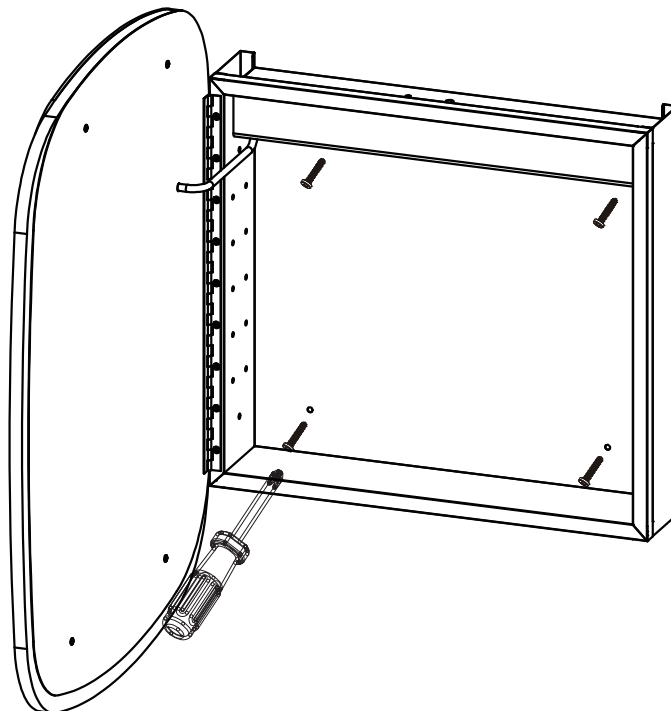

Step 6

- 1: Install the shelf clamp on both sides of the cabinet;
- 2: Insert the glass shelf into the shelf clamp.

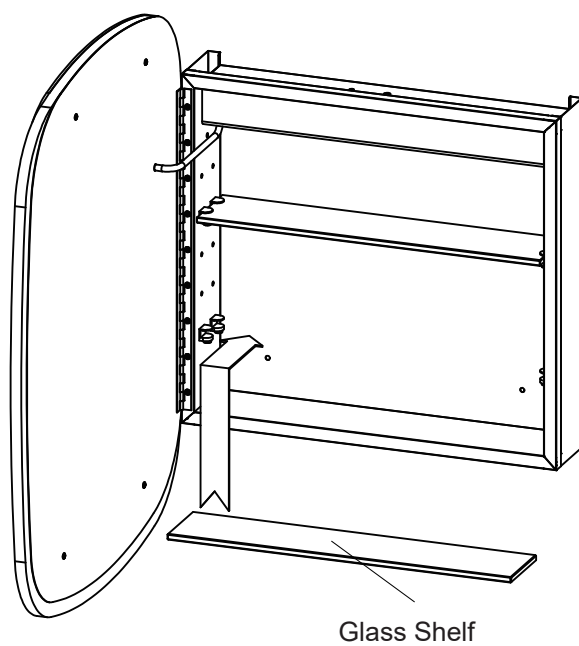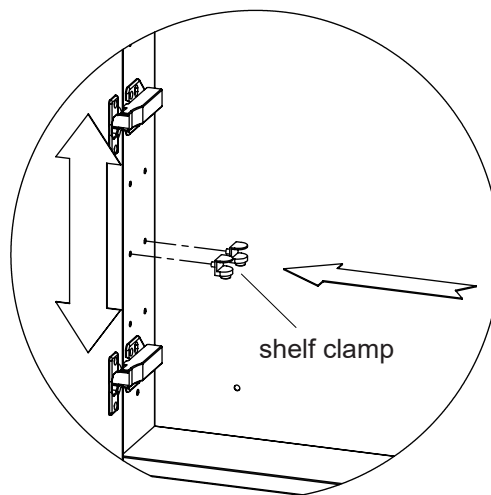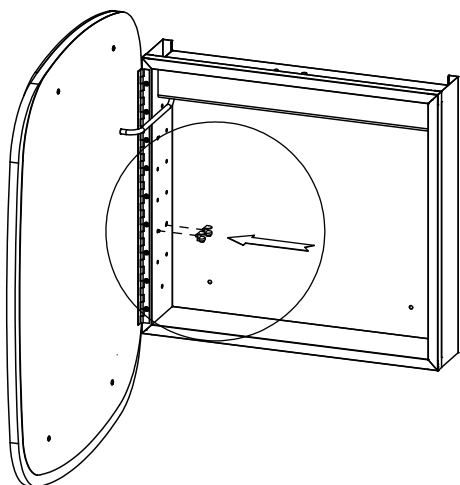

RECESS MOUNT INSTRUCTIONS

NOTE: Rough opening is not an exact measurement. The extra space allows cabinet to be inserted into the opening. Add shims to level and tighten space if necessary. Additional framing might be required.

Rough Wall Opening


SKU#	Overall Size	Rough Wall Opening
NSA-5	24 in.(W) x 30 in.(H) x 5 in.(D)	20-1/8 in.(W) x 18-5/8 in.(H) x 3-1/2 in.(D)

Step 1

NOTE: Before cutting the rough opening,check for pipes, electrical cables, or heatingducts. If it is required to remove part of stud, make sure that the wall is not a load bearing wall.

Prepare the opening in the wall for the cabinet body. Make sure that there is support on both sides of the opening to attach the cabinet body , as shown.



NOTE: The cabinet height should be a minimum 2 in. above faucet.

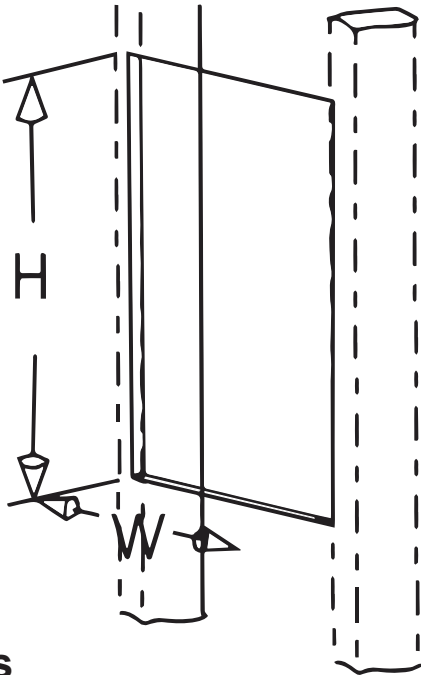

Please remove the metal plates on both sides before installation if recessed installation

Step 2

Connect hardwire to power line.
Make sure the power off(Voltage:AC110-12V,50/60Hz)

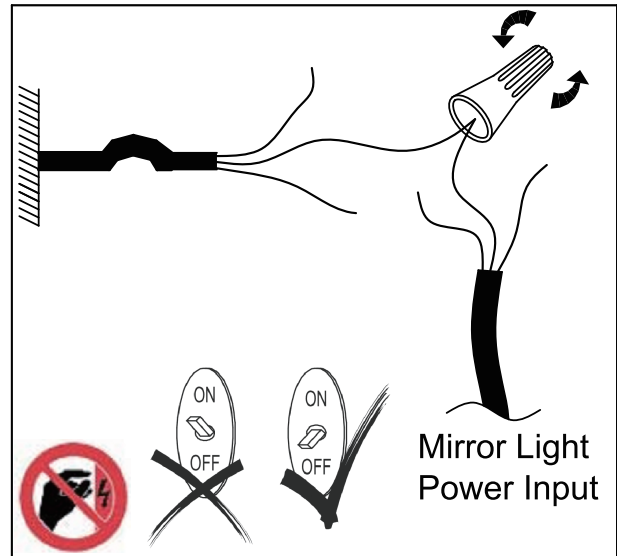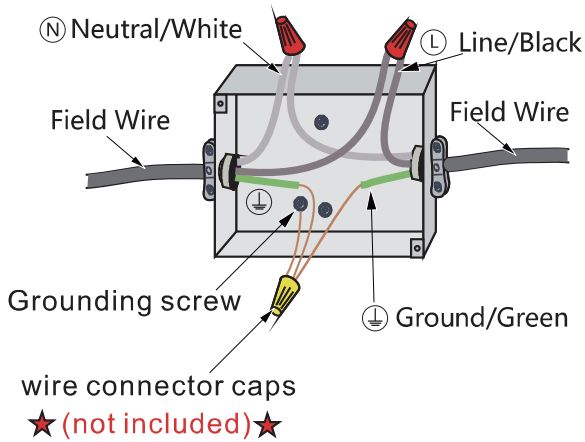


Note: This step requires professional electrician operation.

Step 3

Position the cabinet body in the rough wall opening. Make sure that the cabinet body flange covers the wall opening uniformly.

Secure both sides of the cabinet body to the wall supports using mounting screws .


NOTE: The cabinet body must be level for the door to work properly.

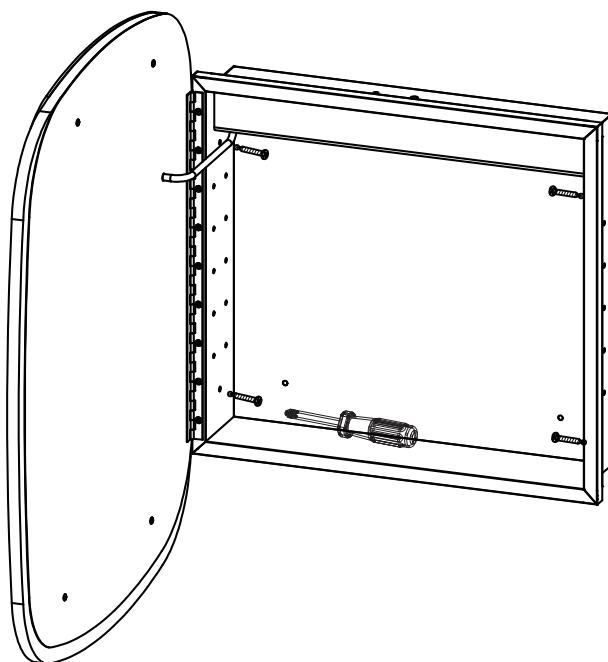

Step 4:

As for the shelf installation and adjustment, please refer to page 6.


INTRODUCTION OF TOUCH FUNCTION

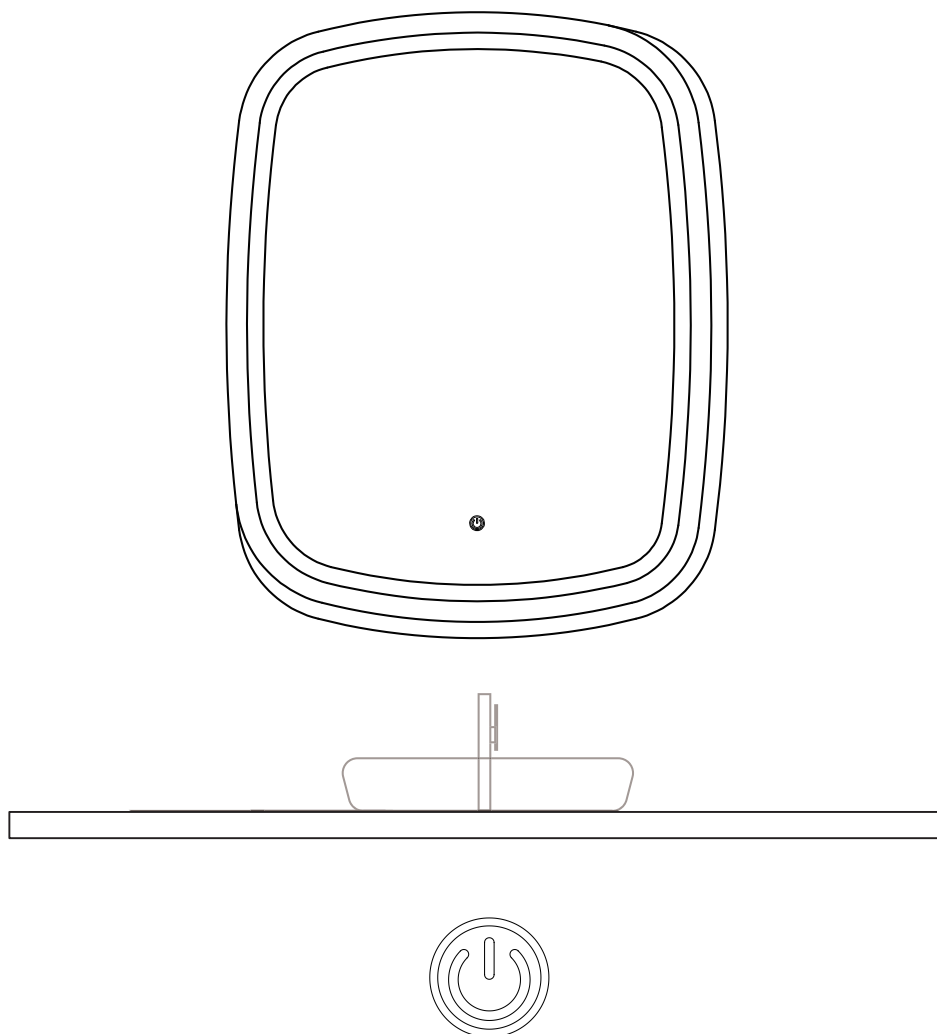

Function:

OFF station: Blue light ON station:white light .

1. Short touch to turn on LED light and change color (cold light – mix of cold and warm light –warm light) , defogger function working synchronous,
2. Long touch to change brightness (10%~100%), the defogger work station will not be changed when adjust the color or brightness.
3. Turn off the light and the defogger function synchronous turned off automatically.
4. If there is no activity on the sensor switch , the defogger function will be cut off automatically one hour later.

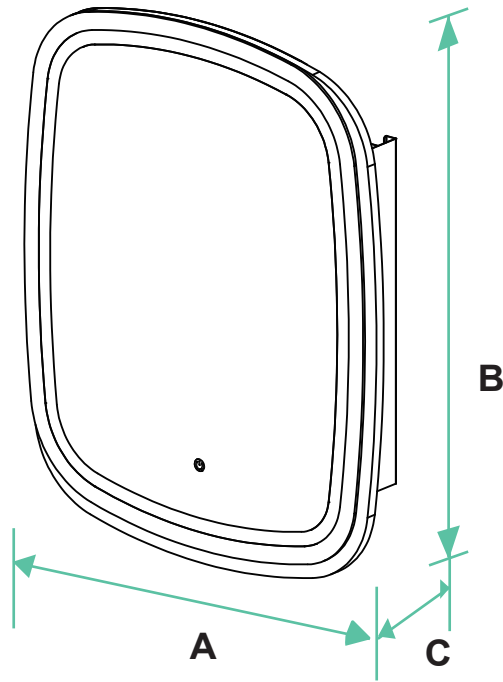

A - Width
B - Height
C - Depth

SKU#	A	B	C
NSA-5	24	30	5

Unit: Inch

Note: All dimensions & specifications are approximate and subject to change without notice.

Customer Service:

For any questions or queries regarding our products, please contact our support team:
Ivy@studieddecorinc.com