Ella Horizon White Cultured Marble 6 Panel Shower Wall Surround

Package - 1 Content: 6 Shower Panels


Material: Cultured Marble Color / Finish: White Matte Pattern: Horizon Wall Surround Size: 36"Wx60"Lx90"H Panel Thickness: ¼" Net Weight: 144 lb.


Package - 1

Shipping Crate Size: 40"W x64"L x12"H Shipping Weight: 169 lb.

Available Package Options: Package-2: 6 wall panels & 3 shelves Package-3: 6 wall panels, 3 shelves & 2" trims

Cultured marble panels and trims can be cut to size. The shelves or panels can arranged in any layout. See installation manual for directions.

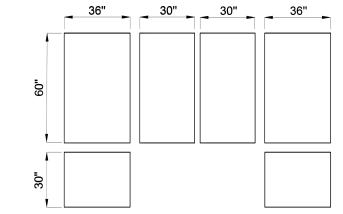

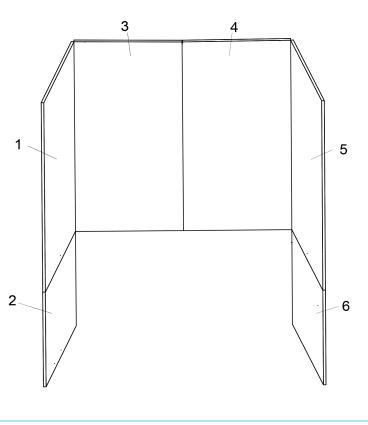

Ella Horizon White Cultured Marble 6 Panel Shower Wall Surround


Package - 2


Package - 2 Content: 6 Shower Panels & 3 Shelves

Material: Cultured Marble Color / Finish: White Matte Pattern: Horizon Wall Surround Size: 36"Wx60"Lx90"H Panel Thickness: ¼" Net Weight: 153 lb. Shipping Crate Size: 40"W x64"L x12"H Shipping Weight: 178 lb.

Available Package Options: Package-1: 6 wall panels Package-3: 6 wall panels, 3 shelves & 2" trims

Cultured marble panels and trims can be cut to size. The shelves or panels can arranged in any layout. See installation manual for directions.

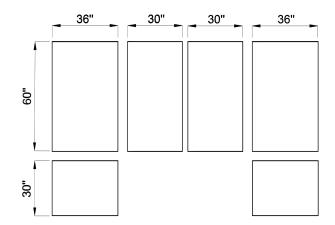

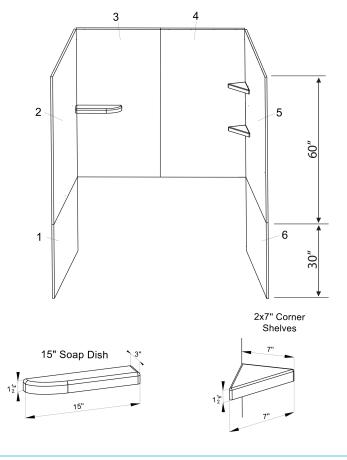


Ella Horizon White Cultured Marble 6 Panel Shower Wall Surround Package - 3

Package - 3 Content: 6 Wall Panels, 3 Shelves & 2" Trims (three (2) 30"x 2" x ³/₄", three (3) 60" x 2" x ³/₄")


Material: Cultured Marble Color / Finish: White Matte Pattern: Horizon Wall Surround Size: 36"Wx60"Lx90"H Panel Thickness: 1/4" Net Weight: 174 Lb.

Shipping Crate Size: 40"W x64"L x12"H Shipping Weight: 199 lb.

Available Package Options: Package-1: 6 wall panels Package-2: 6 wall panels & 3 shelves

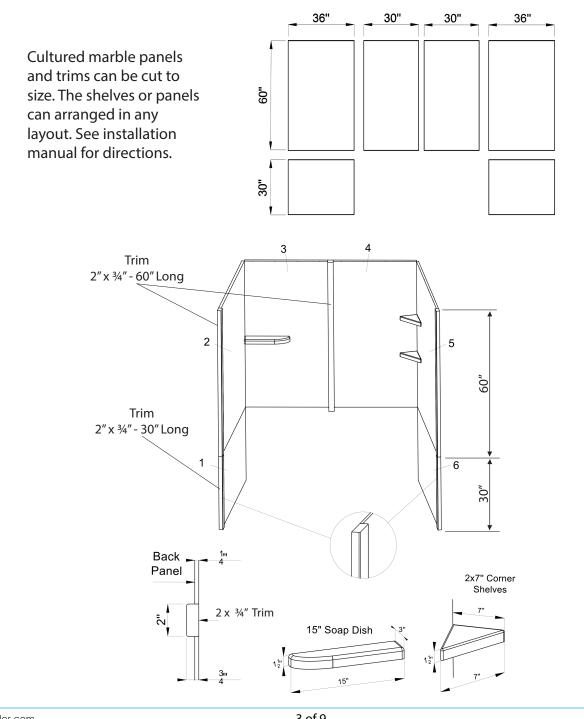


Installation for Bathtub

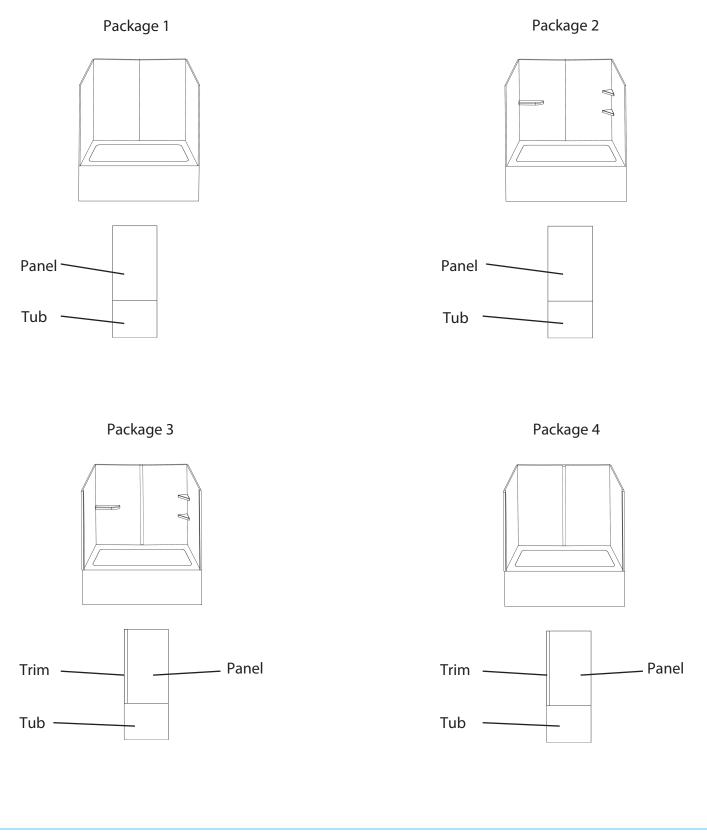



Installation for Walk-in Tubs

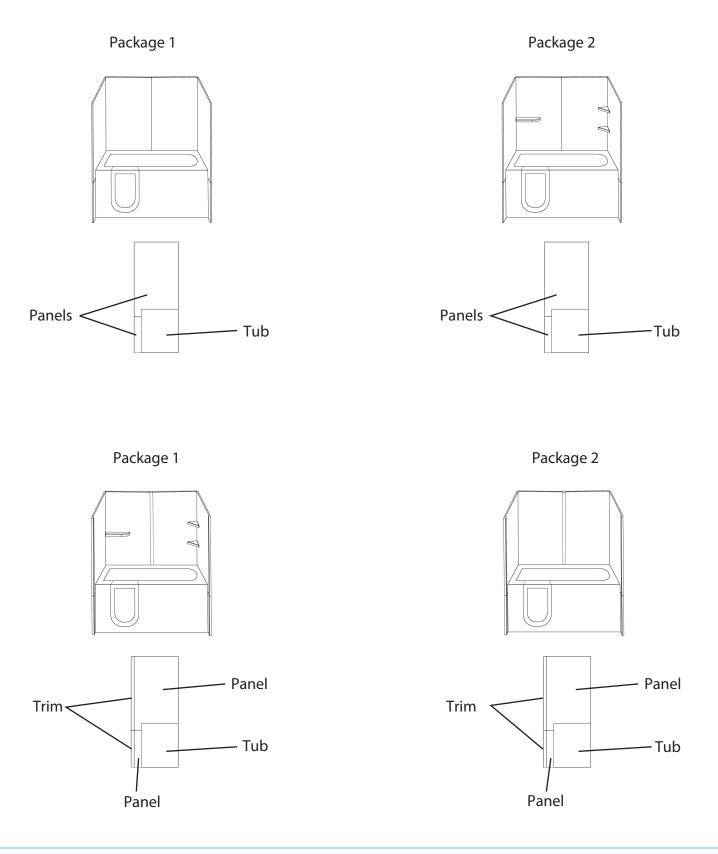


(-))by ella's bubbles

3

5

Installation Instructions for Shower Panels

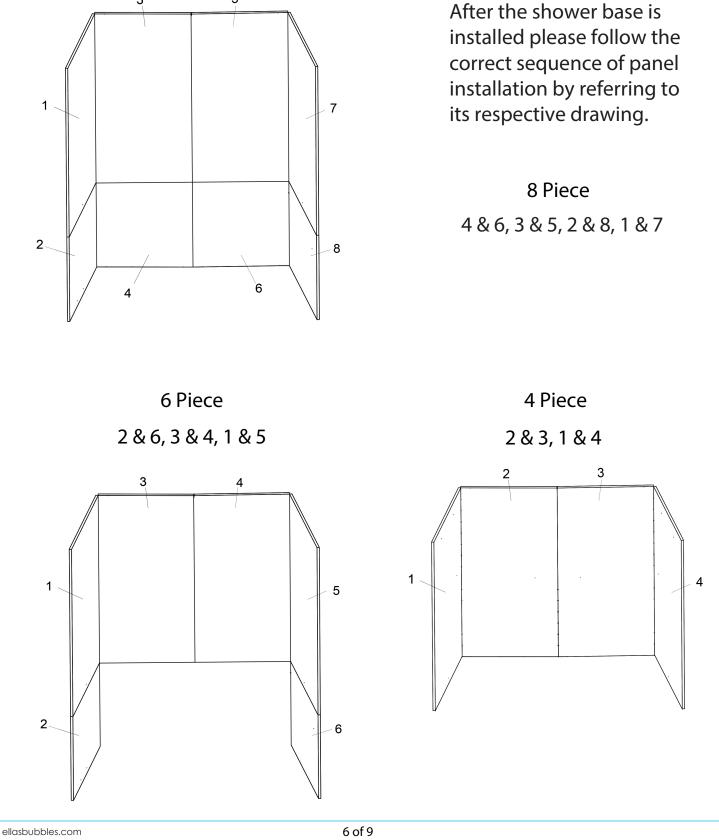

Materials/Tools Required

DIAMO

- 1. Circular Saw with a masonry/diamond blade
- 2. Hole saw or jig saw to cut holes for plumbing fixtures with drill
- 3. Saw horses

(–)||(–)

by ella's bubbles

- 4. 2x4s for saw horses and bracing
- 5. Sandpaper (recommend using 80 grit) for sanding cut edges
- 6. Tape measure
- 7. Pencil
- 8. 24" level
- 9. Acetone
- 10. Dry rag
- 11. Hole saw or jig saw to cut holes for plumbing fixtures
- 12. 100% Silicone must be used for panel installation
- 13. Latex caulk for panel to drywall seams


Silicone example





Bracing example:

Each panel must be braced for the 100% silicone to entirely cure. Please follow purchased silicone manufacturers directions.

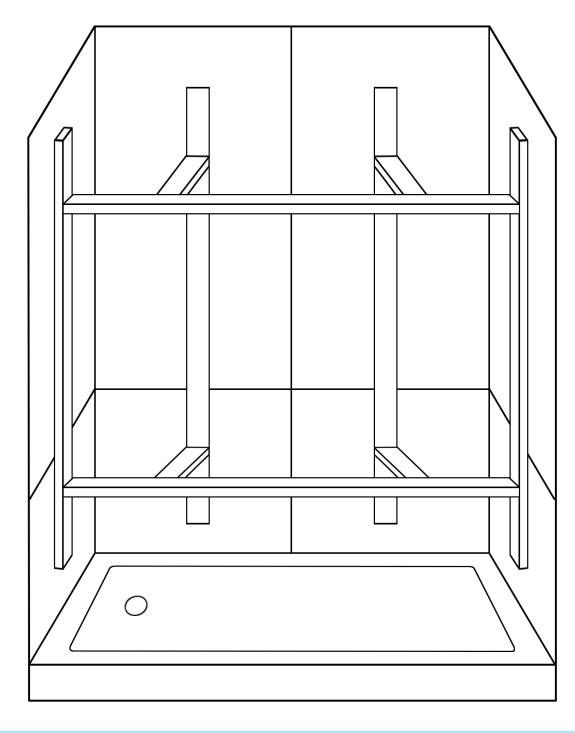

Installation Ideas for Decorative Tile Strips

Please see the below installation ideas for adding decorative or mosaic tile (marked A in drawings). Decorative tiles (not included) can be purchased by the customer and installed in between shower wall panels as a decorative accent strip or if the joint lines of panels do not meet customer's expectations. The wall panels do not have rounded off edges, so it is suggested to add mosaic or decorative tile strip (optional). By adding decorative tile between the panels can also be used to increase the size of the walls. For example, 6" mosaic tiles can be added between the 30" and 60" panels to achieve an 8' high shower wall. The ³/₄" thick 2" trim also can be used as a separation piece between 2 panels and can be purchased separately if not initially included in your package.

