



INSTRUCTIONS MANUAL SINGLE - BAR WHRRLED SNOW SHOVEL






IF YOU PURCHASED THE PRODUCT ONLINE AND HAVE
ANY QUESTIONS OR CONCERNS
PLEASE CONTACT US VIA EMAIL,TEXT

EMAIL: yardsightfurniture@outlook.com
TEXT:+1 323-400-0363

Before You Start


1. Please read all instructions carefully.
2. Retain instructions for future reference.
3. Separate and count all parts and hardware.
4. Read through each step carefully and follow the proper order.
5. We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
6. Always place the product on a flat, steady and stable surface.
7. Keep all small parts and packaging materials for this product away from babies and children as they potentially pose a serious choking hazard.

Parts list

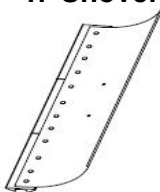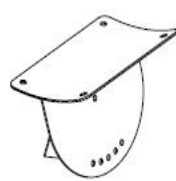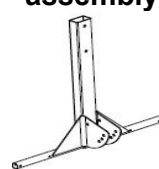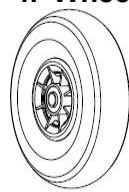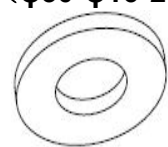
1. Shovel  X1	2. Fix adjustor  X1	3. Wheel base assembly  X1	4. Wheel  X2	5. Down handle  X1
6. Up handle  X1	7. Plastic nut  X1	8. Flange screw (M6*50)  X1	9. Fix pin worn with a chain (φ6*45)  X1	10. Lock nut (M6)  X6
11. Cotter pin  X4	12. Washer (φ30*φ16*2)  X4	13. Step bolt (M8*30)  X1	14. Button head screw (M6*15)  X4	15. Flange screw (M6*45)  X1
16. Wrench  X2	17. Wrench  X1			

Assembling step


STEP 1. Assemble component 1# Snow shovel and 2# Fix adjustor together using four 14# Screw and four 10# Nut.

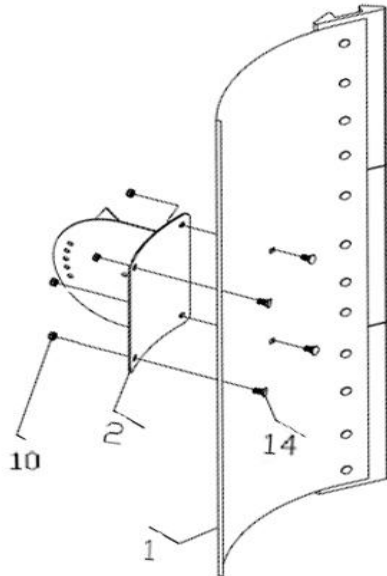


STEP 2. Fix the 3# Wheel base assembly and the 2# Fix adjustor regulator together using 15# Screw and a 10# Nut. Then insert one end of the 9# Fix pin with a chain the adjustment hole.

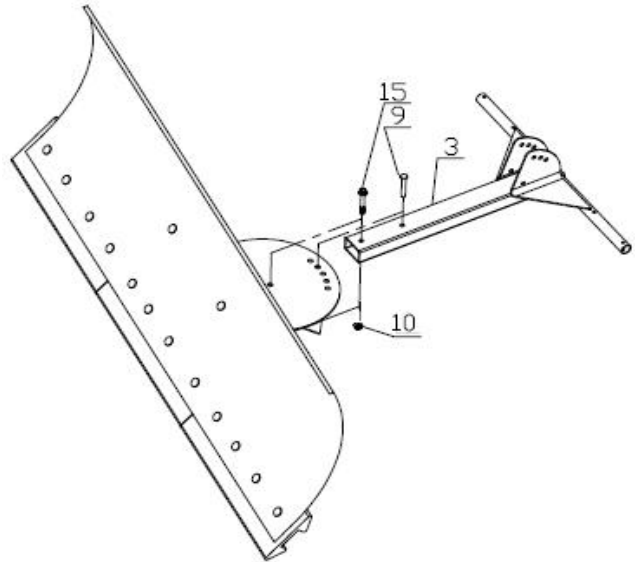


STEP 3. Insert the 11# Cotter pin as shown into the inner hole of the wheel axle of the 3# Wheel base assembly. Then, place the 12# Washer, followed by the 4# Wheel, and the 12# Washer again. Finally, insert the 11# Cotter pin into the outer hole of the wheel axle.

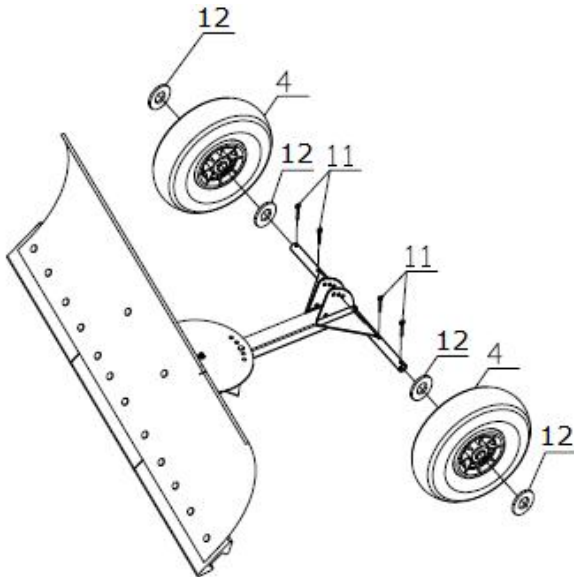


STEP 4. Connect the 5# Down handle and the 3# Wheel base assembly together using 8# Screw and 10# Nut as per the diagram. Then insert the other end of the 9# Fix pin into the adjustment hole of the 5# Down handle.

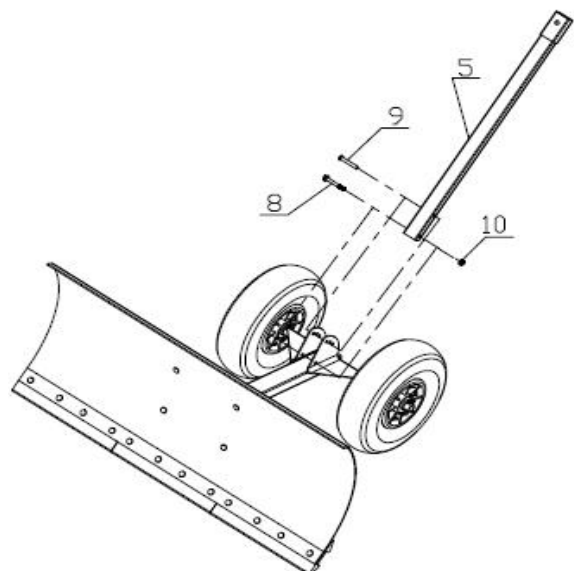


STEP 5. Finally, the 6# Up handle and 5# Down Handle of are fixed together by the 13# Step bolt and the 7# Plastic nut.

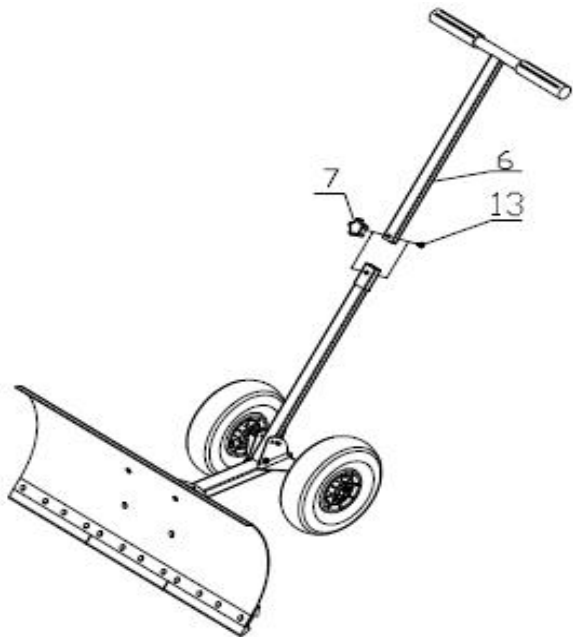

STEP 6. Assembly is complete .

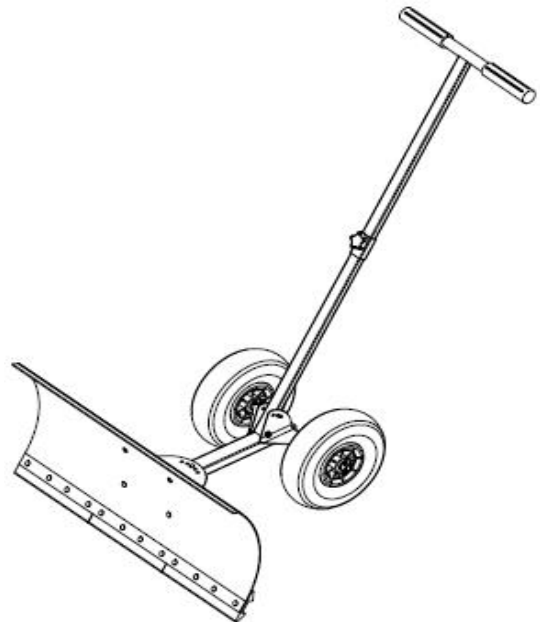

Note 1: The height of the handles can be adjusted by The 9# Fix pin on the lower handle.

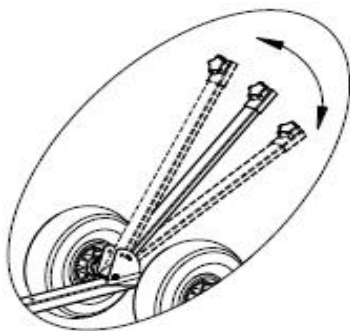

Note 2: The shovel direction can be adjusted by removing the 9# Fix pin .

