




# INSTALLATION INSTRUCTIONS FOR 1" INDUSTRIAL PIPE BAY CURTAIN ROD

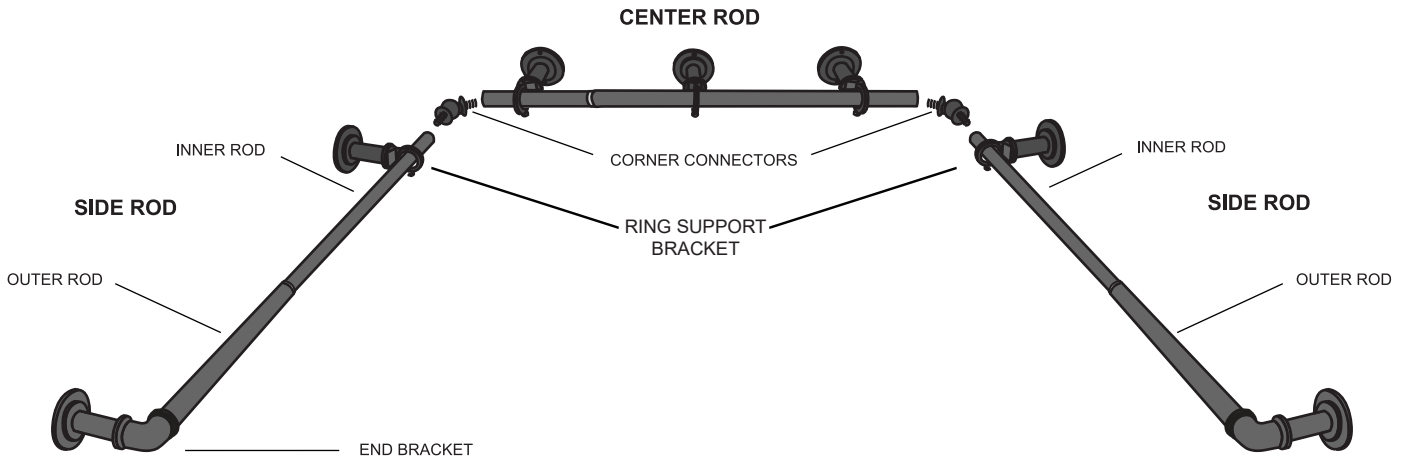

- 1** Place brackets against wall/ceiling at desired locations. Mark screw holes with a pencil. Be sure marks are level across opening.

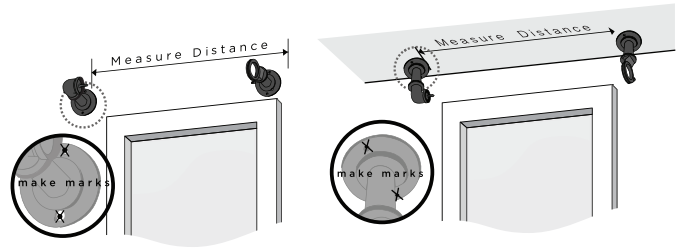


- 2** If screws are going directly into wood trim or wall/ceiling studs, drill a 1/8" pilot hole at pencil marks. If screwing into drywall, follow drywall anchor instructions at the bottom of the page.

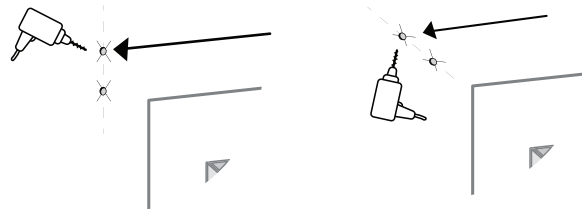


## CENTER ROD


- 3** Slide curtains or curtain rings and center supports onto rods.

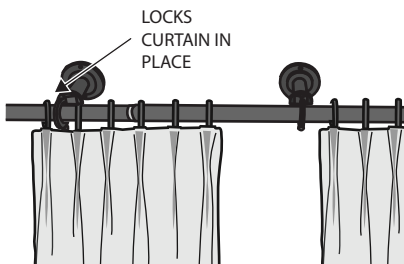

- 4** Insert screws through center supports, and tighten screws until you feel increased resistance.

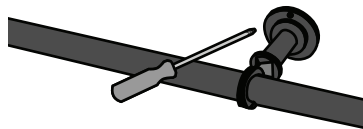


- 5 ATTACH ROD CONNECTOR**  
Screw-on rod connectors to the two ends of the center rod by turning the connectors.

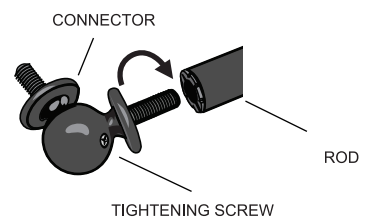


## SIDE ROD


- 6** Disassemble side rod.

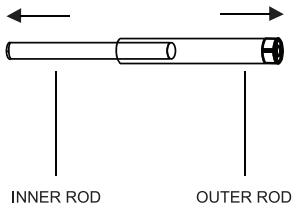


- 7** Slide curtains and curtain rings onto outer rod (large diameter rod). Slide ring support bracket on inner rod (smaller diameter rod).

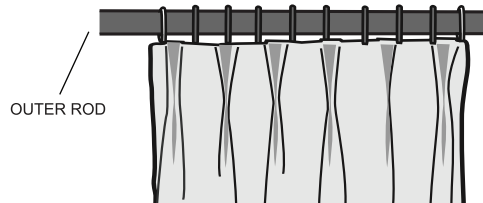


- 8** Screw-on end bracket to the end of outer rod (larger diameter rod) by turning the end bracket.

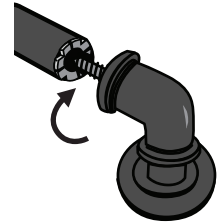


- 9** Screw-on the inner rod (smaller diameter rod) to rod connector which has been assembled on center rod by turning rod.

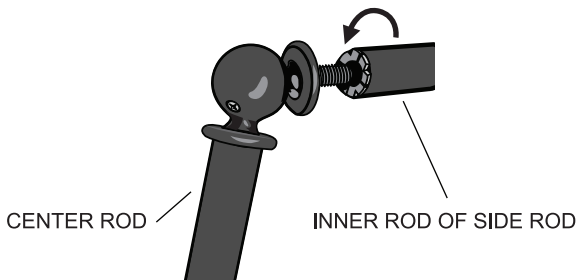

- 10** Assemble the rod by sliding the outer rod (larger diameter rod) over the inner rod (smaller diameter rod) with end bracket, curtain, and curtain rings. Adjust ring bracket and curtain to desired position. Lock end curtains in place using end bracket.

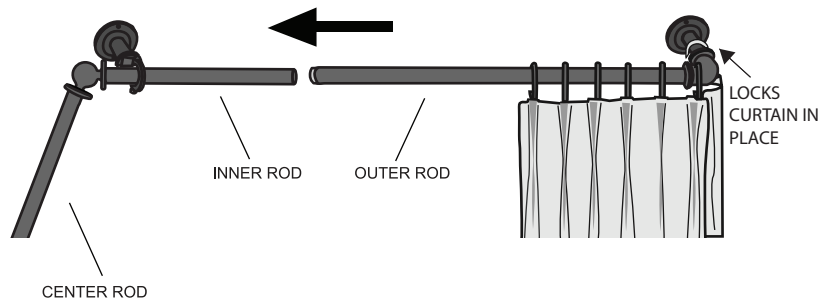


- 11** Insert screws through the ring supports and end bracket, then tighten screws until brackets are locked in place.

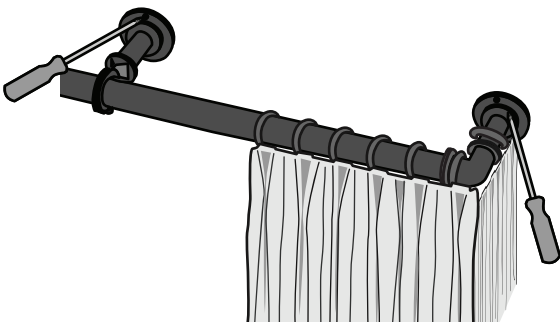

- 12** Repeat step 6 – 11 for the other side rod.

- 13** Tighten screws on all center supports.

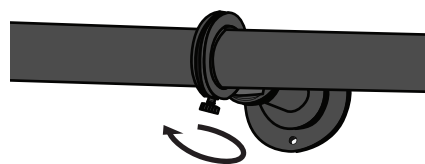

### DRYWALL ANCHOR INSTALLATION



If screws are going directly into wood trim or wall studs - drill 1/8" (3mm) holes and install screws through bracket.  
If screws are going into hollow wall - drill 3/16" (5mm) holes and push or lightly hammer plastic anchors into holes.  
Then install screws through brackets. Do not tighten screws too much - just snug is best.