


Barn Door Installation Guide

BARN DOOR HARDWARE HANDLE



MASONITE.

Open to extraordinary.

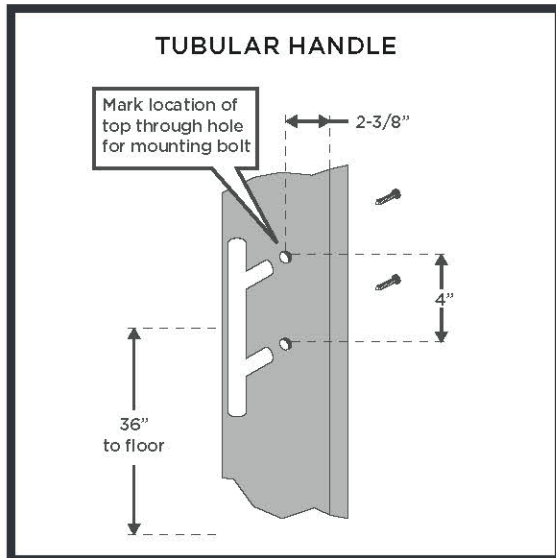

1 POSITION THE HANDLE ON THE PANEL

The suggested position is 36" up from the floor and 2-3/8" from the edge of the door

NOTE: This can vary slightly to match other nearby hardware

2 MARK THE LOCATION OF THE HOLES

Using a pencil mark the location for the top mounting hole.


Measure the location of the mark from the edge of the door panel. Make another mark 4" down at the same distance from the edge.

These are the locations for the holes that are to be drilled to mount the tubular handle.

3 ATTACH THE TUBULAR HANDLE

Drill a 1/4" - 5/16" diameter hole through the door panel at the two locations as shown.

Using a hand screwdriver, attached the handle with the bolts provided.

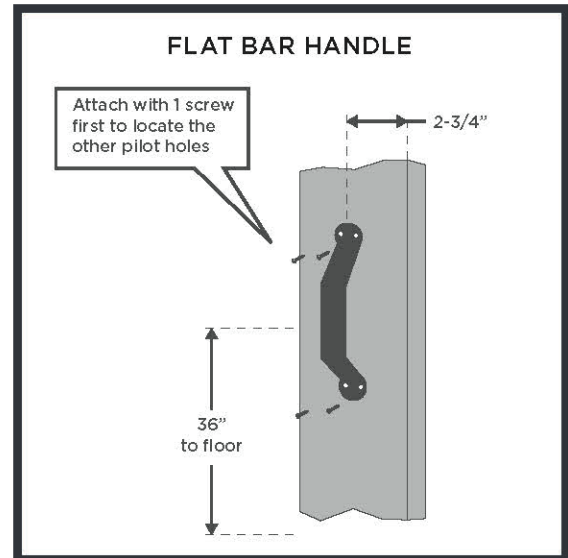

1 POSITION THE HANDLE ON THE PANEL

The suggested position is 36" up from the floor and 2-3/4" from the edge of the door to be center in the stile

NOTE: This can vary slightly to match other nearby hardware

2 MARK THE LOCATION OF THE HOLES

With the handle being held in place, use a pencil and mark the location for one of the top mounting holes in the handle.

3 ATTACH THE FLAT BAR HANDLE

Drill a 1/16" dia. Pilot-hole 1" deep at this location

Attach handle using one screw.

Make sure the handle is straight. Drill the additional pilot holes in the other 3 locations, and fasten with the 3 remaining screws.