

# No-Wire Hanging System INSTALLATION INSTRUCTIONS



## TOOLS NEEDED:



## PARTS LIST




## FOR SMALL FRAMES

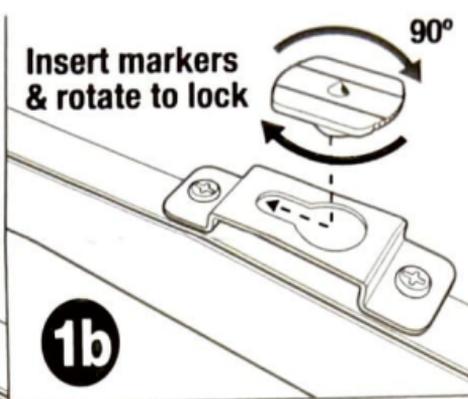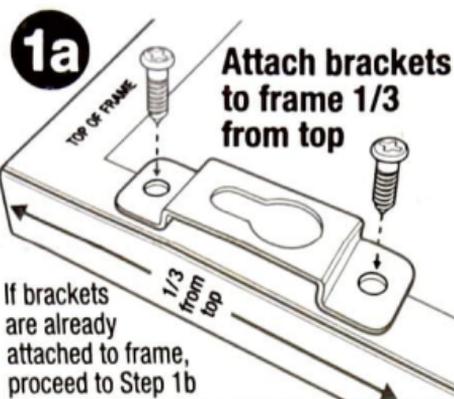

**2**


- Attach level to top of frame using tape.
- Attach bumper to bottom of frame in the middle.

Do NOT attach foam tape to decorative moldings such as those with a "gold leaf" finish

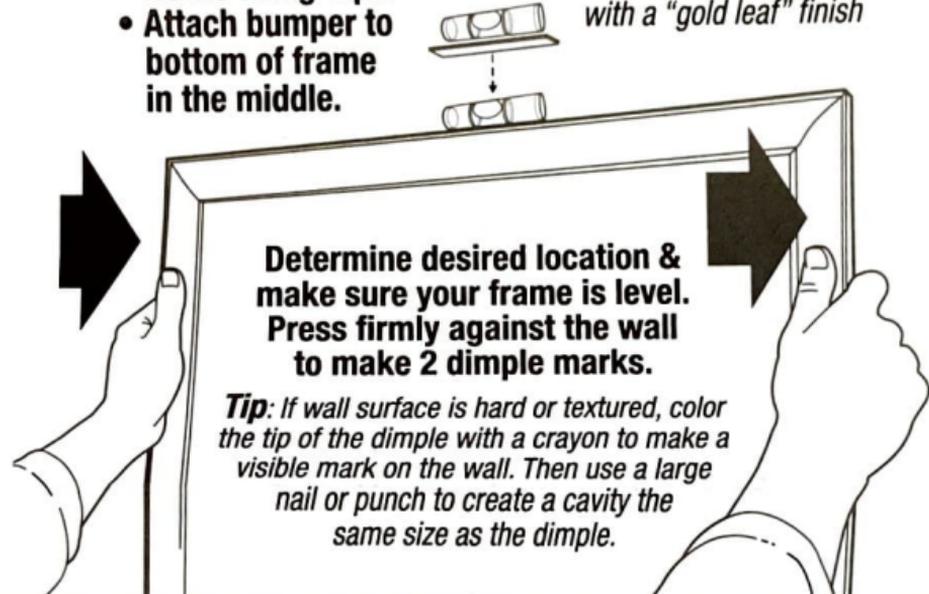


**3**

- Rotate markers to unlock and remove them from the brackets; then place the markers into the dimples and nail the markers to the wall

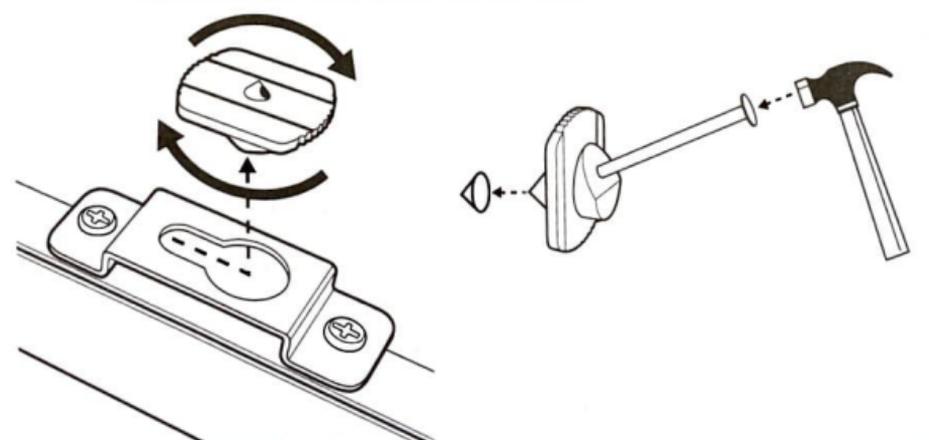

**4**


- Push brackets onto the markers, then pull down to lock in place. Remove tape and bubble level to complete your installation.

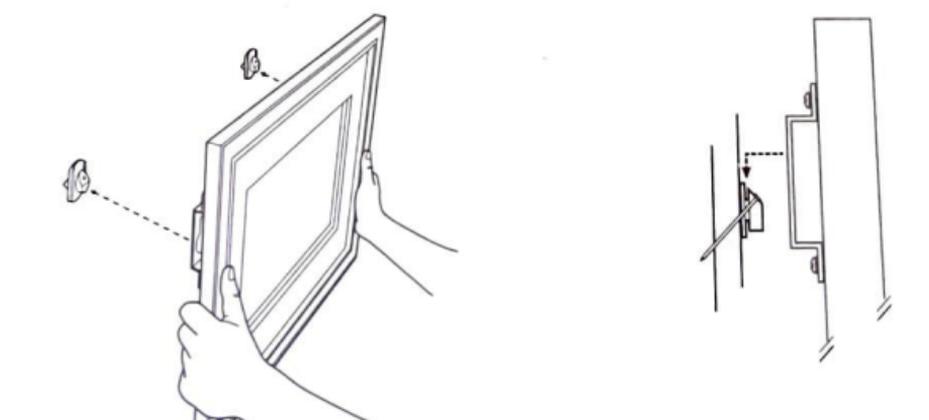

## FOR FRAMES 20" or WIDER


**1**

- Attach brackets to both sides of frame
- Insert a marker into the LEFT bracket
- Determine desired mounting location
- Press frame firmly into wall surface to create LEFT dimple mark

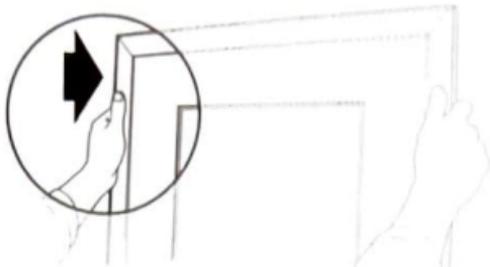

**2**

Rotate to unlock marker

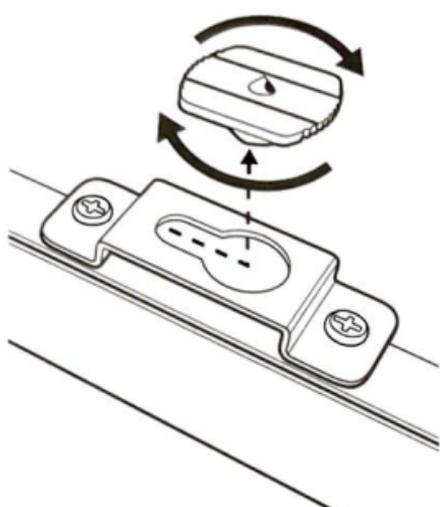

Insert marker into dimple and nail into wall


**3**

- Affix foam tape & level to frame
- Attach bumper to bottom of frame
- Insert a marker into RIGHT bracket
- Seat LEFT bracket onto marker that is on the wall
- Allow frame to swing down



**4**

- Raise frame until bubble reads "level"
- Press RIGHT side of frame firmly into wall surface to make RIGHT dimple mark
- Allow frame to swing down
- Repeat Step #2 to install the RIGHT marker

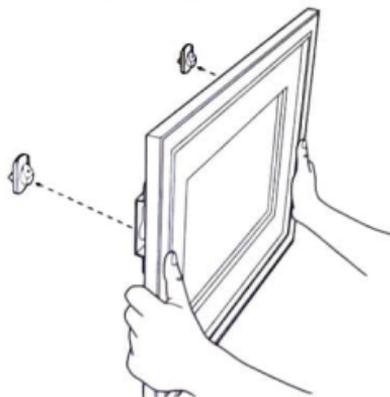

- Push brackets onto the markers, then pull down to lock in place.
- Remove tape and bubble level to complete your installation.

To see installation video, go to: [www.fletcher-terry.com](http://www.fletcher-terry.com)

©2018 The Fletcher-Terry Company, LLC. All rights reserved  
U.S. Patent Nos. 7,497,028 and 7,836,605. Other patents pending  
Designed and engineered in the U.S. - Made in China.