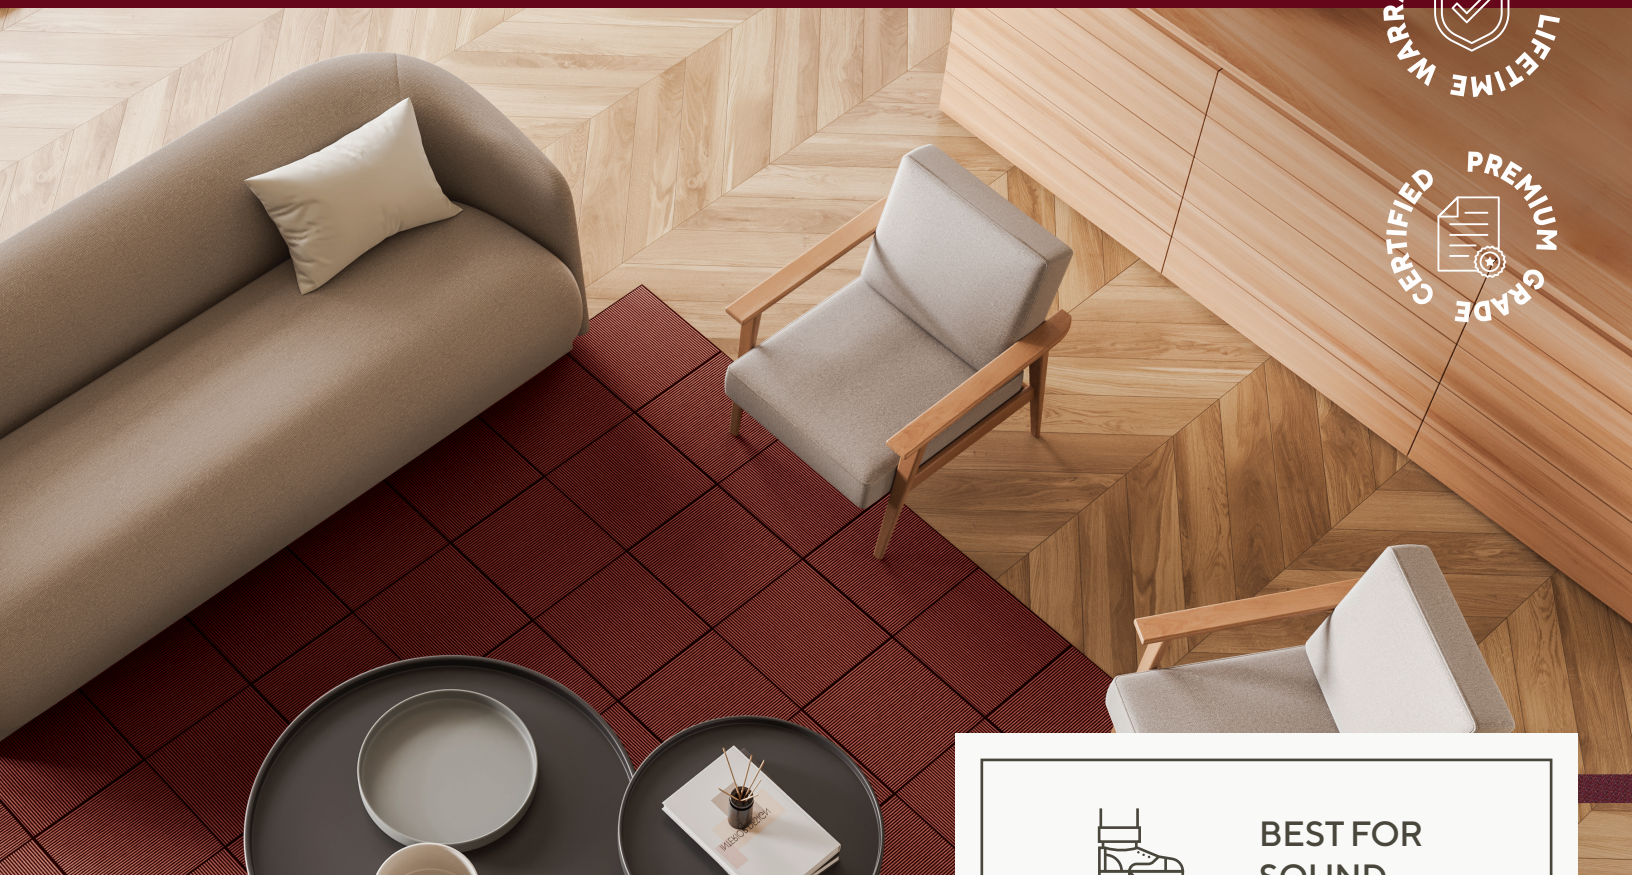


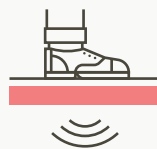
100
sq. ft.

floorMuffler®

ULTRASEAL

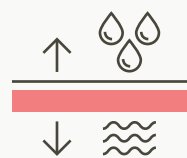


- HIGH PERFORMANCE ACOUSTICAL UNDERLAYMENT & MOISTURE BARRIER.
- FOR LAMINATE & WOOD FLOORS.
- FOR RESIDENTIAL & COMMERCIAL APPLICATIONS.
- FOR FLOATING, NAIL DOWN & DOUBLE GLUE DOWN INSTALLATIONS*.
- SELF-SEALING LIP & TAPE SYSTEM.



**BEST FOR
SOUND
REDUCTION**

74 IIC 76 HIIC 73 STC 25 ΔIIC



Moisture barrier.



Improves R-value.



Proprietary PP Core Technology to ensure the integrity of the tongue and groove.



Surpasses the Indoor Air Quality emissions requirements.



8 51312 00406 0

Item No. 0264049
SKU 1000006267

100 sq. ft. / 2.0mm x 48" x 25'



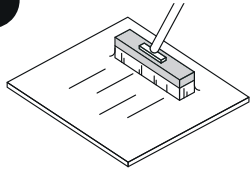
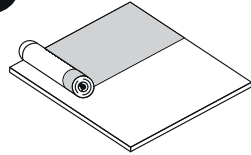
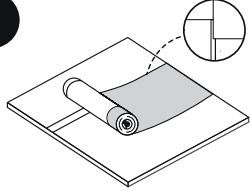
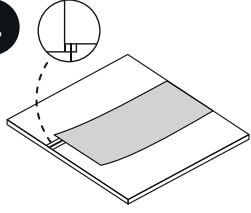
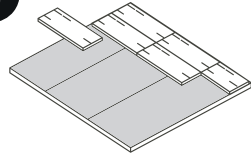
FLOORMUFFLER.COM

Distributed by:
Diversified Industries, Inc.
121 High Hill Road
Swedesboro, NJ 08085 USA.

*For Glue Down installations, only use adhesives that have been tested by the adhesive manufacturer for installation of the floorMuffler ultraSeal.
Flooring systems protected under USPTO No. 8,276,338; 8,458,975; 8,707,646.

nwfa
National Wood
Flooring Association
MEMBER

**floor
score**
CERTIFIED BY
SCS Global Services

1 	1. Make sure the subfloor is structurally sound, level and is free of dust and debris. 2. Check for protruding nails and/or defects in the subfloor. If installing over concrete, the concrete must meet the floor covering manufacturer's acceptable moisture tolerance range.
2 	1. Start in a corner with the tape strip side next to the wall and the overlapping film towards the open room. 2. Install floorMuffler® ultraSeal (overlap film side down) parallel to the wall in the opposite direction that you plan to install the flooring planks. 3. When installing the floorMuffler® ultraSeal, leave at least 2" going up the wall (you will trim this part after installing the floor).
3 	1. Be sure to unfold the overlap plastic film, extending it 3" from the foam. 2. Roll out the next roll of floorMuffler® ultraSeal in the same manner, making sure that the foam seams are butted together. 3. Be sure to overlap only the moisture barrier plastic film and not the underlayment pad.
4 	1. Remove the adhesive liner and adhere the underlayment to the plastic film overlap.
5 	1. Install the flooring per manufacturer's instructions.

