


Whynter ARC-12S , ARC-12SD/H & ARC-14S/H window kit installation

1. Make sure the grooved side of the window slide bar is facing inside.
2. Insert the fixture(s) to the hole(s) of the window slide bar. Make sure the two taps of the fixture are facing the inside.
3. Install the 4 screws of the fixture from the inside.

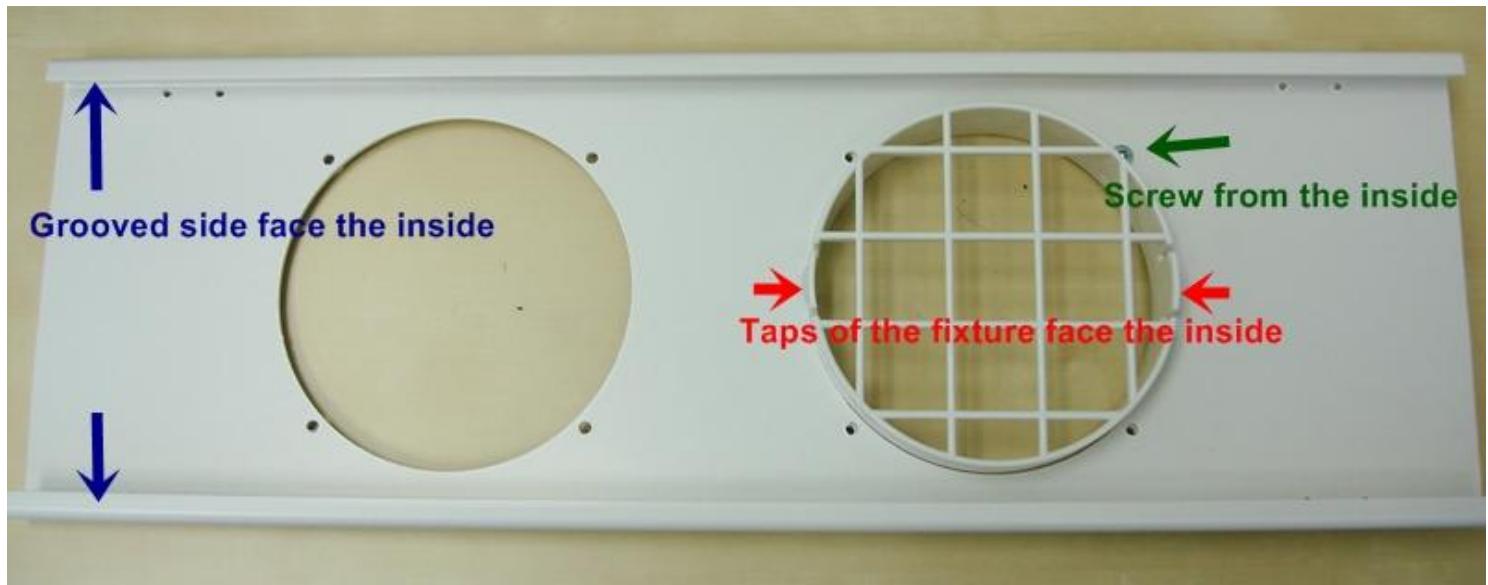

4. The end of the screws should face outside.



5. Attach the exhaust hose and connector to the fixture.

