

FLEX-TENNA®

MEASURING GUIDE



FlexScreen® is a custom made product which requires a unique measuring process outlined in this guide. Measure accurately to ensure the right fit.

FlexScreen will work with all window styles but the measuring point depends on your window type. This guide will provide you with easy to follow measuring instructions.



DO NOT MEASURE YOUR OLD SCREENS

TOOLS NEEDED:

- » FLEX-TENNA® Measuring Tool
- » Measuring Tape



Make note of where your screen currently fits on the window. This will indicate where you should take measurements.

FLEX-TENNA®

FLEXSCREEN® MEASURING TOOL

Use FLEX-TENNA when measuring your windows for custom window screens. FLEX-TENNA makes measuring fast, easy, and accurate. Simply assemble the tool, extend to measuring point, and measure.

- Designed specifically for measuring a custom made FlexScreen
- Fits easily into spaces where most measuring tapes will not
- Extends in both directions
- Circular ends measure 5/16 inches, the same thickness as a FlexScreen frame
- Provides measurements up to 74¾ inches

**FLEX-TENNA sold separately.*

To purchase visit www.homedepot.com

FAST
EASY
ACCURATE



the right fit



FlexScreen will work with all window styles but the measuring point depends on your window type.

POCKET: Refers to the recessed opening or “channel” in the window into which the screen fits.


If FLEX-TENNA does not fit into your window pocket/channel – consider that pocket a **NARROW POCKET** for measuring purposes.



It is possible to have a different measuring points for height & width measurements.

FlexFit® Retention Bumpers

Free with every screen! Designed to give FlexScreen a tighter fit in all windows.

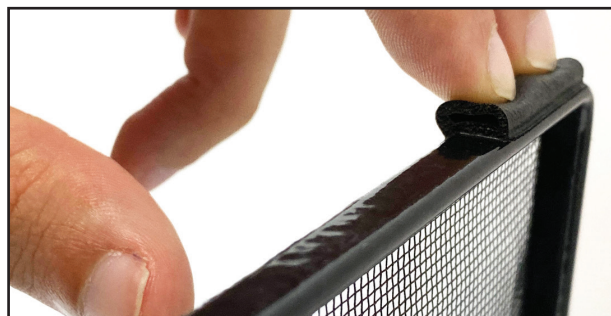

POCKETS / CHANNELS

POCKETS



NARROW POCKETS – NO POCKETS – ONE POCKET

NARROW POCKETS



NO POCKETS



ONE POCKET



**GO TO
PAGE 3**

**INSTRUCTIONS
POCKETS / CHANNELS**



**GO TO
PAGE 4**

**INSTRUCTIONS
NARROW POCKETS –
NO POCKETS – ONE POCKET**

1. ASSEMBLE FLEX-TENNA

Screw the FLEX-TENNA halves together before measuring



2. MEASURE FOR WIDTH & HEIGHT

POCKETS

Extend FLEX-TENNA completely into pocket/channel on each side of the window

- » Insert and extend FLEX-TENNA as far as it will go based on your measuring point
- » Remove FLEX-TENNA
- » Measure extended FLEX-TENNA with measuring tape
- » Mark down measurements for height and width



QUICK TIP

It is possible to have a pockets on one side of the window, and not the other.

QUICK TIP

Take care when removing FLEX-TENNA from window to not extend or compress the tool.




Measure extended FLEX-TENNA with measuring tape

3. ADJUST MEASUREMENT FOR THE PERFECT FIT

Subtract 3/16" from width & height measurements

QUICK TIP

To subtract 3/16" – count back 3 marks

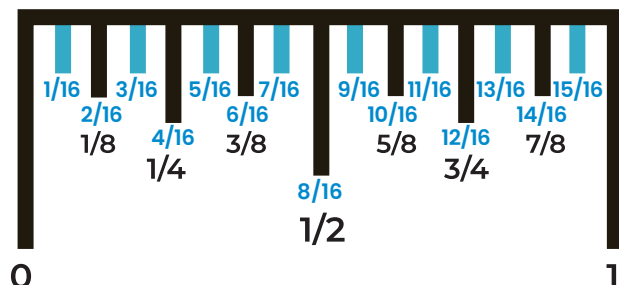

QUICK TIP

Flexfit Retention Bumpers ship with each screen. Bumpers add additional pressure for the perfect fit on NARROW POCKETS or NO POCKET windows.

1. ASSEMBLE FLEX-TENNA

Screw the FLEX-TENNA halves together before measuring



2. MEASURE FOR WIDTH & HEIGHT

NARROW POCKETS

Extend FLEX-TENNA to measure from the outside edge of the left window pocket/channel to the outside edge of the right window pocket/channel


NO POCKETS

Extend FLEX-TENNA to measure from the left inside edge of the window frame to the right inside edge of the window frame

ONE POCKET

Extend FLEX-TENNA to measure from the inside edge of the window pocket/channel to the edge of the window frame

- » Insert and extend FLEX-TENNA as far as it will go based on your measuring point
- » Remove FLEX-TENNA
- » Measure extended FLEX-TENNA with measuring tape
- » Mark down measurements for height and width

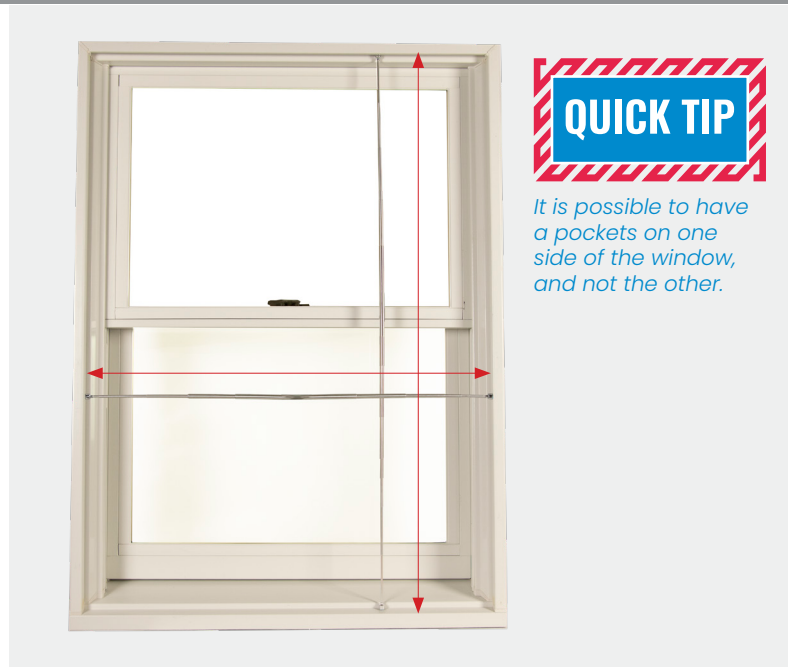


QUICK TIP
It is possible to have a pockets on one side of the window, and not the other.



QUICK TIP Take care when removing FLEX-TENNA from window to not extend or compress the tool.

Measure extended FLEX-TENNA with measuring tape

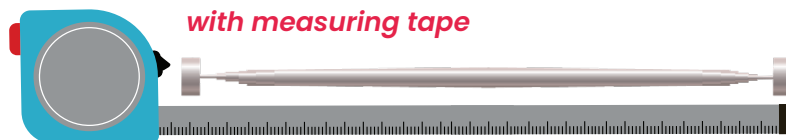

3. ADJUST MEASUREMENT FOR THE PERFECT FIT


Subtract 1/16" from width & height measurements



QUICK TIP To subtract 1/16" – count back 1 mark



QUICK TIP FlexFit Retention Bumpers ship with each screen. Bumpers add additional pressure for the perfect fit on NARROW POCKETS or NO POCKET windows.

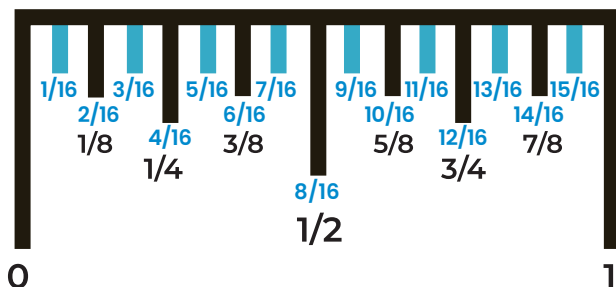




FLEXSCREEN

Alternative Measuring Guide

**DO NOT MEASURE YOUR OLD SCREENS*

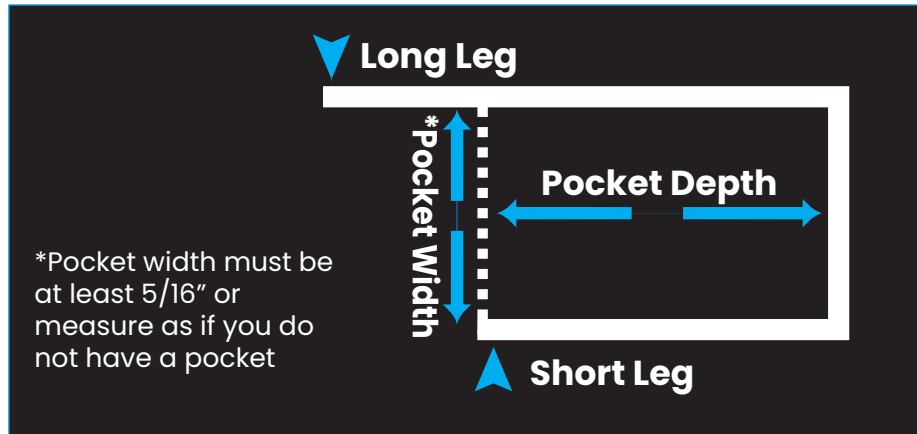

SCREEN WIDTH

TWO SIDE POCKETS



Measure and add 3/16"

Measure from the **inside** of the left screen **track/pocket** to the **opening (shortest leg)** of the right screen track/pocket, then add 3/16"

ONE SIDE POCKET



Measure and subtract 1/16"

Measure from the **inside** of the screen **track/pocket** to the opposite side of the window **frame**, then subtract 1/16"

NO POCKETS



Measure and subtract 1/16"

Measure from the left side of the **window frame** to the right side of the **window frame**, then subtract 1/16"

SCREEN HEIGHT

TOP AND BOTTOM POCKET



Measure and add 3/16"

Measure from where the screen will rest on the **sill** to the opening of the top screen **track/pocket (shortest leg)**, and add 3/16"

TOP AND NO BOTTOM POCKET



Measure and add 3/16"

BOTTOM POCKET - NO TOP POCKET



Measure and subtract 1/16"

Measure from where the screen will rest on the **sill** to the top of the window **frame**, and subtract 1/16"

NO POCKETS



Measure and subtract 1/16"