


## **Assembly Instruction**

<u>CAUTION:</u> Read instruction carefully and turn electricity off at main circuit breaker panel before beginning installation.

ITEM#:LIT4490A

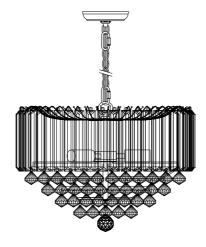

## **Care and Cleaning**

To clean the outside of the fixture, use a dry or slightly dampened clean cloth(use clean water, never a solvent) to wipe the surface of the fixture.

To clear the inside of the fixture, first disconnect power to the fixture by turning off the circuit breaker or by removing the fuse at the fuse box. Next, use a dry or slightly dampened clean cloth(use clean water, never a solvent) to wipe the interior surface of the fixture

Do not use any cleaners with chemical, solvents or harsh abrasives. Use Only a dry soft cloth to dust or wipe carefully.

Estimated Assembly Time:30 minutes

#### Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY	PIECE	DESCRIPTION	PICTURE	QUANTITY
А	Wire Nut		3X	G	Lampbody		1X
В	Mounting Bar		1X	Н	Shade	***************************************	1X
С	Mounting Screw	I,	2X	I	Finial	D	1X
D	Canopy		1X	J	Bulb		2X
E	Chain	-0 <del>0</del> 0-	1X	K	Decoration		26X
F	Fixture Loop	<b>E</b> 2002 <b>3</b>	1X	L	Dropper		1X


#### Installation

## Step 1

Unpack all parts from cartons carefully.


Place the Shade(H) to the Lampbody(G) and tighten by finial(I).

Screw the Chain(E)to the lock of the Lampbody(G) as shown below.

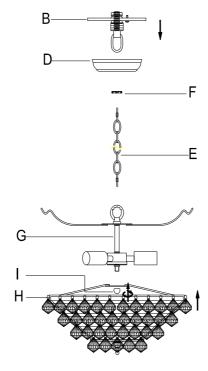

## Step 2 Wire connection

Connect,Hot,Black or Red outlet Supply Wire to:	Connect, Neutral, White Outlet Supply Wire to:
Black	White
*Parallel Cord(round&smooth)	*Parallel Cord(square&ridged)
Clear, Brown, Gold or Black without Tracer(colored stripes	Clear,Brwn,Gold or Black without Tracer(colored stripes)
Insulated Wire(not green)with copper metal conductor	Insulated Wire(not green)with Silver metal conductor



\*Note: When parallel wire(SPTI&SPTII)is used. The neutral wire is square shaped and ridged and the hot wire will be round in shape and smooth.(See illustration on left)




#### Grounding Instructions:

- a) For installation in the United States: Wrap ground wire from outlet box around green ground screw on mounting bracket, no less than 2" from wire end. Tighten ground screw. If fixture is supplied with a ground wire, connect to outlet ground wire with a wire connector.
- b) For installation in Canada: If fixture is supplied with ground wire, wrap ground wire around green grounding screw on mounting bracket. Tighten ground screw.

## Step 3

Installing the Mounting Bar(B) to the junction box with Mounting Screw (C)


Attach the Canopy to the junction box and fix it by turning the Fixture Loop(F) to the Lock of the Mounting Bar(B).

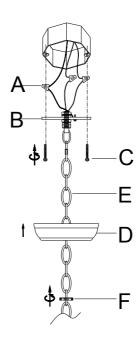

### Step 4

Insert the bulb (J) into the Socket

Hang the Decoration(K) to the Lampbody(G) as shown below. Hang the Dropper (L) to the Lampbody(G) as shown below.

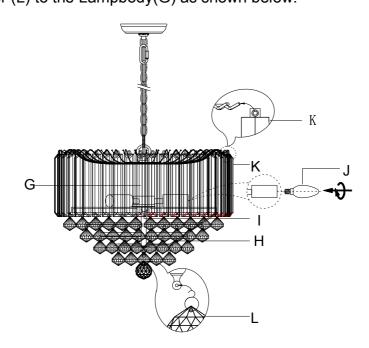

# PLEASUE USE ON/OFF TYPE"B" BULB MAX 40-WATT OR CFL BULB MAX 9-WATT THERE ARE 2PCS TYPE"B" BULB IN THE BOX.

## Step 5

Consult a qualified electrician to ensure correct branch circuit conductor.