




EXCLUSIVE[™]
HOME

CURTAIN GUIDE

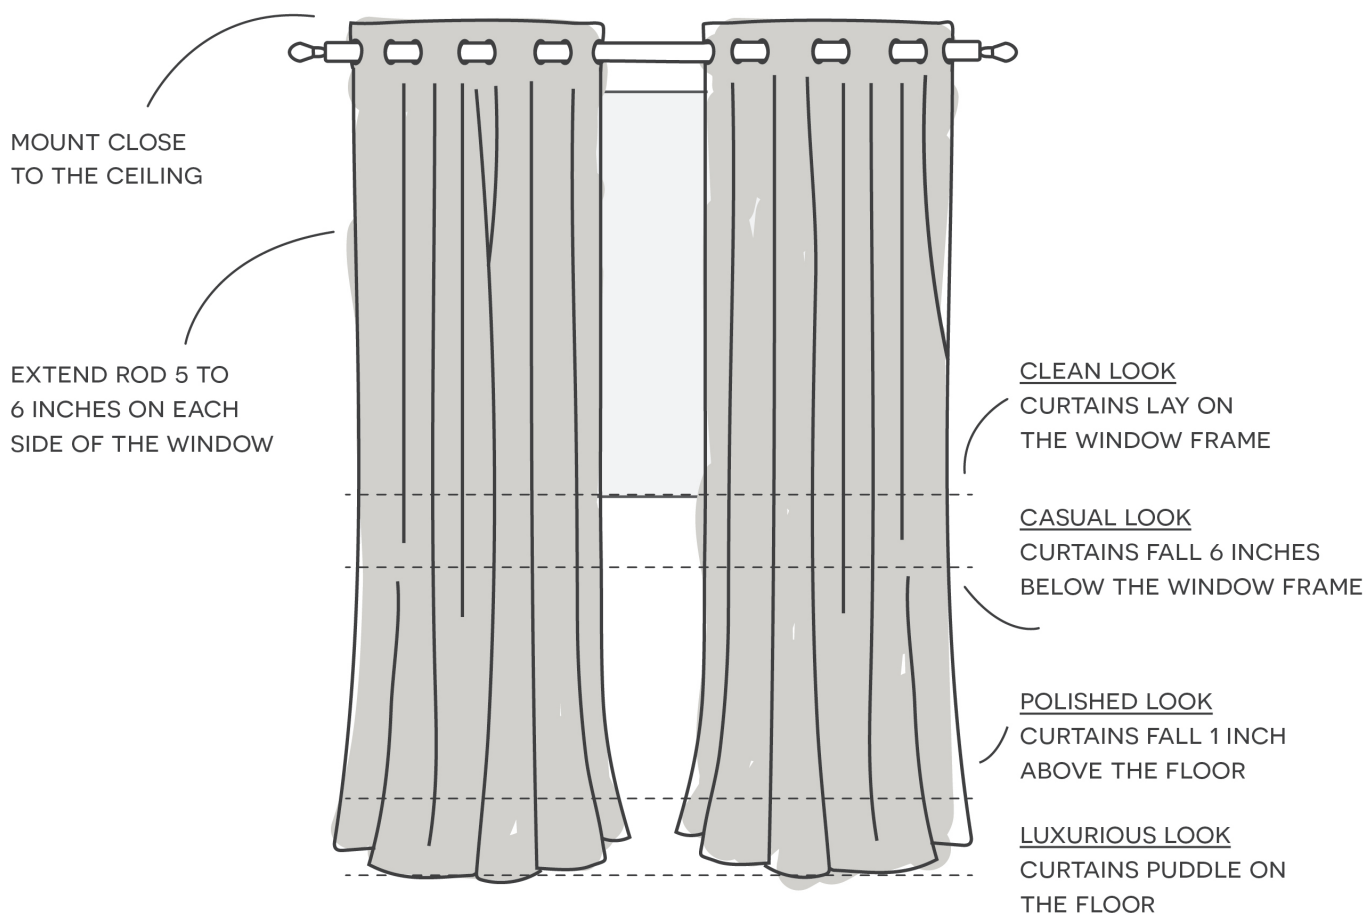

PRO TIP:

TO ACHIEVE PROPER WINDOW COVERAGE, THE TOTAL WIDTH OF THE CURTAINS SHOULD BE AT LEAST 1.5 TIMES THE WIDTH OF THE WINDOW