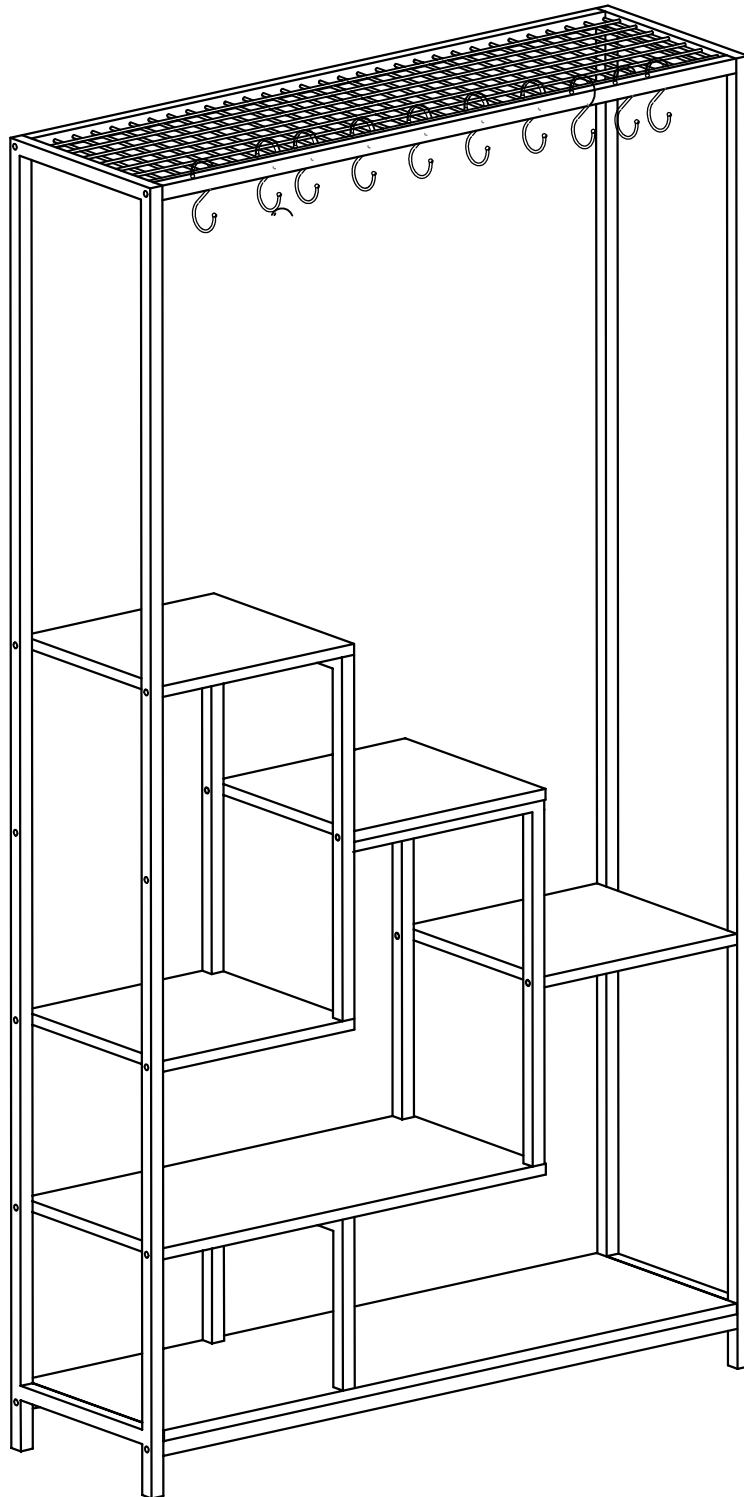


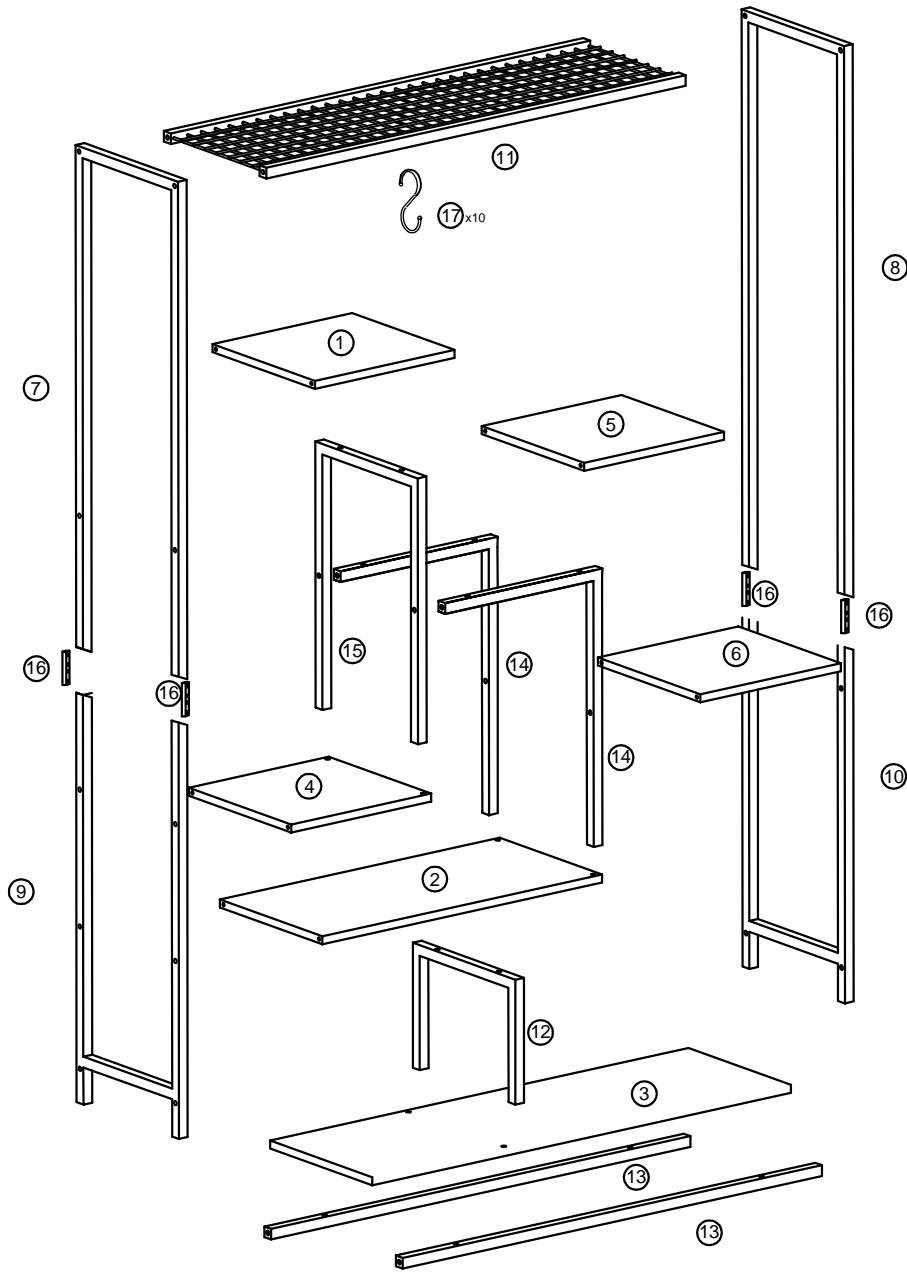
Tribesigns












HOGA-JW0254



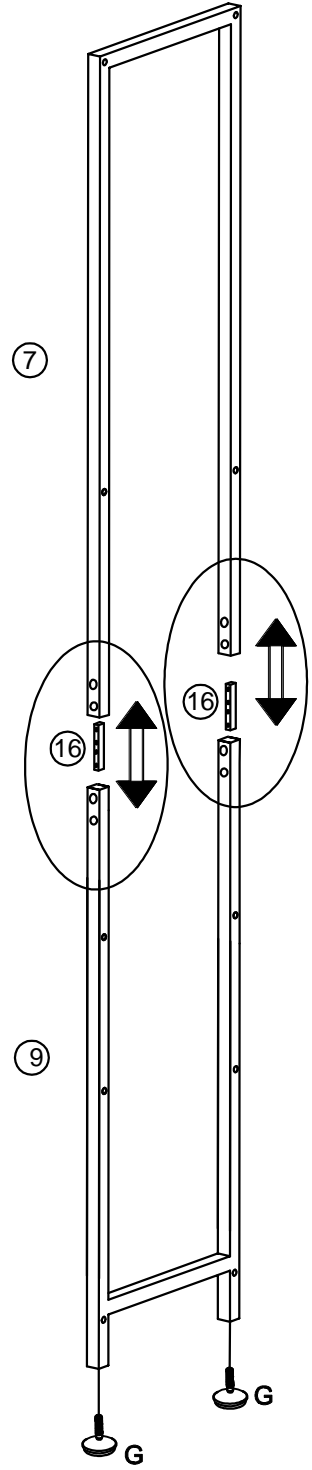
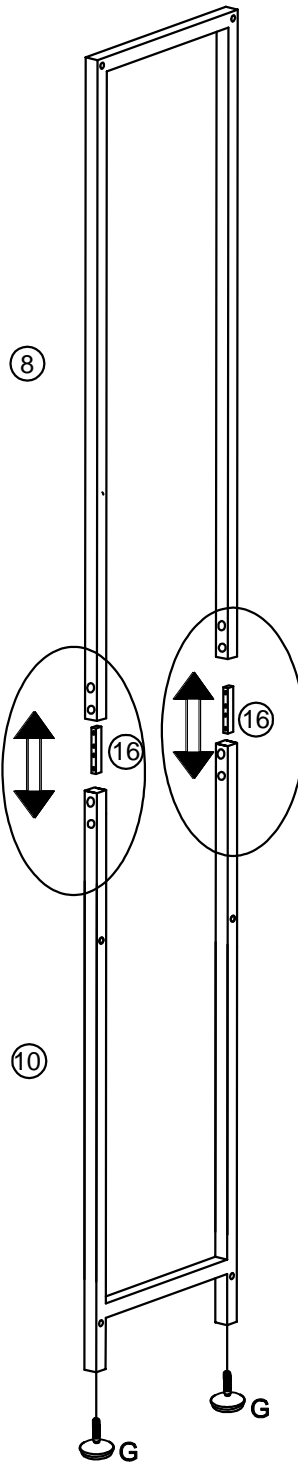
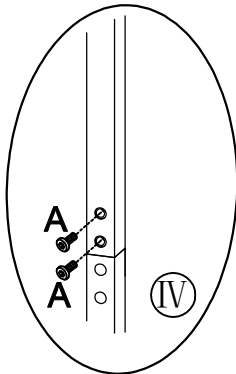
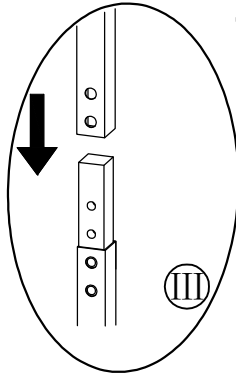
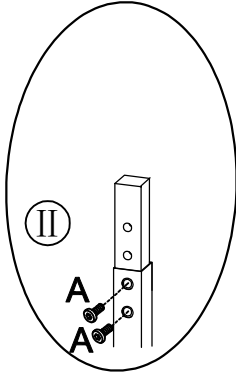
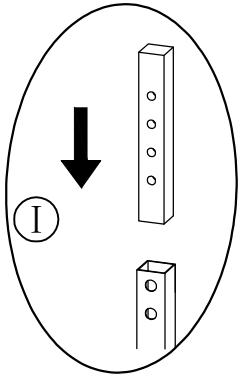
Notes:




Don't tighten screws completely at first, just in case parts were assembled wrongly and need disassemble. Tighten screws at last when all parts are put together.



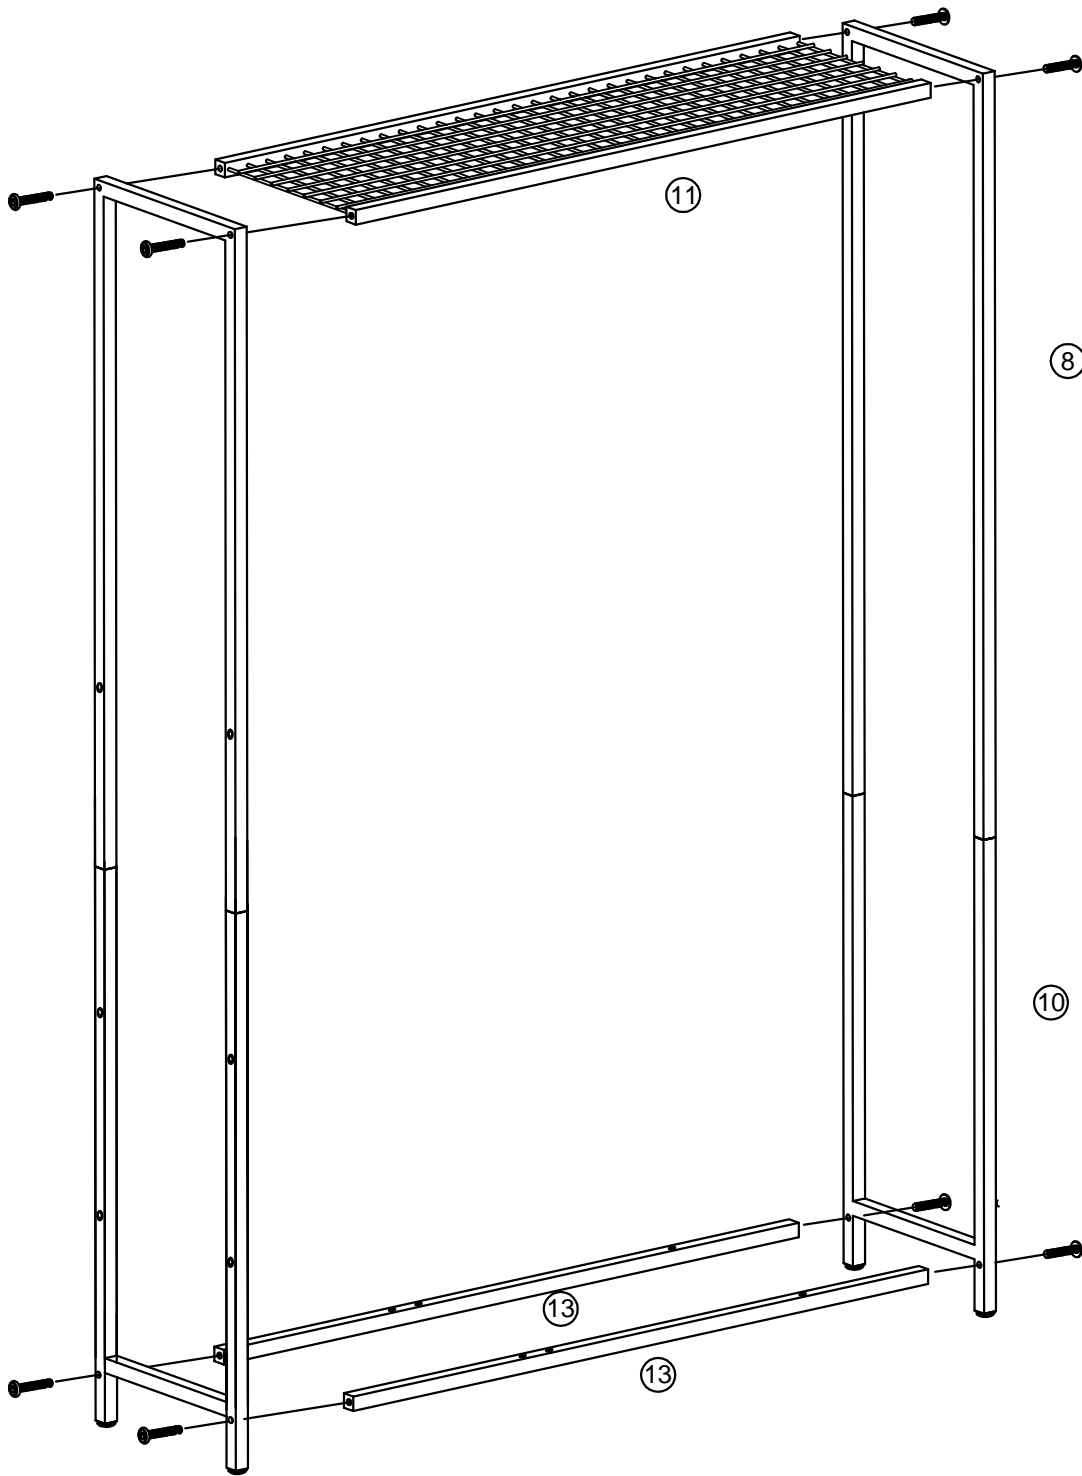
A M6×12mm  16PCS	B M6×40mm  14PCS	C M6×30mm  8PCS	D M6×20mm  4PCS	E M6×55mm  2PCS
F M7×48mm  10PCS	G  4PCS	H  2PCS	I  2PCS	J  2PCS
k 4mm  1PC				



1



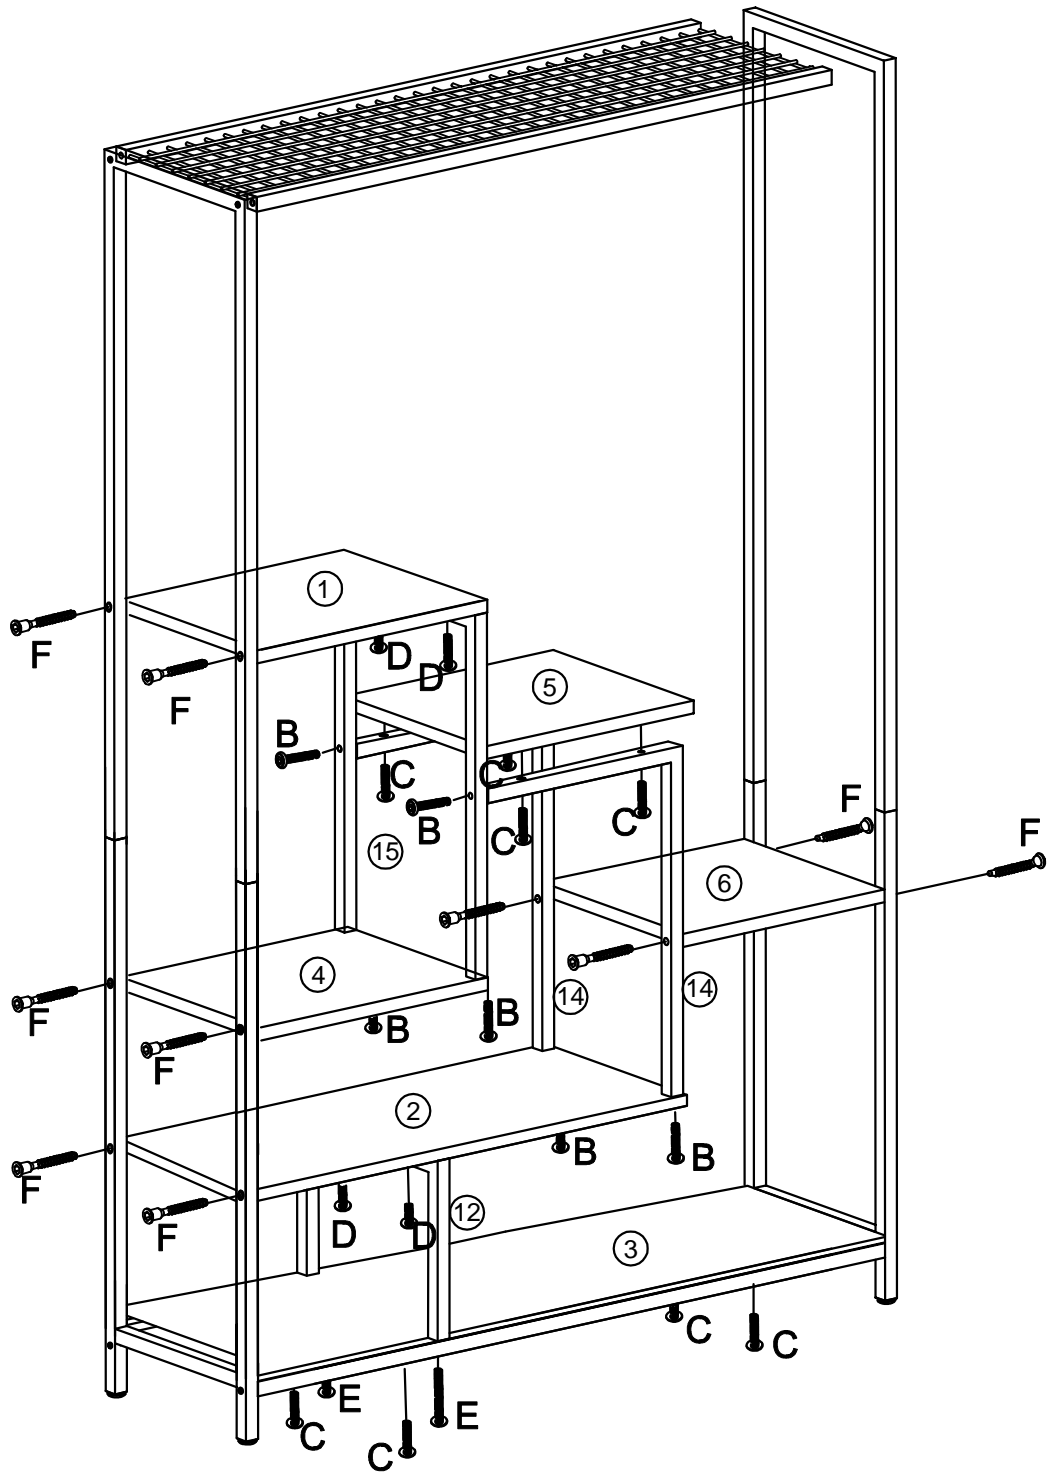
A M6×12mm  16PCS	G  4PCS	k 4mm  1PC
--	---	---







1

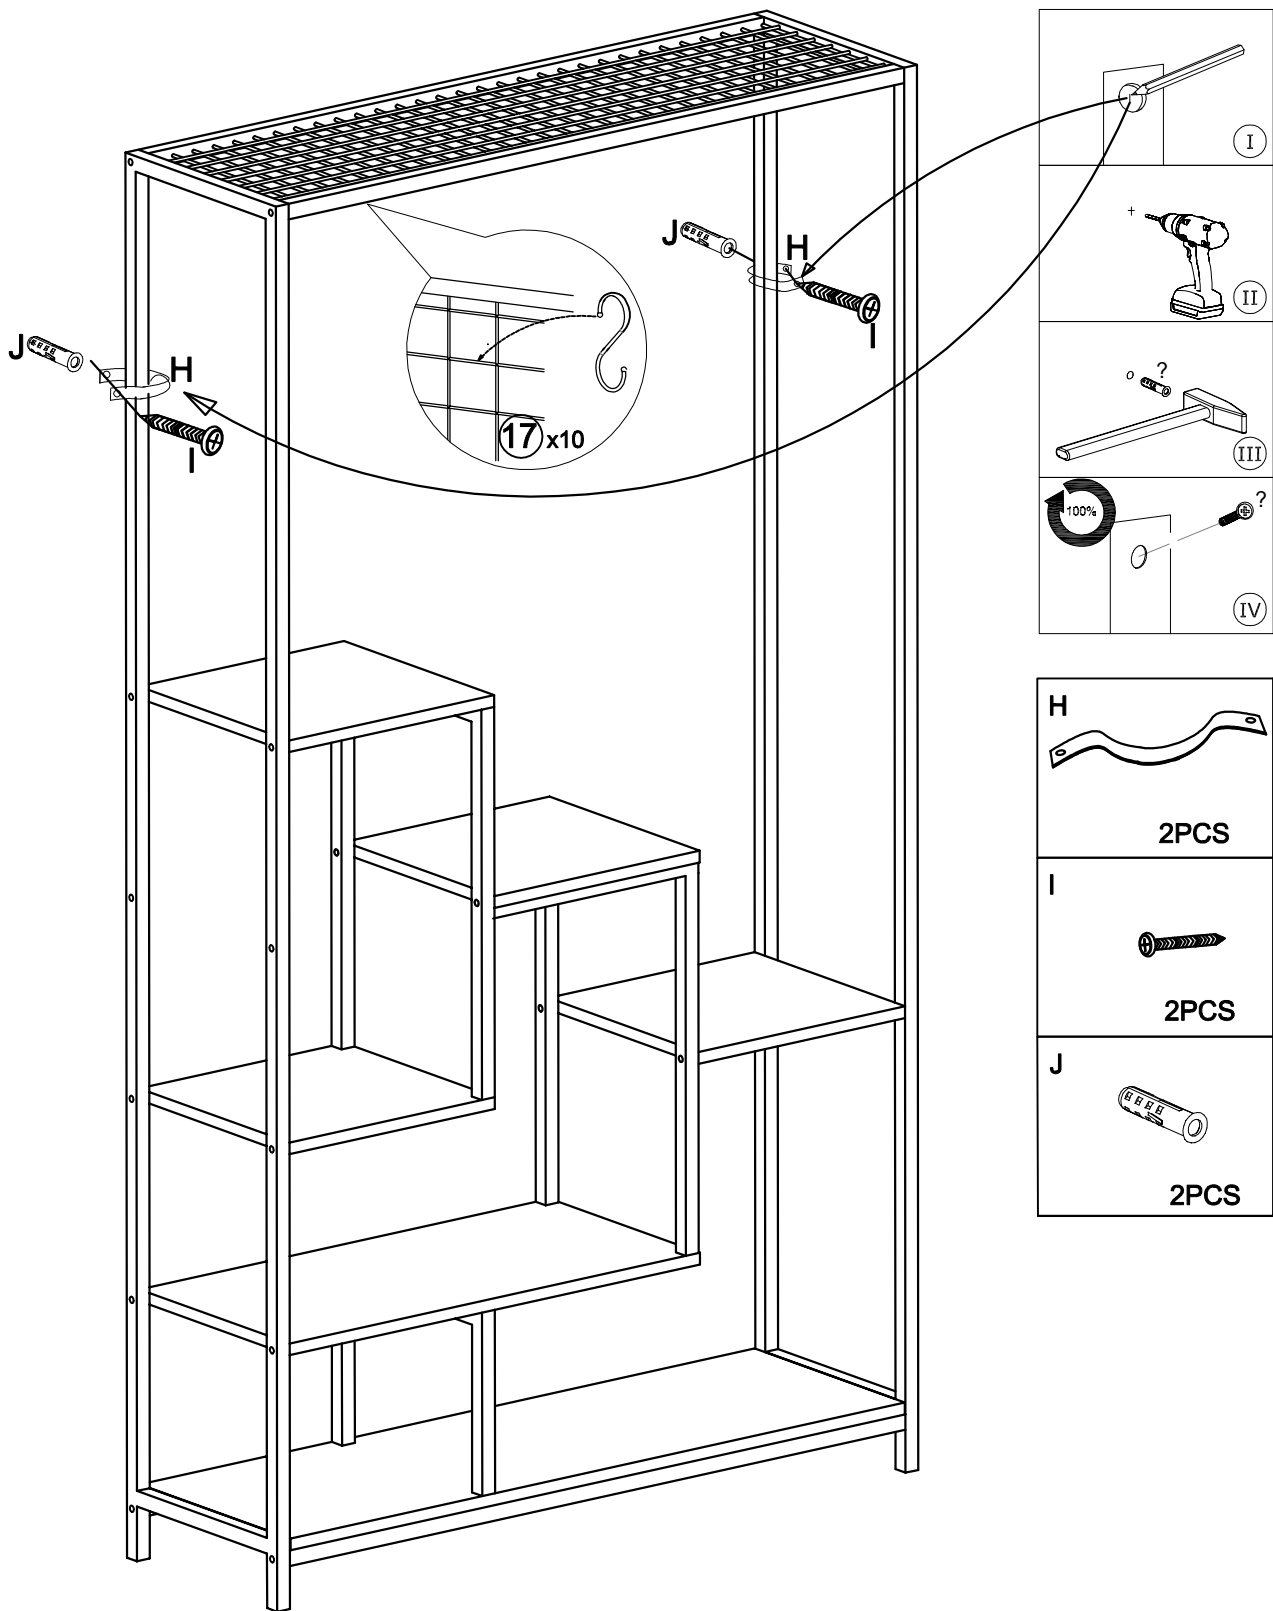


<p>B M6×40mm</p>  <p>8PCS</p>	<p>k</p> <p>4mm</p>  <p>1PC</p>
---	---

1



<p>B M6×40mm</p>  <p>6PCS</p>	<p>C M6×30mm</p>  <p>8PCS</p>	<p>D M6×20mm</p>  <p>4PCS</p>
<p>E M6×55mm</p>  <p>2PCS</p>	<p>F M7×48mm</p>  <p>10PCS</p>	<p>k 4mm</p>  <p>1PC</p>



Thanks for choosing Tribesigns product, your satisfaction is our priority. If you have any installation problems or any damages caused by shipping, feel free to contact us at "support@tribesigns.com", our friendly customer service will solve problem for you.