

Installation Instructions for Model: AV-12-RF

Retro-Fit Vent Cap Designed to Fit Over an Existing Base or Vent Pipe

Step 1:

After you have removed the old head, slide the replacement head over the existing collar.



Step 2:

Observe the screws located on top of the vent. Use this as your pattern to attach the vent to the collar. Tolerance : 1/2"




Step 3:

With the retro fit vent cap in place, use #8 self-tapping screws, (4 in total) to secure to the base. (Screws not included)



Aura Vent Retro-fit installed on base.

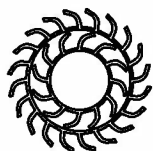

Active Ventilation Products, Inc.

311 First Street, Newburgh, NY 12550-4857

800-ROOF VENT (766-3836) Ph: 845-565-7770

Website: roofvents.com Email: sales@roofvents.com

5778-6