


4 Install Upright Extensions

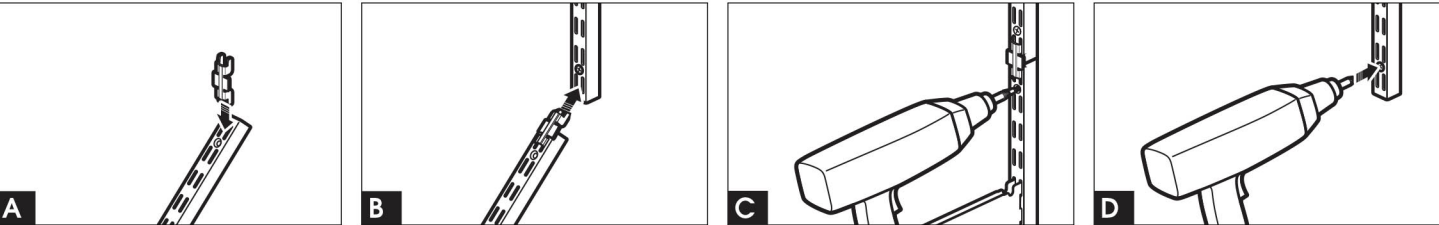


Slide in upright connector
Slide one end of the upright connector into the top two notches of the short upright.

Slide in other end to upright
Slide the other end of the upright connector into the bottom two notches of the long upright. Use a level to position the short upright and mark the position of the top & bottom screw holes.

Fasten screws
Drill 1/8" pilot hole and fasten both screws (use wall anchor and 3/8" bit if there is not stud). To position the second upright extension, use 22.125" rail cover to ensure proper spacing is parallel from the first upright extension.

► Hint: Install these in the area of the closet where you would be most likely to install accessories (sold separately) or shelving closer to the floor. Use shoe shelf brackets (included) to create additional storage space.

5 Install Brackets and Expanding Shelves

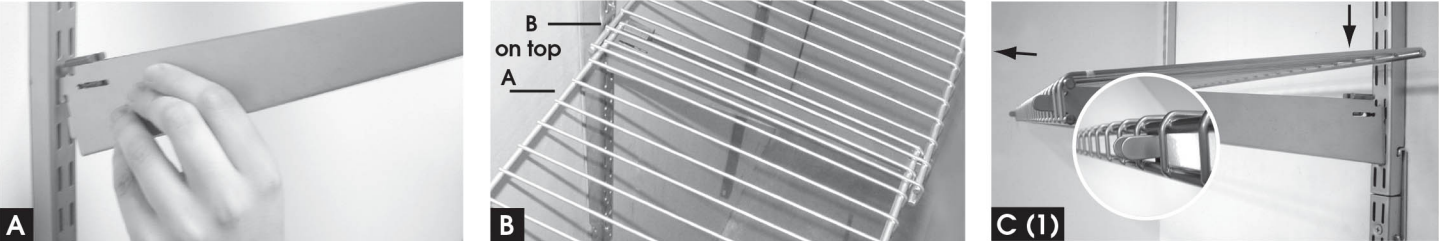


Insert brackets
Insert brackets into uprights at desired locations. **Note: Install brackets and shelving at the top first and work down. Brackets will not fit into upper two slots of each upright.**

Overlapping shelves
Shelves are fully adjustable and require no cutting. To adjust width, overlap the shelves making sure the shelf labeled "A" is placed first on the brackets and the shelf labeled "B" is placed on top of "A".

Install shelves into brackets
Confirm that the bracket locks are unlocked and install shelving making sure that the "nose" of the bracket is projecting out through the front edge of the shelf. **Note: For maximum weight capacity, do not insert brackets into bottom slots of upright.**

► Hint: When overlapping sections of shelving, shelves labeled "A" must be placed onto brackets before shelves labeled "B".

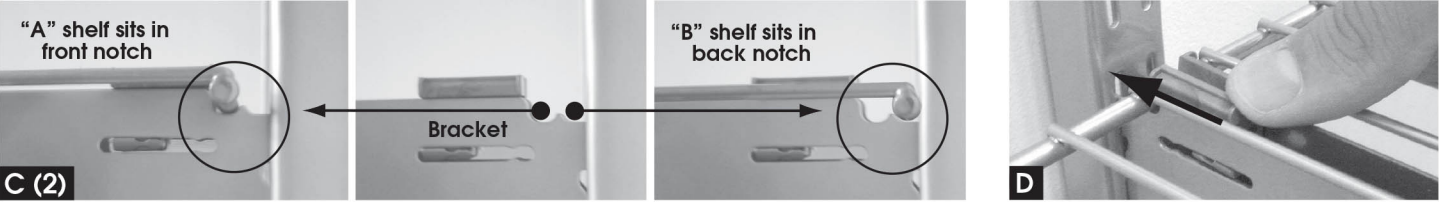


Place shelves onto brackets
Shelf labeled "A" sits in front notch of bracket. Shelf labeled "B" sits in back notch. Be sure each shelf slides back as far as possible before locking shelves into brackets. If overlapping three sections of shelving, use two "A" sections and one "B" section, placing "A" sections on the outside and spanning the gap with "B" sections. For four or more overlapping sections, continue alternating between "A" and "B" sections, placing "A" shelves on brackets before "B" shelves.

Secure shelves with bracket locks
After all shelves are positioned properly, lock shelves into brackets by sliding the plastic locking clip towards the back wall. It will "snap" into locked position.

► Hint: If shelves are installed in the incorrect notch, shelving weight capacity could be lessened.

6 Install Adjustable Clothes Rods

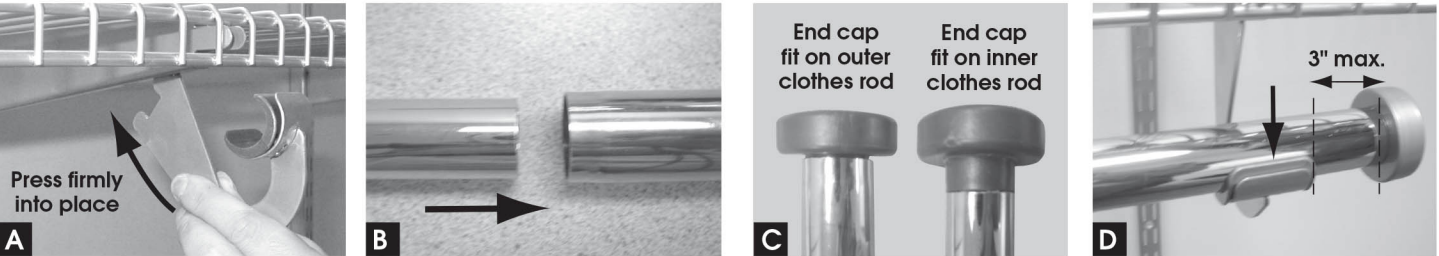

Install rod hanger
Install rod hanger into bottom of bracket by tilting it backward until it locks in place. **Note: be sure to press rod hangers firmly into place for proper installation.**

Adjust rod length
Rods can be used separately or telescoped together. 48" telescope up to 8' and 26" telescope up to 4'.

Add end caps
Place end caps on the end of each clothes rod. End caps will fit either diameter of rod (As shown above).

Secure rod and hanger
After expanding clothes rod to desired length, place into rodhangers and press down to snap into place. **Note: do not extend more than 3" past rod hangers.**

6-10 ft. Expandable Closet Kit


2J02

Rubbermaid® **FASTTRACK® CLOSET™**

newell
BRANDS

© 2018 Rubbermaid Incorporated, 8935 NorthPointe Executive Park Dr.
Huntersville, NC, 28078-1801 U.S.A. www.rubbermaid.com
1-888-895-2110 US | 1-866-595-0525

Tools Needed
for Installation

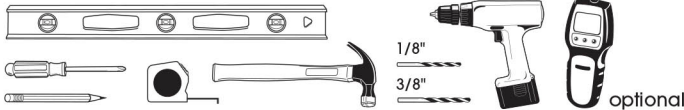

2062105/2062107


Please read through the instructions completely and check that you have all parts before beginning. Depending on the configuration you choose to install, you may not use all of the components.

Description	Part Number	Quantity	
48.25" Shelf (labeled A)	3G62	2	
48.25" Shelf (labeled B)	3J62	1	
26.25" Shelves (labeled A)	3G60	3	
26.25" Shelves (labeled B)	3J60	4	
47.5" Dual Ended Upright (Use Side B)	NWL0000689862-1/ NWL0000689862-2	6	
25" Dual Ended Upright Extension	2H63	3	
Upright Connector Clip	2066536/2066553	3	
Brackets	3G63	19	
48" Overlapping Hang Rails	3G67	1	
36" Overlapping Hang Rails	3G66	2	
Clothes Rod Hangers	3G68	10	
48" Inner Clothes Rod	3G76	1	
48" Outer Clothes Rod	3G77	1	
26" Inner Clothes Rod	3G72	1	
26" Outer Clothes Rod	3G73	1	
22.125" Rail Covers	10606_26	5	
Shoe Shelf Brackets	3F58	4	

The following parts are packed together in a hardware bag:


Screws	1603168	30	
0.5" Drywall Anchors	3J65	24	
Anchor Push Pin	3J66	1	
2" Rail Covers	3J55	2	
Clothes Rod End Caps	3G71	8	

1 Plan Your Layout

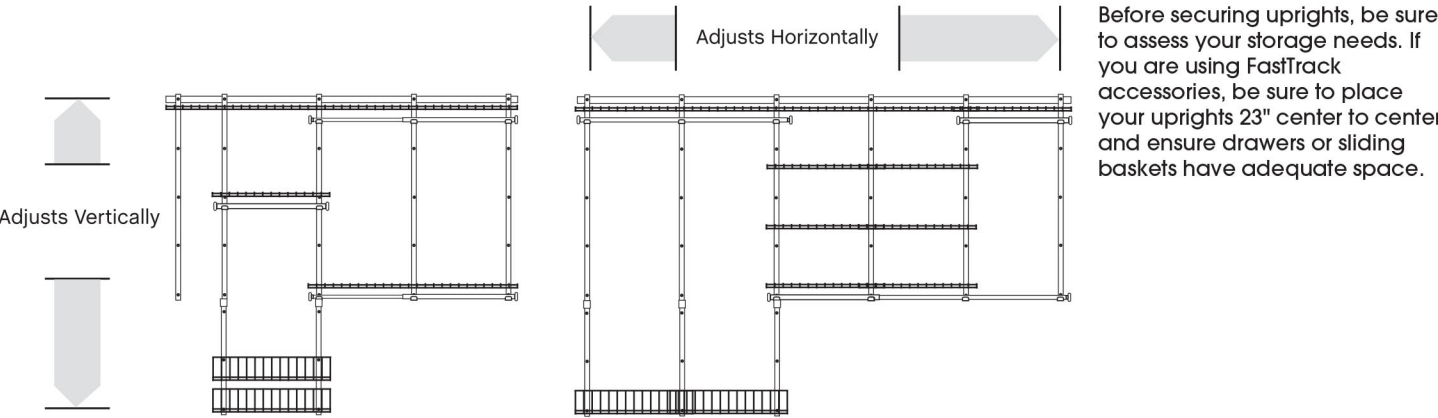

2 Mount Overlapping Hang Rails

NOTE: hang rail MUST be mounted to studs.
The drywall anchors are not designed to provide significant support to the closet system. They are only to be used to hold the uprights vertical and to hold the end of hang rail tight against the wall when rail overhang exceeds 4" (see step D1).

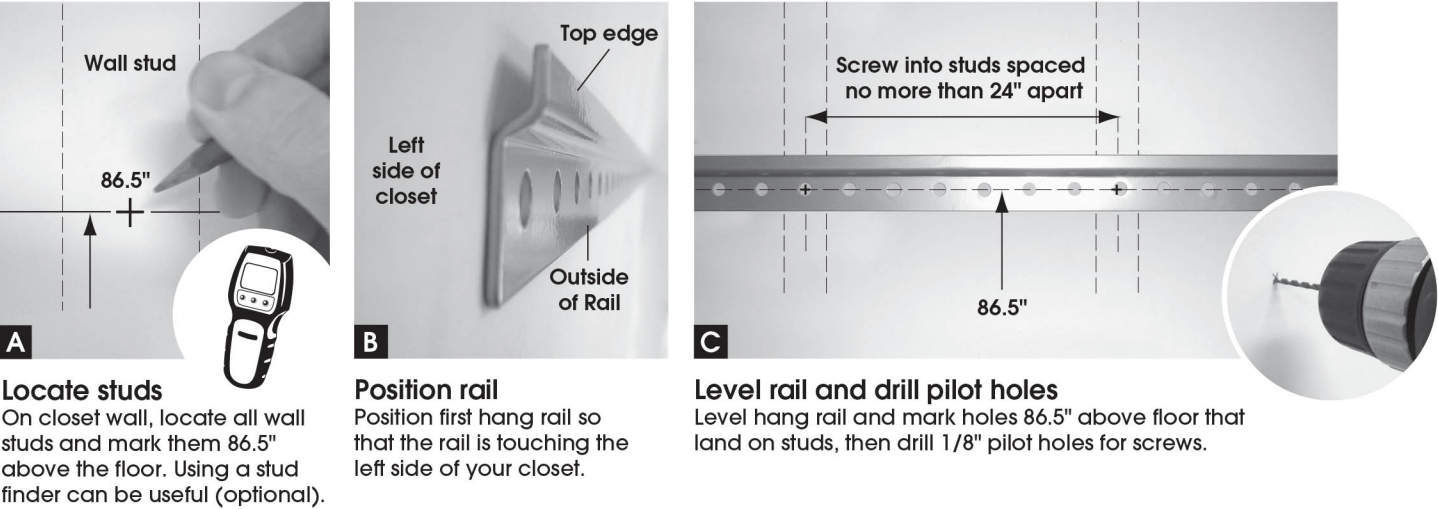


Locate studs
On closet wall, locate all wall studs and mark them 86.5" above the floor. Using a stud finder can be useful (optional).

Position rail
Position first hang rail so that the rail is touching the left side of your closet.

Level rail and drill pilot holes
Level hang rail and mark holes 86.5" above floor that land on studs, then drill 1/8" pilot holes for screws.

►Hint: Draw a pencil line across your 86.5" mark to identify screw placement and ensure that the line is level.

Secure left end of rail - rail overhang
If there is a stud within 4" from the wall, skip steps D (1) and D (2).

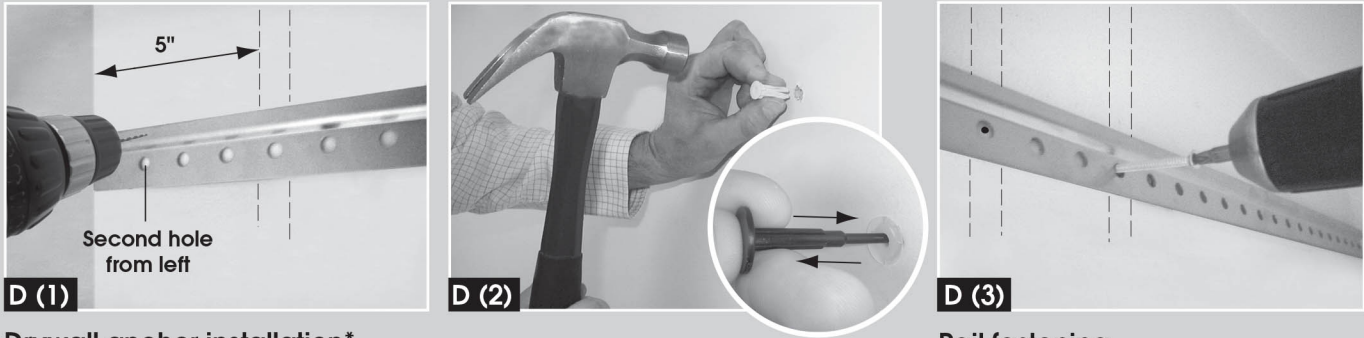

Drywall anchor installation*
Mark and drill a 3/8" hole (for a wall anchor) in the second hang rail hole from the left. To compress the anchor, fold the sides and bend. Hammer the wall anchor flush to wall in the drilled hole. Insert anchor push pin to engage anchor, then remove.

Rail fastening
Starting at left side, fasten the first two screws into studs. *Do not fasten remaining screws until after next step.* **Note: Screws need to be fastened through rail into each wall stud spaced no more than 24" apart.**

*Anchors for concrete, plaster or steel wall installation must be purchased separately.




Position second hang rail if closet space is wider than 4'
Slide second hang rail down behind the first from above.

Extend second hang rail
Slide second hang rail as far right to the wall as possible while still maintaining hole alignment. Repeat step C to secure to the wall. If there is not a stud within 4" of the RIGHT end of the hang rail, repeat the dry wall anchor installation step.

Secure second rail from right side
Install screws into studs along rails. Secure rail in all studs.

3 Hang Uprights

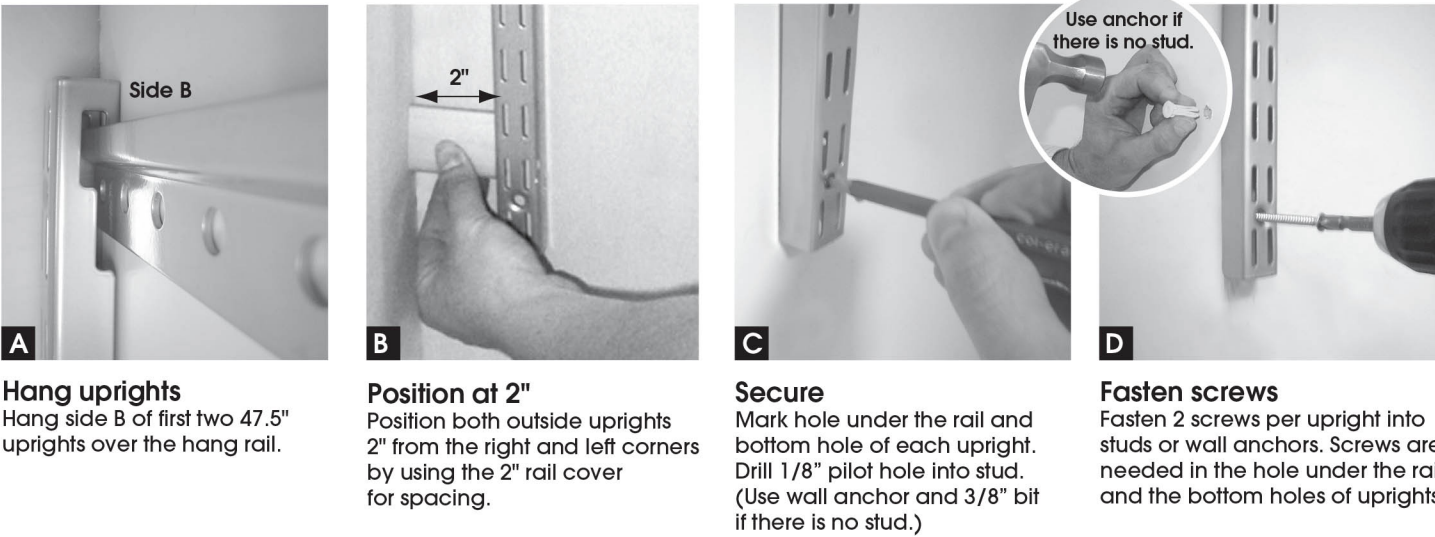


Hang uprights
Hang side B of first two 47.5" uprights over the hang rail.

Position at 2"
Position both outside uprights 2" from the right and left corners by using the 2" rail cover for spacing.

Secure
Mark hole under the rail and bottom hole of each upright. Drill 1/8" pilot hole into stud. (Use wall anchor and 3/8" bit if there is no stud.)

Fasten screws
Fasten 2 screws per upright into studs or wall anchors. Screws are needed in the hole under the rail and the bottom holes of uprights.

►Hint: If the left side of closet is more accessible, space the remaining uprights from left to right. If the right side of the closet is more accessible, space the remaining uprights from right to left.

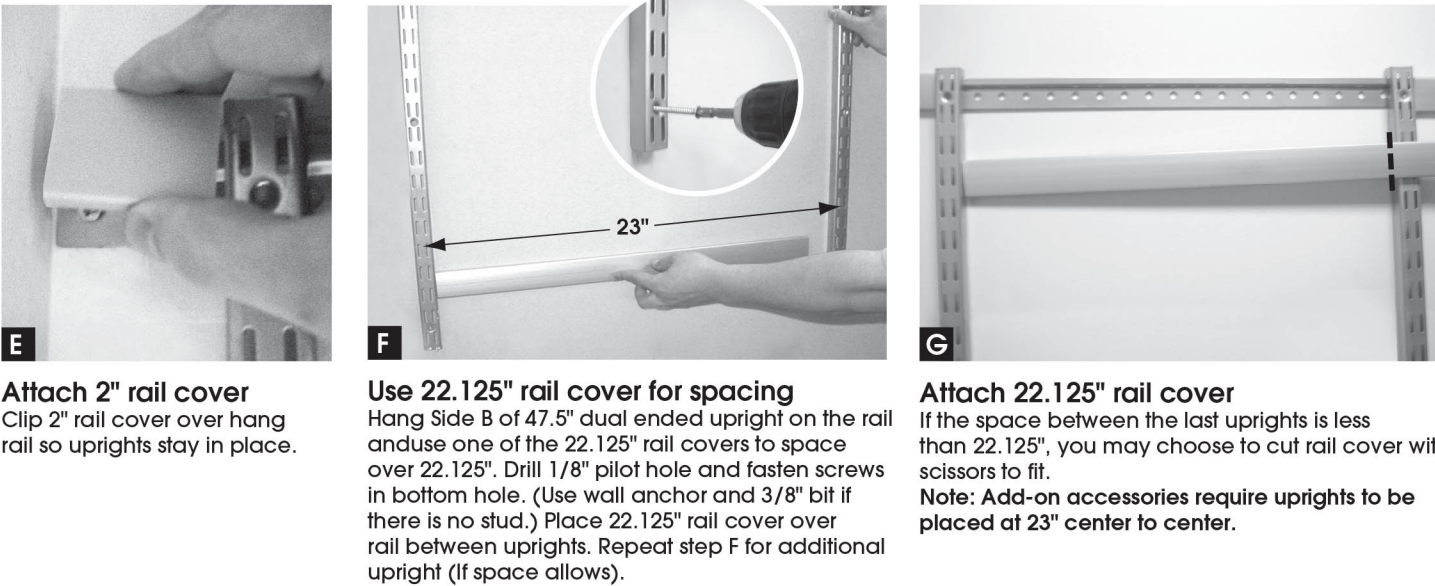

Attach 2" rail cover
Clip 2" rail cover over hang rail so uprights stay in place.

Use 22.125" rail cover for spacing
Hang Side B of 47.5" dual ended upright on the rail and use one of the 22.125" rail covers to space over 22.125". Drill 1/8" pilot hole and fasten screws in bottom hole. (Use wall anchor and 3/8" bit if there is no stud.) Place 22.125" rail cover over rail between uprights. Repeat step F for additional upright (If space allows).

Attach 22.125" rail cover
If the space between the last uprights is less than 22.125", you may choose to cut rail cover with scissors to fit. **Note: Add-on accessories require uprights to be placed at 23" center to center.**

►Hint: Determine the placement of your shelves and hang rails. Start from the top and work your way down to ensure that you have enough room.