


INSTRUCCIONES PARA LA INSTALACIÓN DEL SOPORTE

Contenido:
2 Sujetadores

Herramienta necesaria:

Cinta de medir, lápiz, taladro y brocas, desarmador de cruz y nivel.



Cinta de medir



lápiz




taladro y
brocas



desarmador
Phillips (cruz)



nivel

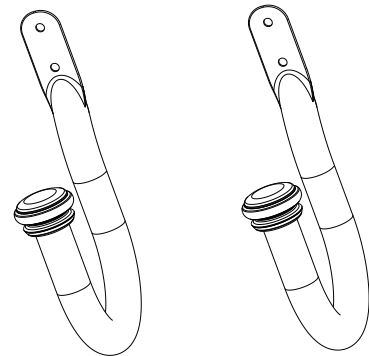

INSTALACIÓN DEL SOPORTE

PASO 1.

Coloque los soportes en la pared en la ubicación deseada y marca los agujeros. Utilice la cinta de medir y el nivel para asegurar que los agujeros estén alineados horizontalmente.

PASO 2A. (PARA INSTALAR EN TABLAROCA O PANEL)


Pre-taladre dos agujeros piloto (con broca de 1/4") para cada soporte. Inserte anclas a la pared e inserte los tornillos a las anclas.

PASO 2B. (PARA INSTALAR EN MADERA)


Si se monta directamente en madera, pre-taladre dos agujeros piloto (con broca de 1/4") para cada soporte e instale el soporte en la pared con los tornillos incluidos.

PASO 3.


Pliegue la cortina por atrás del sujetador para terminar.

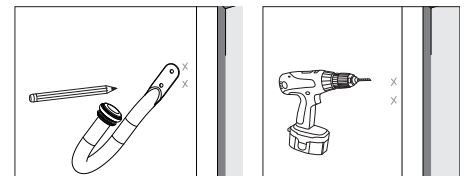


1

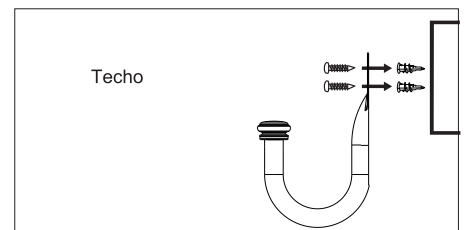

2A

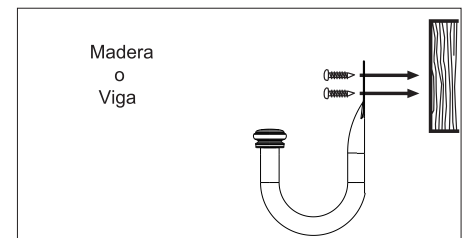

2B

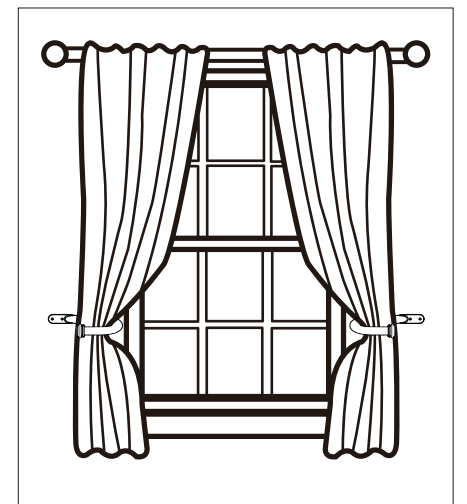

3

Instrucciones de limpieza:


Limpie suavemente con un trapo el polvo o suciedad que tenga el producto. No utilice limpiadores abrasivos ya que podrían dañar la superficie del producto.

USER CARE & INSTALLATION GUIDE

Package Contents:
2 Holdbacks

Tools needed:

Tape Measure, Pencil, Drill & Bit Set, Philips head
Screwdriver, Level

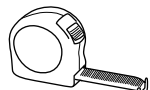

Tape Measure



Pencil




Drill & Bit Set



Philipshead
Screwdriver



Level

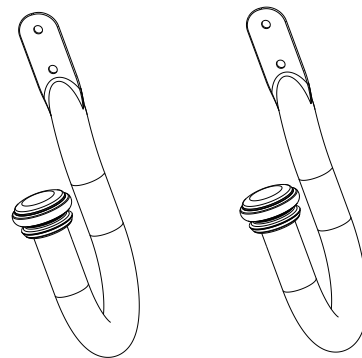

BRACKET INSTALLATION

STEP 1.

Place brackets against wall at desired locations and mark screw holes. Use tape measure and level to make sure marked screw holes are horizontal to each other.

STEP 2A. (FOR MOUNTING TO DRYWALL OR PANELING)


Pre-drill two pilot holes for each bracket (1/4" drill bit) and insert anchors into wall and insert screws into wall anchors.

STEP 2B. (FOR MOUNTING TO WOOD OR STUDS)


If mounting directly into wood or studs, pre-drill two pilot holes for each bracket (1/4" drill bit) and install bracket on the wall with screws provided.

STEP 3.


Tuck drapery panel behind holdback to complete window treatment.

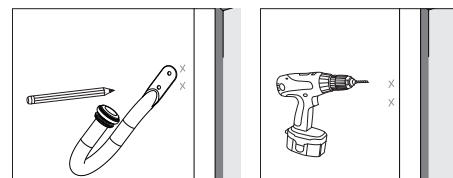


1

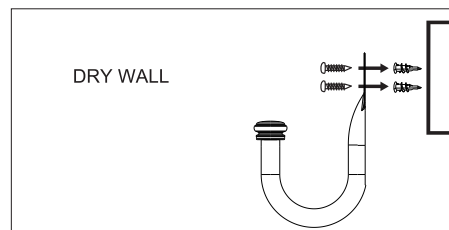

2A

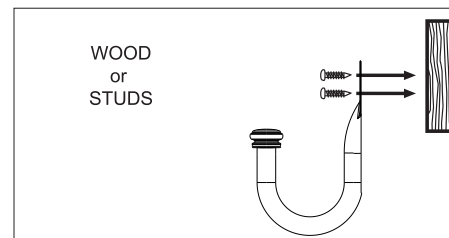

2B

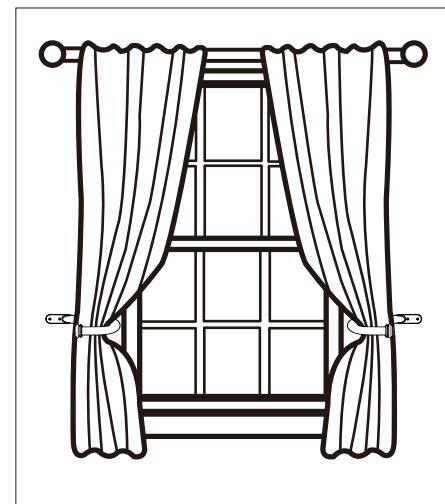

3

Care Instruction:

Wipe gently with cloth to clean any sand, dirt, or dust on product.
Do not use abrasive cleaners as they may damage the surface finish.