



Technical Support and E-Warranty Certificate www.vevor.com/support

TRUCK BED EXTENDER

MODEL:TZJ-01-01/TZJ-01-02

We continue to be committed to provide you tools with competitive price.

"Save Half", "Half Price" or any other similar expressions used by us only represents an estimate of savings you might benefit from buying certain tools with us compared to the major top brands and does not necessarily mean to cover all categories of tools offered by us. You are kindly reminded to verify carefully when you are placing an order with us if you are actually saving half in comparison with the top major brands.

VEVOR[®]

TOUGH TOOLS, HALF PRICE

TRUCK BED EXTENDER

MODEL:TZJ-01-01/TZJ-01-02



NEED HELP? CONTACT US!

Have product questions? Need technical support? Please feel free to contact us:



CustomerService@vevor.com

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.



Warning-To reduce the risk of injury, user must read instructions manual carefully.


SAVE THIS MANUAL

Model	TZJ-01-01/TZJ-01-02
Range	51.6~64 in (TZJ-01-01) /55.5~68in (TZJ-01-02)
Net weight	6kg(TZJ-01-01) / 6.2kg(TZJ-01-02)
Material	Aluminum,Plastic
Color	Black
Fitment(TZJ-01-01)	Ridgeline,Tacoma,Gladiator,Colorado/Canyon,Frontier,ranger
Fitment(TZJ-01-02)	Ford SuperDuty,F150,Dodge Ram 1500/2500/3500,Toyota Tundra,Nissan Titan,Chevrolet Silverado,GMC Sierra

ASSEMBLY PREPARATION

When unpacking this product, check to make sure parts listed below are included and carefully inspect for any damage that may have occurred during transit. If any part is missing and damaged, do not attempt to assemble or use the product.

PARTS LIST

NO	PICTURE	PART NUMBER	QTY		NO	PICTURE	PART NUMBER	QTY
1		Bumper Upright Assembly	2		10		Hex key	1
2		Strap Buckle Assembly	2		11		Bumper	2
3		Pivot Upright Assembly	2		12		Hex Nut M6	2
4		Quick Mount Bracket set	2		13		Lock nut M6	8
5		Straight Tube	3		14		Bit φ4.2	1
6		Bent Tube	6		15		Strap Latch Insert φ15	2
7		Phillips Head Screw M5*20	8		16		Strap Latch Insert φ11	2
8		Phillips Head Self-tapping Screw 5*16	20		17		Drilling template	1
9		Hexagon socket head cap screw M5*40	2		18		Bracket	2

PRODUCT ASSEMBLY EXPLODED


TOOLS REQUIRED

Phillips screw driver

Torx T-25 driver

Power drill

9/64" drill bit

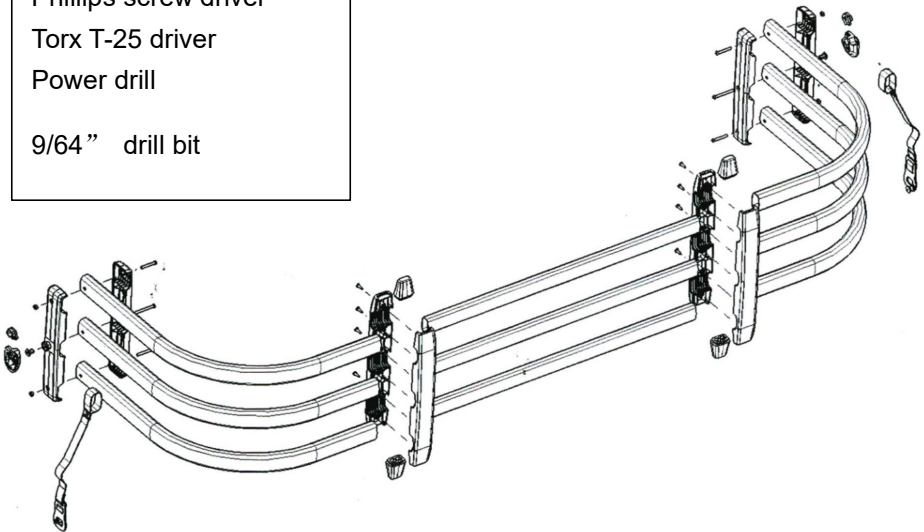

1. Assembly Procedures


1



Disassemble Part ② with supplied Hex Key "

X2

2




Assemble Part ③ and ⑥ with supplied Hex Key "

tighten all screws.

NOTE: Make sure pivot at outside after assembly as picture shown.

3

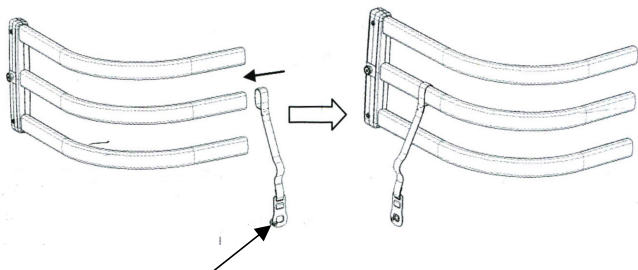

Put on Part 2 Strap Buckle
Assembly on the middle
tube.


X2

NOTE: Make sure the Strap Latch Insert towards inside

after assembly as picture shown.




4

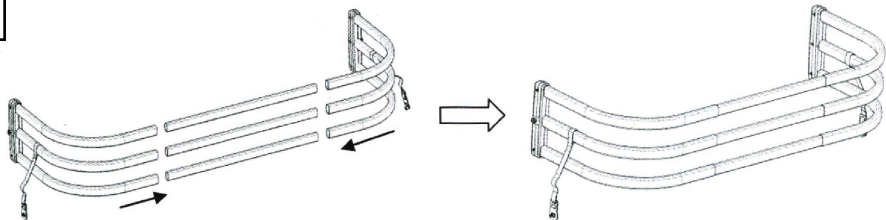

Apply Part ⑤ straight tubes to 2 of the assembly from Procedure-3.


2. Installation Procedures

5

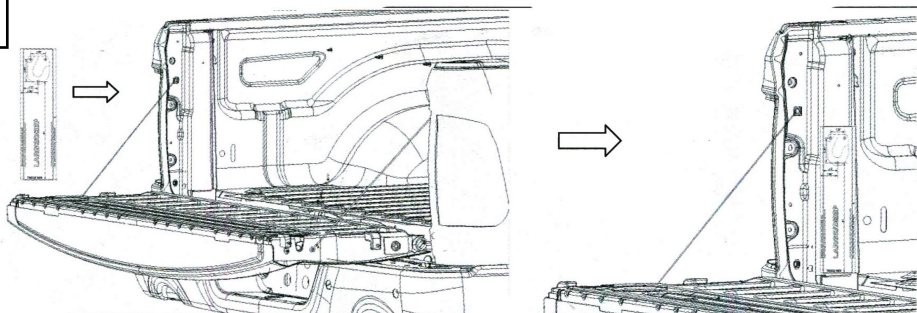


Adjust and place drilling template at tailgate D-pillar and mark the 3 screw holes with marker on both sides

6

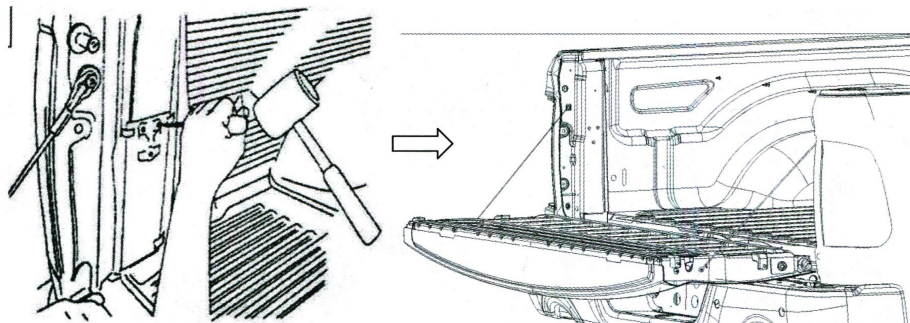


Use center punch to mark screw holes for preparation of drilling.

7

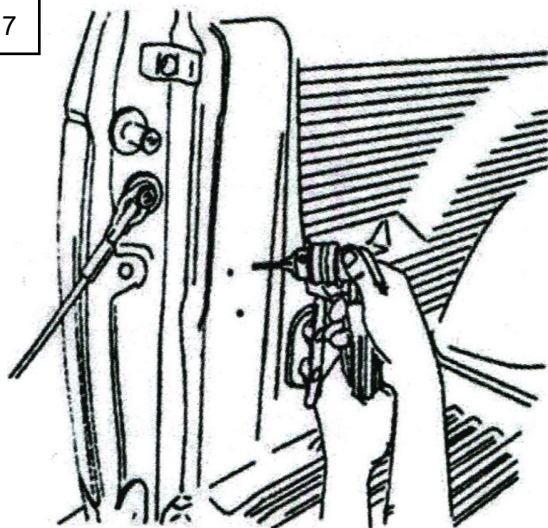

Use a power drill and 9/64" drill bit, drill through the sheet metal. If equipped a bed liner, drill through bed liner as well.

8

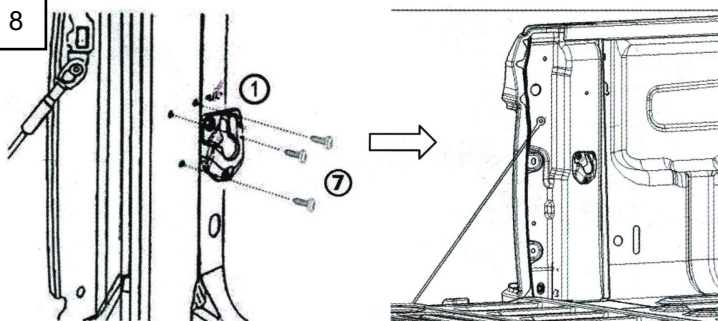



Fasten Bracket ⑧ with Screw ④ by using Phillips screw





Tips: The black U-shaped frame is an optional accessory. If the width of the carriage is not on the same horizontal line as the tailgate, it needs to be installed (as shown in the figure). If the width of the carriage is on the same horizontal line as the tailgate, it does not need to be installed.


9

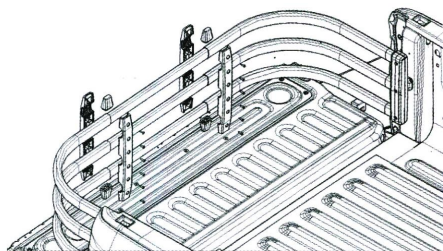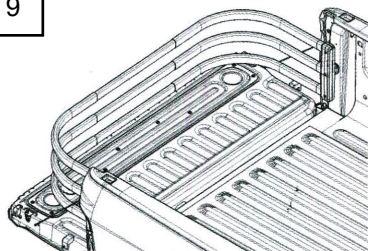

Adjust the width of bed extender to fit preinstalled Quick Mount Bracket, Use


Phillips screw driver "to fasten Part ①".

10

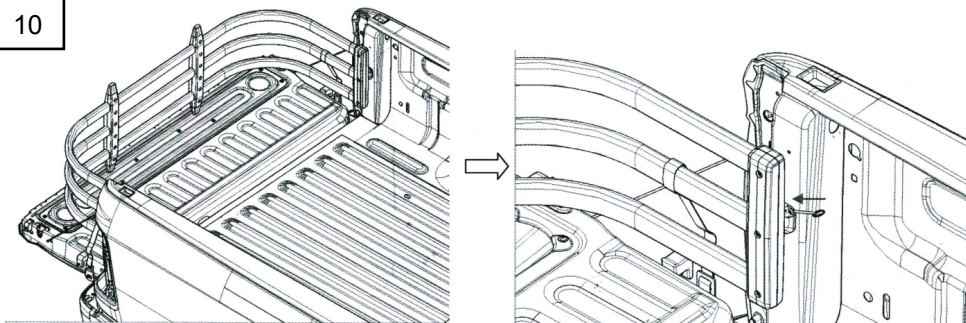


Insert “” into Quick Mount Bracket, and put “” back on brackets

11


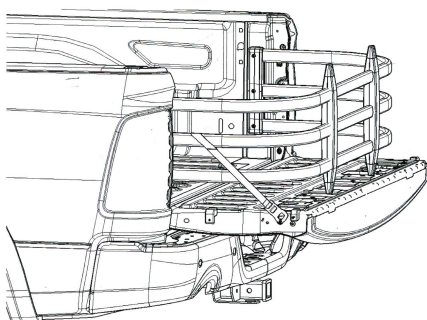



Adjust Strap Buckles to lock into the tailgate when Bed Extender is deployed.
Your assembly is now complete.

Strap Latch Insert supplied in 3 diameter sizes, you can choose to properly fit your tailgate latch.

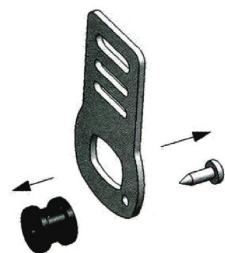

Remove the Screw with a Philips
Head driver.

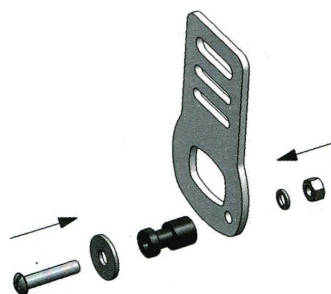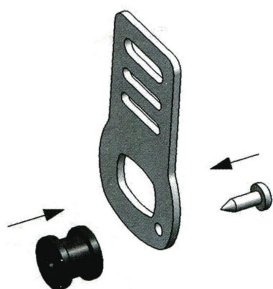

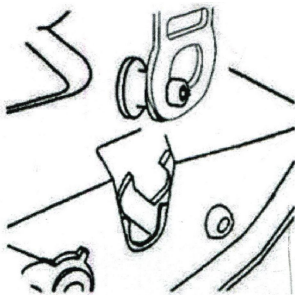

When the Bed Extender is at the furthest rear position. Push down on the buckle to insert into tailgate latch. Tighten straps. To release, pull tailgate handle.

NOTE: Ensure that buckles are properly inserted into latches by pulling on the straps after both buckles have been inserted.

BED EXTENDER OPERATION

- With the tailgate open, place Bed Extender pivot pins into the left and right mounting brackets. Rotate to 45 until it drops into place, then lower onto the open tailgate.
- Flip Bed Extender out to contain cargo in the truck bed when the tailgate is open. **CUTION:** 200lb maximum load on open tailgate. Always distribute cargo evenly and properly secure inside bed. Do not secure cargo to the Bed Extender or the tailgate.
- Before driving, secure Bed Extender by locking the provided strap buckles into the truck's tailgate latches. To release, pull tailgate handle. **NOTE:** Ensure that both buckles are properly locked into the latches by pulling up on each strap.
- Flip Bed Extender forward and close the tailgate to keep smaller cargo safe and organized.

VEVOR[®]

TOUGH TOOLS, HALF PRICE

Technical Support and E-Warranty Certificate

www.vevor.com/support