


QUEEN BED

Assembly Manual

KJW.B007

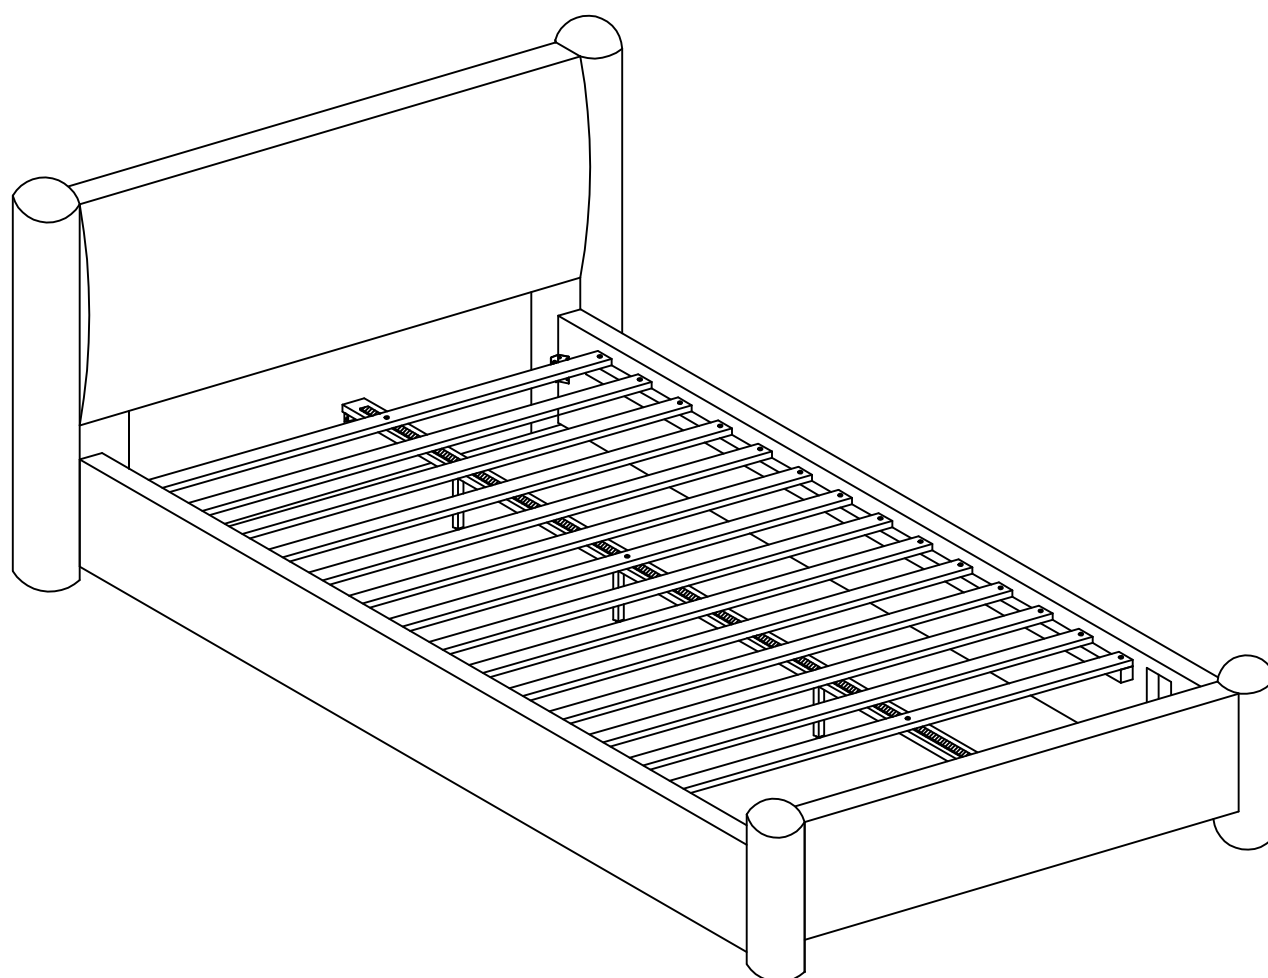

 CAUTION

THIS ASSEMBLY MANUAL CONTAINS IMPORTANT SAFETY INFORMATION.
PLEASE READ AND KEEP FOR FUTURE REFERENCE.

ASSEMBLY INSTRUCTIONS

Read these instructions carefully and keep for future reference. Refer to parts inventory for guidance, and ensure you have all pieces before starting.


When assembling, place all parts on a soft, clean, and flat surface such as a carpet to prevent scratches.




Structural integrity is only guaranteed if all bolts are installed and properly tightened.




TIME

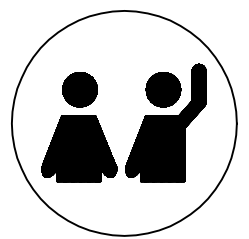












2 OF PEOPLE

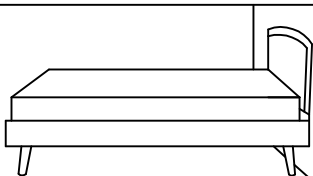

PLACE THE HEADBOARD AGAINST THE
WALL

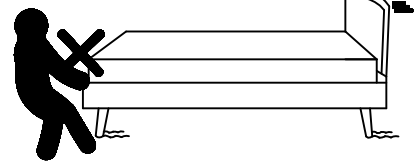

DO NOT DRAG BED, ALWAYS LIFT WITH
AT LEAST TWO PEOPLE BEFORE MOVING

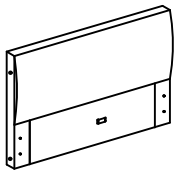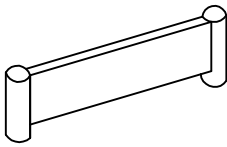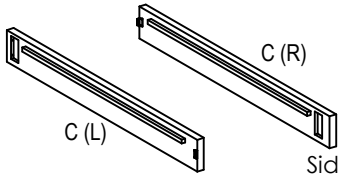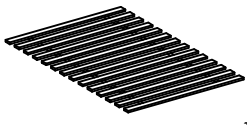A x 1  Headboard	B x 1  Footboard	C x 2  C (L) C (R) Side Rail
D x 2  Side Wing	E x 1  Center Rail	F x 3  Support Legs
G x 1  14 pcs Slat	H x 3  Big Adjuster	I x 1  M5 Allen Key
J x 1  M4 Allen Key	K x 2  CSK M4 x 25	L x 31  CSK M4 x 32
M x 8  M6 Spring Washer	N x 8  M6 Flat Washer	O x 4  JCBB M8 x 20
P x 3  JCBB M8 x 40	Q x 8  JCBC M6 x 60	R x 7  Carpet Pad (Optional)
No Included  Phillips Head Screwdriver		

Please read through the instructions below to familiarize yourself with the parts and steps before assembly.


Before you begin:

1. Check if you have received all parts using the diagram on this page. Do not start the assembly process until all parts are present.

2. Do not discard any of the packaging until you are certain that you have all the necessary parts for the assembly.


ASSEMBLY INSTRUCTIONS

- 1 Please lay all parts on a soft and smooth surface to assemble.

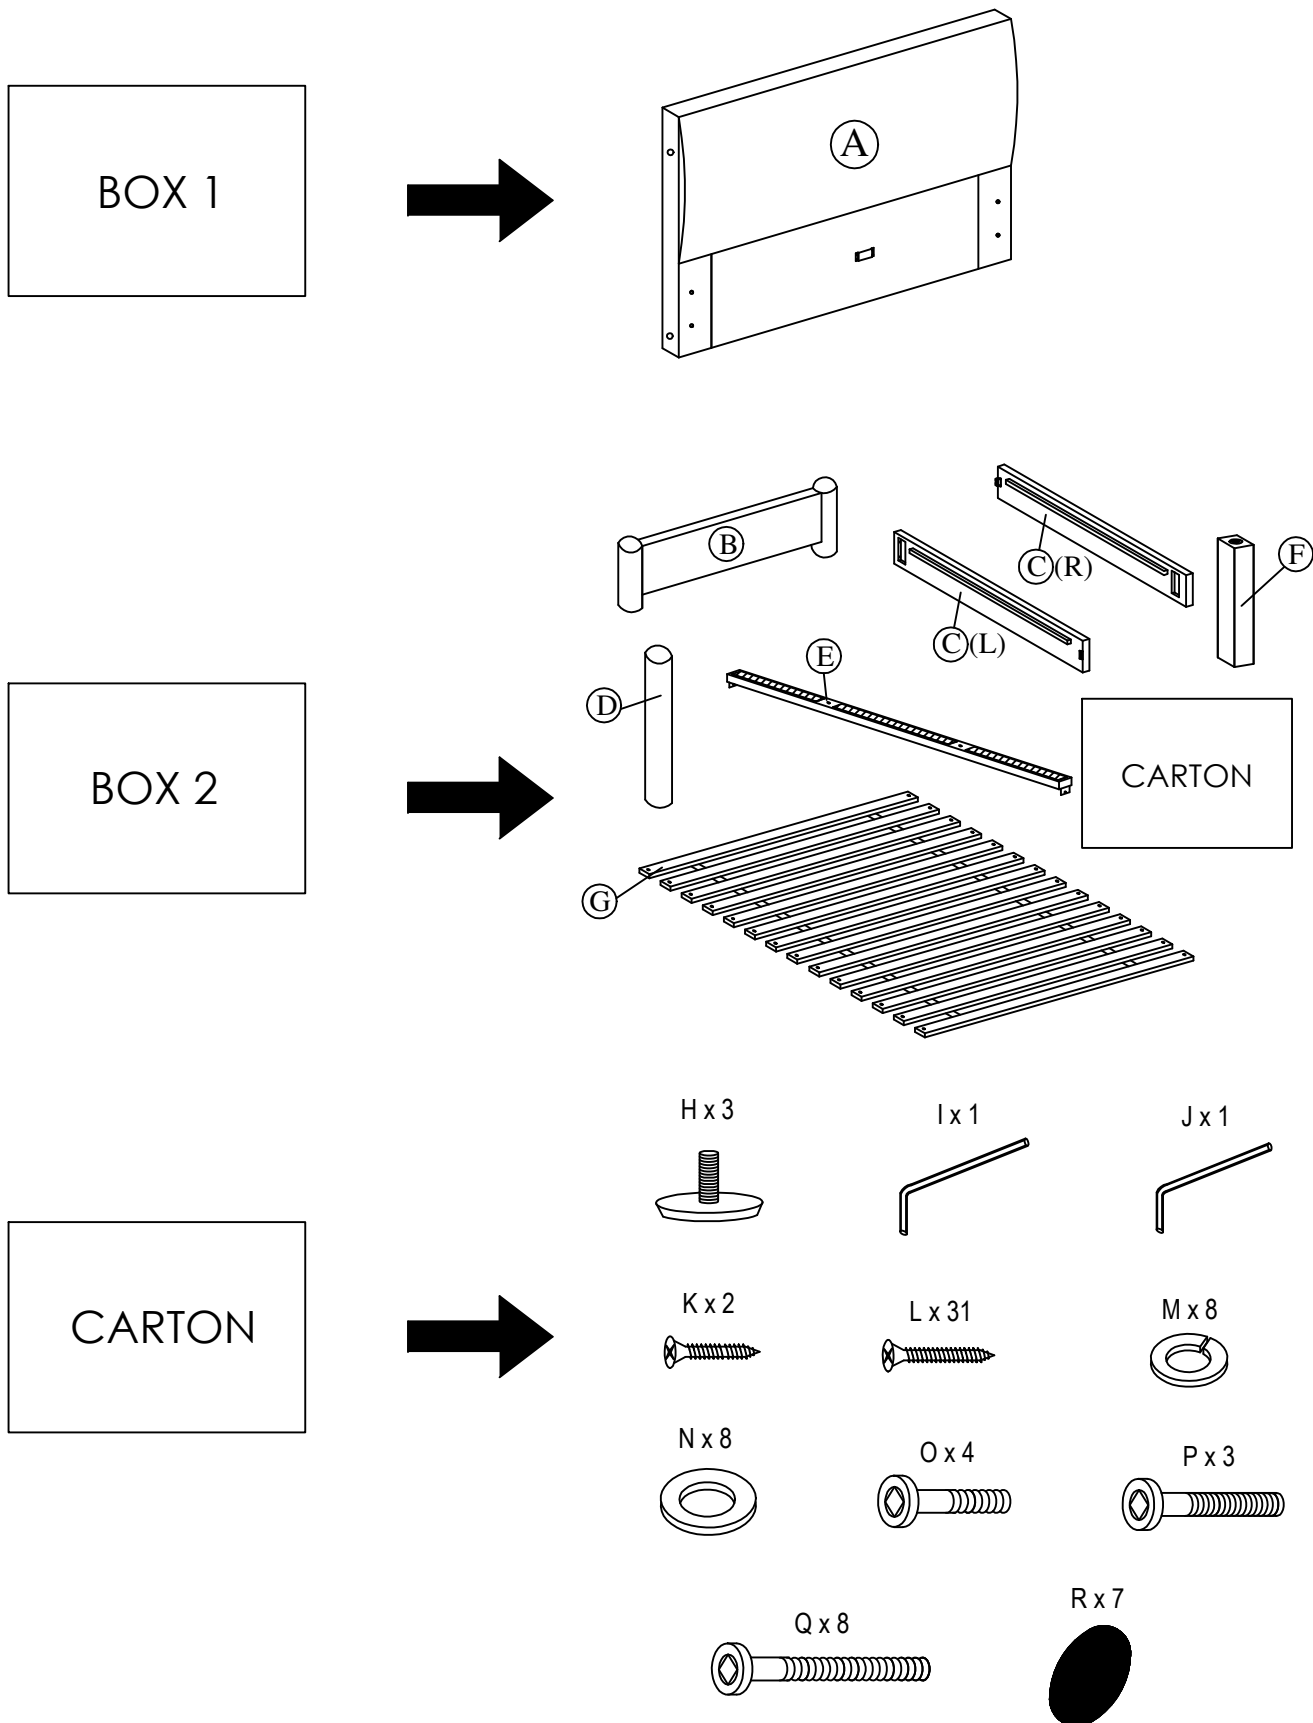


ASSEMBLY INSTRUCTIONS


- 2** Attach Side Wing (D) to Headboard (A), using M6 Flat Washer (N), M6 Spring Washer (M), JCBC M6 x 60 (Q), and M4 Allen Key (J). Tighten the legs.

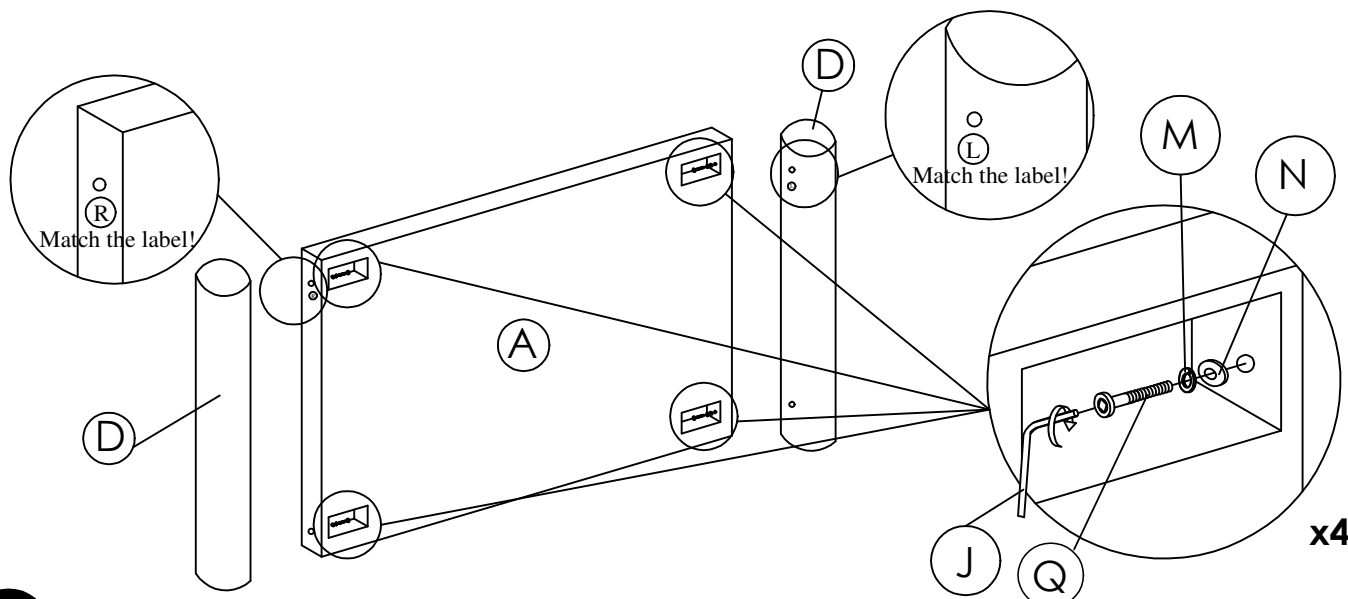


- 3** Attach Side Rails (C) to Footboard (B), using M6 Flat Washer (N), M6 Spring Washer (M), JCBC M6 x 60 (Q), and M4 Allen Key (J). Tighten the screws.

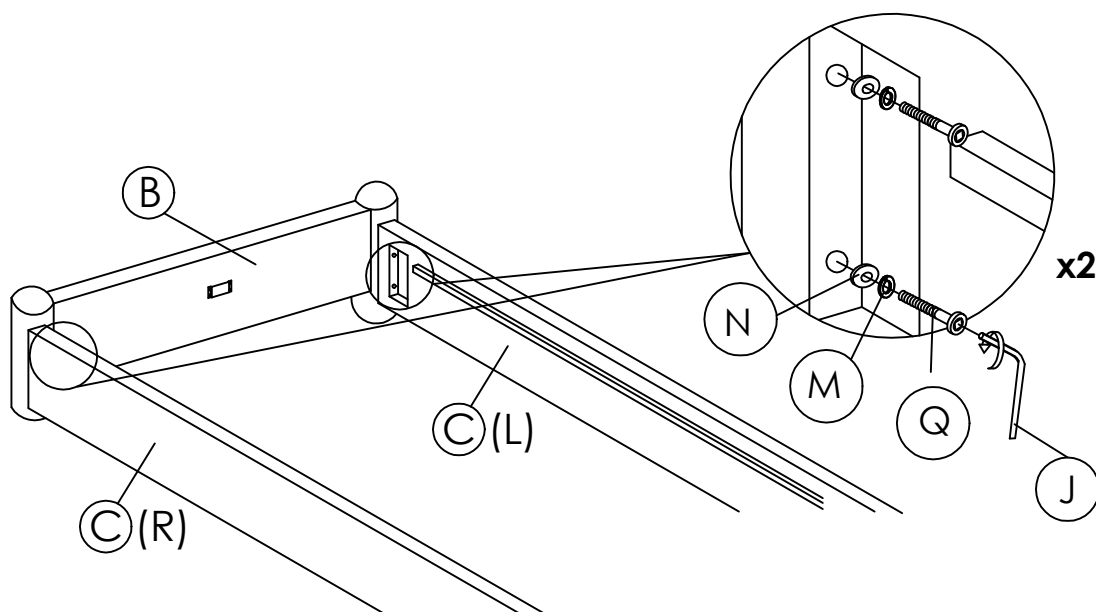


- 4** Attach Side Rail (C) to Headboard (A) by using JCBB M8 x 20 (O), and M5 Allen Key (I). **Do not tighten (O) completely until STEP 7.** Then, pushing the bracket down to fit it.

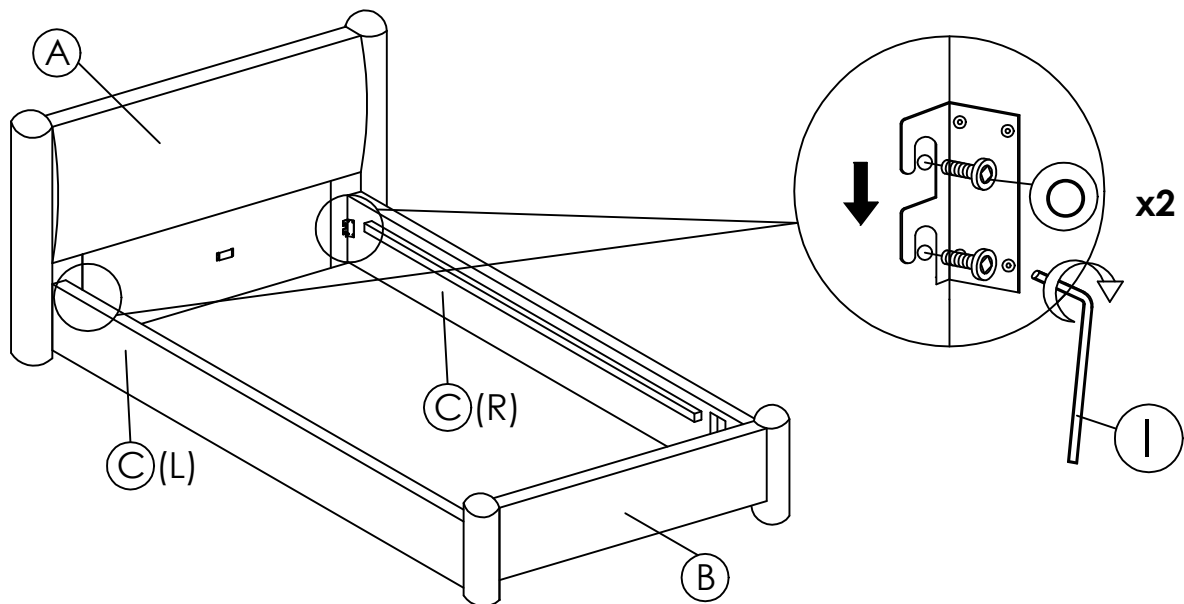


- 5** Attach the Support Legs (F) to the Center Rail (E) of the bed using JCBB M8 x 40 (P), and M5 Allen Key (I) as shown. Fully tighten.

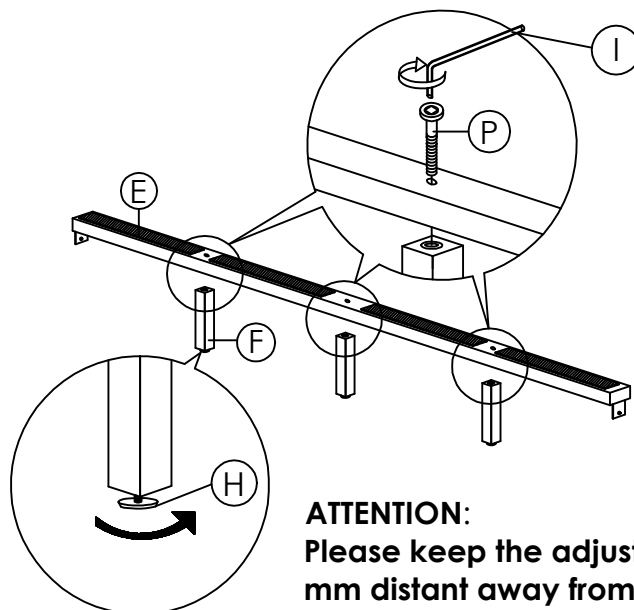


- 6** Slide the Center Rail (E) to the Headboard (A) and Footboard (B). Tighten screws (K) using screw driver (not included) to the Headboard (A) and Footboard (B).

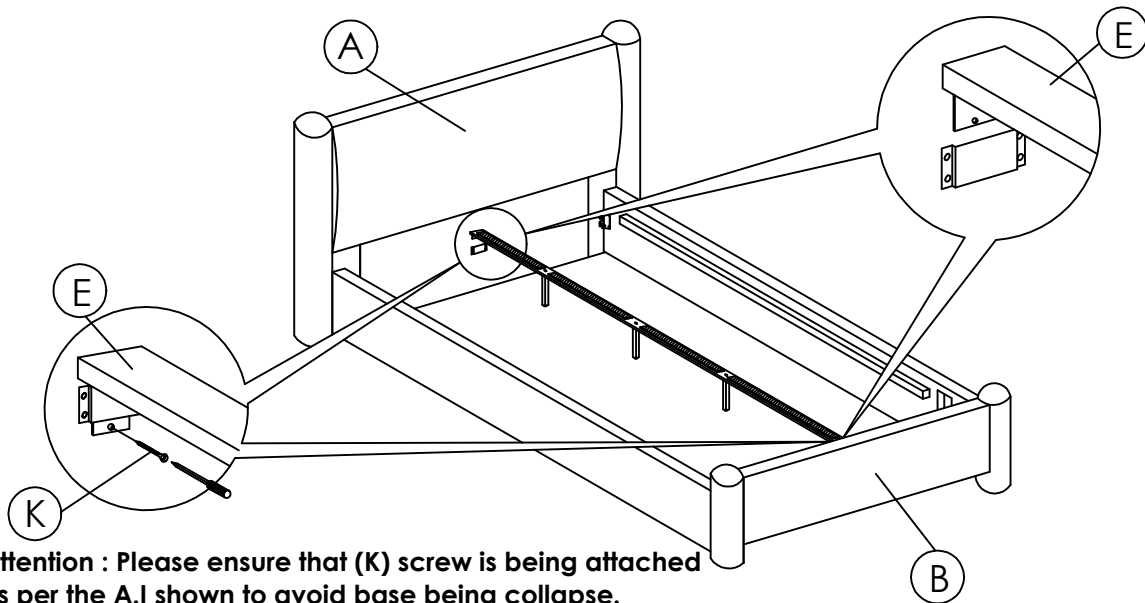

- 7** Affix the Slat (G) to the side rail support wood and the center rail (E). Tighten CSK M4 x 32 (L) using screw driver (not included) to the side rail support wood and center rail (E).

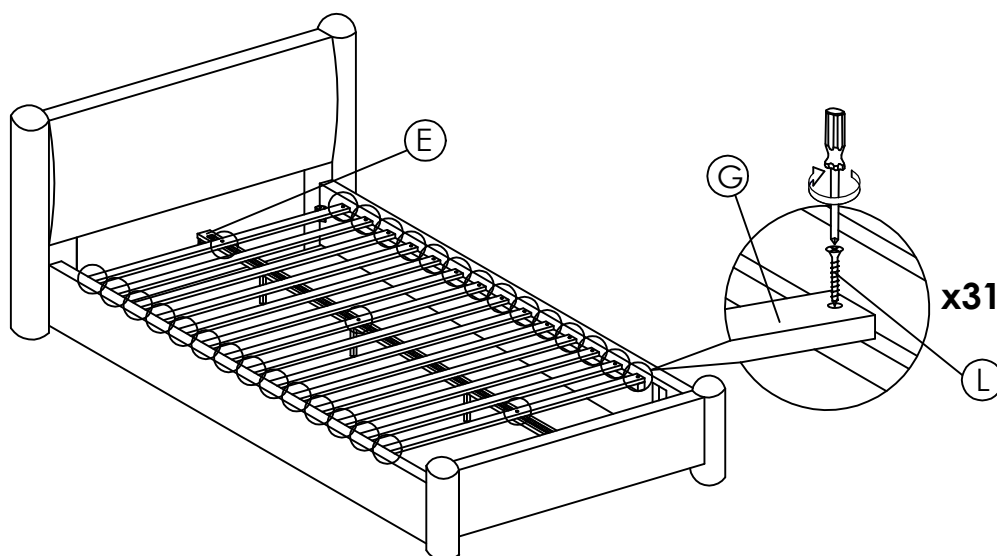

- 8** Tighten all the 4 corner using M5 Allen Key (I). Assembly is Complete.

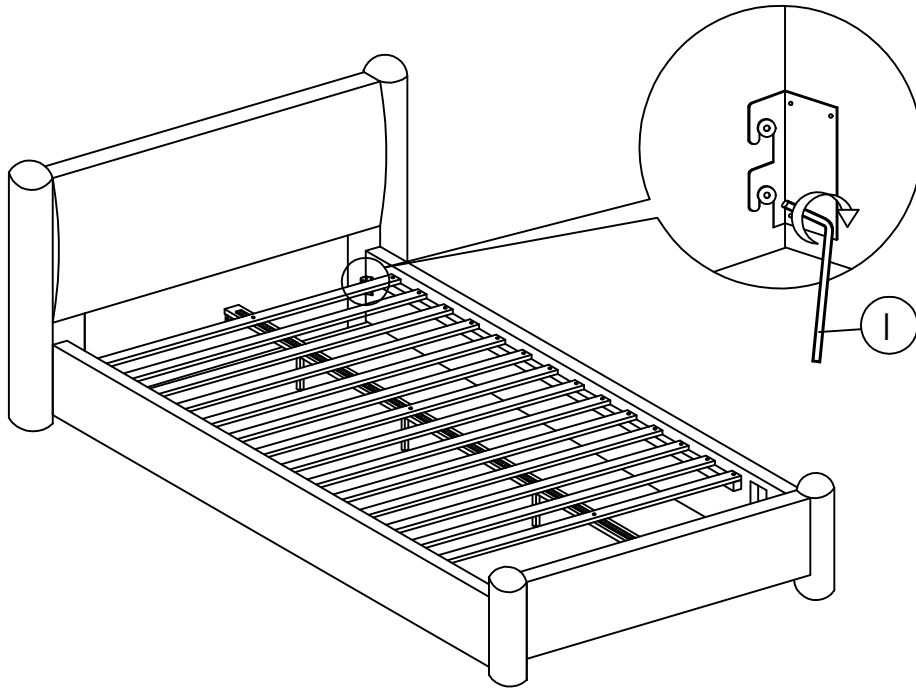

Design Exquisite Furniture For Your Home

PRODUCT WARRANTY

- 1-year limited on cover against splitting, peeling, and/or tearing.
- 1-year limited on internal and external frame structure.

Contact us:

We make all efforts to guarantee that the products you receive are in excellent condition. If there are any parts missing or damaged, the Customer Service Team will be happy to provide free replacements for you. We have professional warehouses where the current inventory of parts is enough so that they will arrive in your hands as fast as possible.

Assistance with assembly or product details is available; don't hesitate to get in touch with us to get priority service.

Our E-mail address: CS.furniture@outlook.com.



CS.furniture@outlook.com.