



CONTACT YOUR LOCAL POST OFFICE BEFORE INSTALLING THE MAILBOX TO ENSURE ITS CORRECT PLACEMENT AND HEIGHT AT THE STREET. GENERALLY, MAILBOXES ARE INSTALLED AT A HEIGHT OF 41-45 INCHES FROM THE ROAD SURFACE TO INSIDE FLOOR OF THE MAILBOX OR POINT OF MAIL ENTRY (LOCKED DESIGNS) AND ARE SET BACK 6-8 INCHES FROM THE FRONT FACE OF CURB OR ROAD EDGE TO THE MAILBOX DOOR.

Hardware (included)

To join the two post pieces:



x 3, large sheet metal screws

To attach the mounting plate to the post:



x 4, small hex bolts




x 8, small washers



x 4, small nuts

To attach the mailbox to the top plate (using side mount holes):

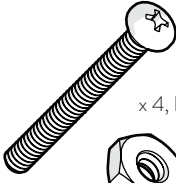

x 4, long pan head screws



x 4, small hex nuts



x 4, spacers (if needed)

To attach the mailbox to the plate:



x 4, large hex bolts



x 4, large nuts


To join the two decorative covers:




x 4, small Phillips screws

Tools (not included)


Two Wrenches




- or -




One Phillips Screwdriver




- 1a** Lay post pieces on a flat surface, making sure to align the screw holes.




- 1b** Join the two post pieces together using the 3 sheet metal screws.





 DO NOT overtighten. Tighten only until snug.

- 2** Carefully slide the plastic bracket over the top post and let it rest on the heads of the sheet metal screws.

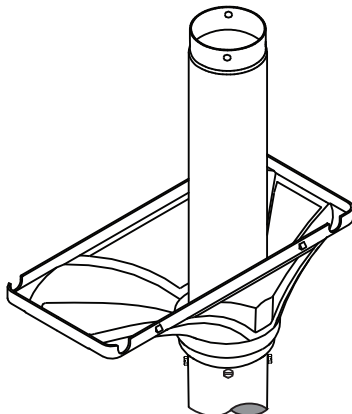


- 3** Attach the mounting plate to the post using the 4 small hex bolts, nuts and 8 small washers.

Insert the bolt and one washer through inside of the post and secure with another washer and nut from the outside.

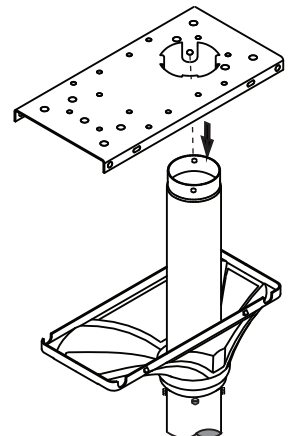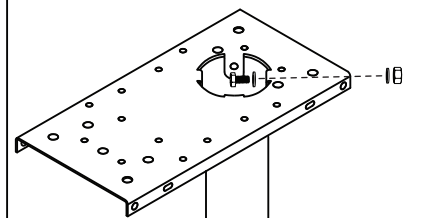


- 4** Install the assembled post into the ground. Ensure that the mounting plate is facing toward the street before installing into the ground.

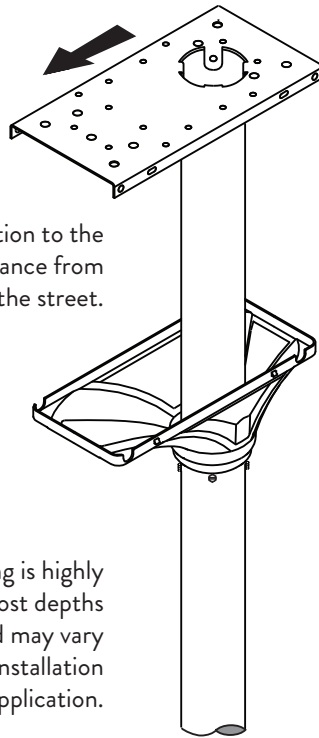

Pay particular attention to the location, height, and distance from the street.

A concrete footing is highly recommended. Typical post depths range from 12"-18" and may vary based on your installation application.

- 5** Attach the mailbox to the mounting plate using your chosen method.

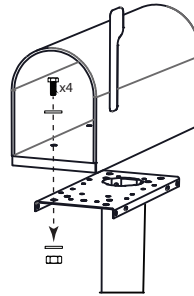


If your mailbox has mounting holes in the floor ...

Use the 4 large hex bolts, 8 large washers, and 4 large nuts to attach your mailbox to the adapter.


Some mailboxes have both styles of mounting holes - choose what suits you best.

If your mailbox has mounting holes on the side ...


Use the 4 long pan head screws and 4 small hex nuts to attach your mailbox to the adapter. Additional hardware (not included) may be required for extra large mailboxes.

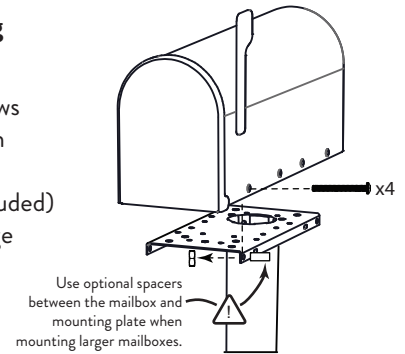

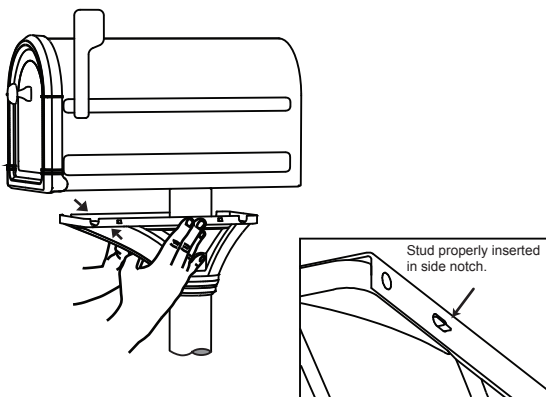

- 6** Once the mailbox is mounted, carefully push the plastic bracket up into the mailbox plate. Press the sides of the bracket inward making sure the four studs snap into the rectangular notches on the sides of the mounting plate as shown below.

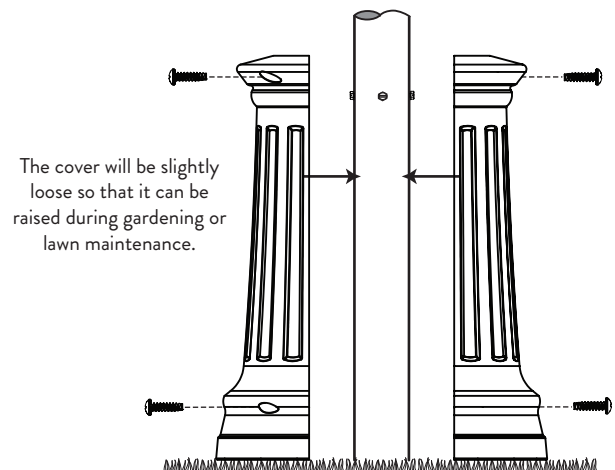

- 7** Attach the two halves of the decorative post cover to each other around the post using the 4 small Phillips screws.



Questions, Comments, Concerns?

 www.architecturalmailboxes.com
 support@architecturalmailboxes.com

Find us on social media!

  
@archmailboxes