


USE AND CARE MANUAL WOOD PLANKS

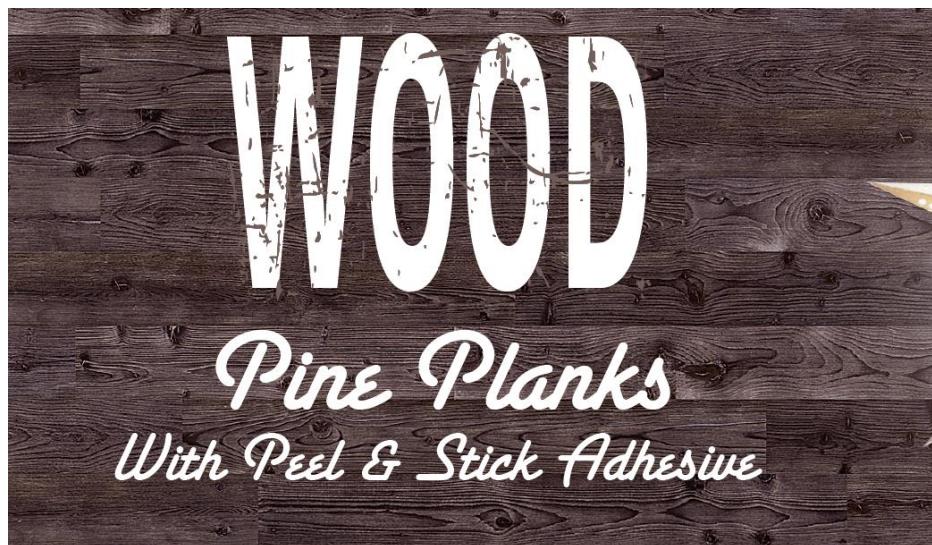

- Installation steps may vary according to the desired look. Systematically plan the layout, design, and the amount of wood necessary to complete the wall before beginning installation.
- Self-adhesive wood wall planks adhere to several surfaces such as plasterboard (unpainted, primed or painted), concrete, plywood, or plaster walls. Ensure that the surface to be covered is clean, dry, and smooth. Uneven areas must be adjusted. Clean the wall with a dry cloth, but do not use any cleaning products as they may affect the effectiveness of the adhesive strips.
- If the wall is freshly painted, wait until it is completely dry. We recommended a 72-hour waiting period.
- All electrical outlets and switch plates should be removed.

Do not apply water to the surface. Use a hardwood cleaner or a soft, dry brush.