


DOOR BOTTOM

U-Shaped

Installation:

1. Measure width of door.
2. Shorten door bottom if needed.
3. Place pieces on both sides of the door, with the holes on the inside of the door. Snap pieces together. (Sturdy vinyl sections snap together securely.)
4. Adjust so the insert rests on the threshold.
5. Mark hole locations, then drill and screw into place.

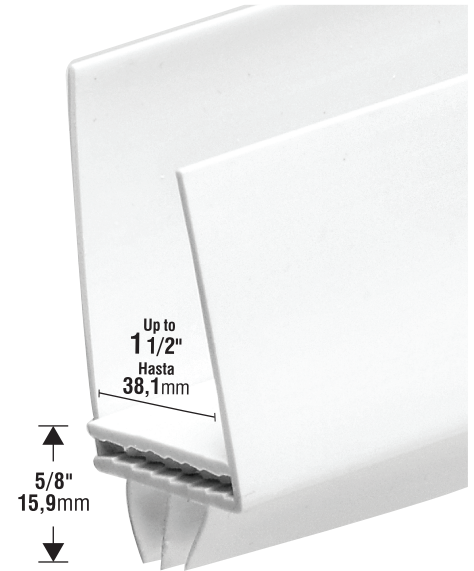

FONDO PARA PUERTA

Tapa de goteo "U"

Instalación:

1. Mida el ancho de la puerta.
2. Corte el fondo y la inserción de vinilo si es necesario.
3. Coloque lar. Encaje las piezas juntas a puerta de manera que la inserción descansa sobre el umbral.
Asegúrese que los agujeros queden en la parte exterior.
4. Ajuste de manera que las tiras descansen sobre el umbral.
6. Marque los agujeros, taladre y atornille en su lugar.

TOOLS NEEDED:
HERRAMIENTAS NECESARIAS:



Follow Us @FrostKing
or www.frostking.com



Thermwell Products Co., Inc.
Mahwah NJ 07430 | Sparks NV 89431

Need help or information
about any Frost King product?
Call **1-877-FROST 20**
3 7 6 7 8

For videos, instructions, hints and tips
visit www.frostking.com/instructions