


INSTRUCTION MANUAL

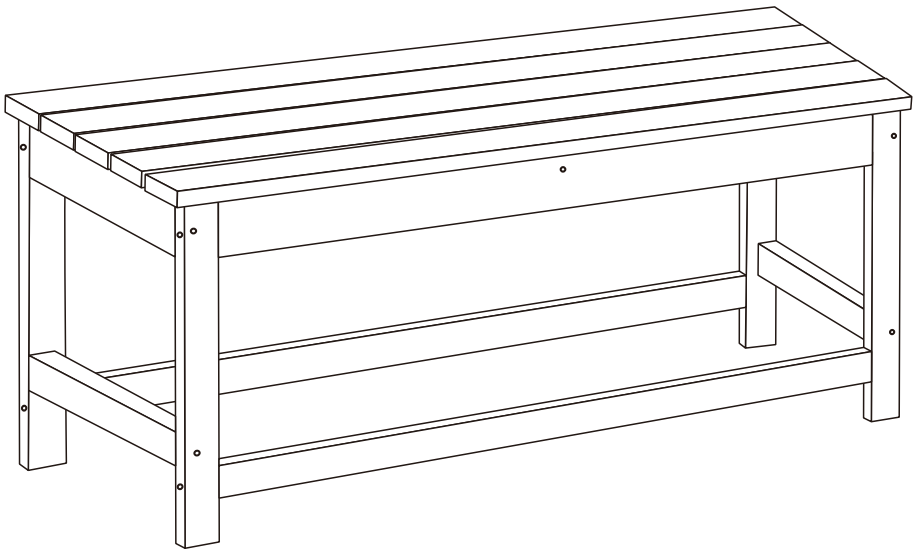

Outdoor Poly Adirondack Coffee Table
SKU: 2001-CT


V1.0

! NOTICE

Do not overtighten screws. (Insert all screws before tighten screws.)

- Please do not exceed the weight limitations of this item.
- Do not stand on or use any part of this item as a step ladder.
- Firmly secure all bolts, screws and nuts before use.
- Reconfirm that all bolts, screws, and nuts are secure every 90 days.
- Do not use or store this item in the proximity of open flame or flammable/combustible chemicals.
- Avoid using strong power tool for avoiding to crack the PE board when assembling.

TOOLS REQUIRED

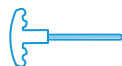

ALLEN WRENCH
(PROVIDED)



TABLE
220 LBS
CAPACITY



1 PERSON
ASSEMBLY




UP TO 20 MIN.
ASSEMBLY

HARDWARE

1

M6x50mm
BOLT



16 PCS

2

ALLEN
WRENCH




1 PC

PARTS

A


TABLE TOP



1 PC

B

TABLE LEG

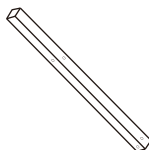

4 PCS

C


SHORT
WOODEN BRACE



2 PCS

D

LONG
WOODEN BRACE

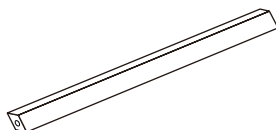

2 PCS


PRODUCT ASSEMBLY

1

Attach part C Short Wooden Brace to 2pcs of part B Table Leg with 2 PCS of hardware 1 Bolt.


Do the same to assemble another table legs.

Do not tighten bolts too much at this stage.

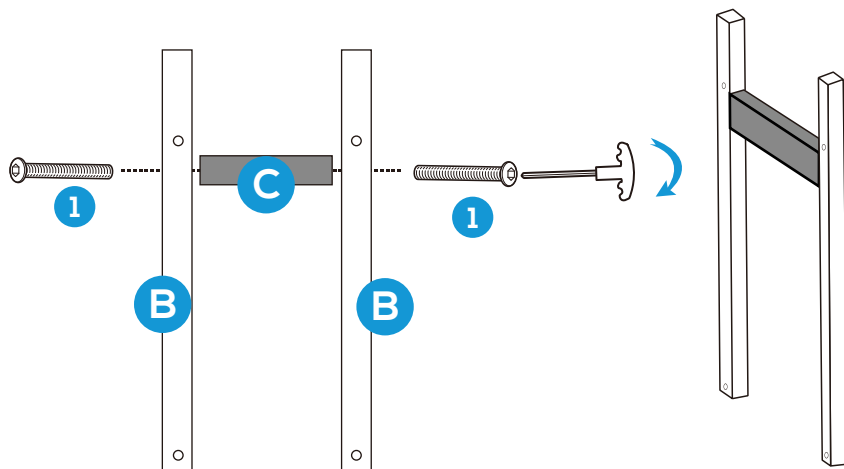

2


Attach Combined Leg (B+C) to part A Table Top with 4 PCS of hardware 1 Bolt.

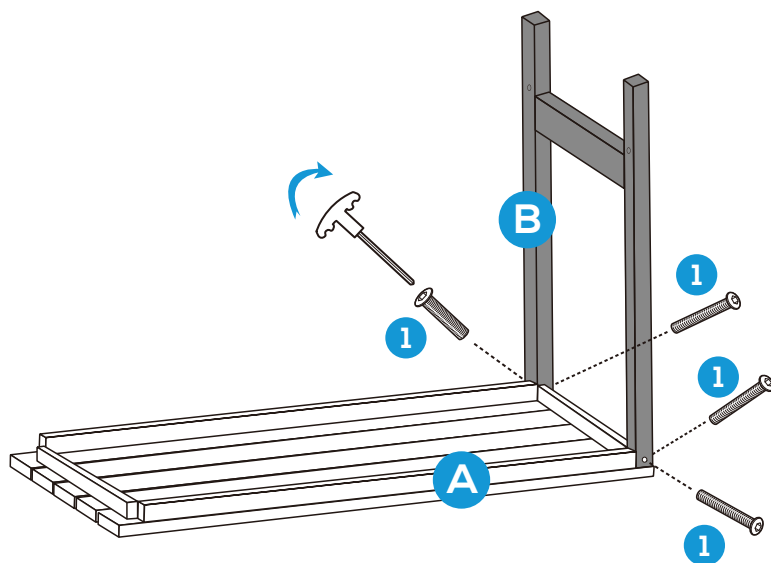

PRODUCT ASSEMBLY


3

Attach part D Long Wooden Braces to Combined Leg (B+C) with 2 PCS of hardware 1 bolt.

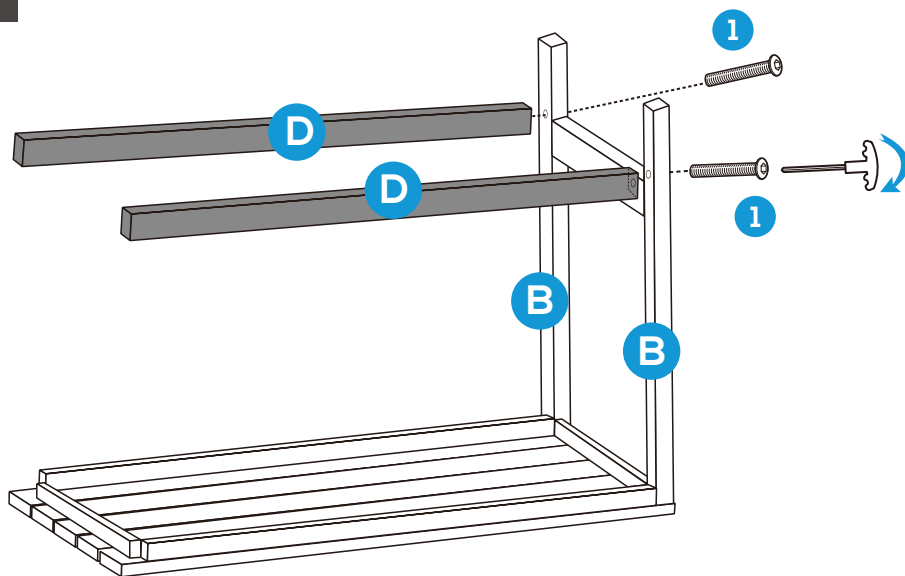

4

Attach another Combined Leg (B+C) to part A Table Top and part D Long Wooden brace with 6 PCS of hardware 1 bolt.

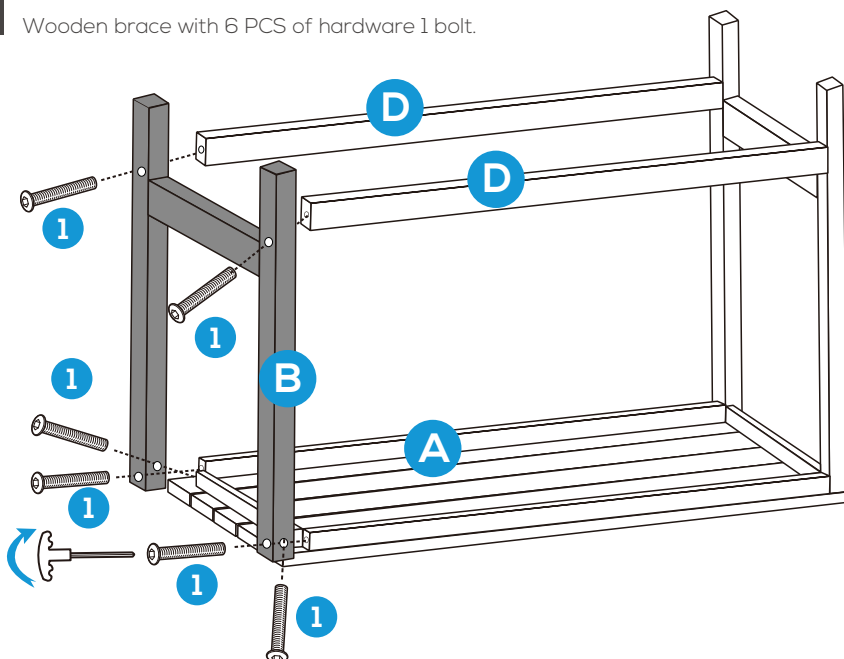

PRODUCT ASSEMBLY

5

Tighten all the bolts again to ensure the steady of this table.

Thanks for purchasing and enjoy it now.

